

## STEP 1: INSTALL BRACKETS

### CEILING OR TOP MOUNT

Depending on the size of track you received, you will have received a small or a large swivel bracket. [figures 3 & 4]

For a ceiling or top mount, you will mount this swivel bracket directly to the mounting surface.

1. Measure 4 inches in from each end of the window and ensure you have the following clearance from the window or from any protruding window hardware:


**Small bracket:** 1 1/4" from the hole of the bracket.

**Large bracket:** 2" from the hole of the bracket.


2. Make a pencil mark through the hole in the center of the bracket.
3. Space any additional brackets evenly between the two end brackets.
4. Drill holes through the pencil marks and using the correct anchors for your mounting surface, attach the brackets to the mounting surface. The arm of the bracket should face into the room and to the right as in the picture above.
5. When all the brackets are installed, place the track against the bracket and rotate the swivel by pushing the front arm back and to the left, until only the front lip of the bracket is visible. Check that the bracket has fully secured the headrail. Repeat with all brackets. [figure 5]



[figure 3]  
SMALL BRACKET

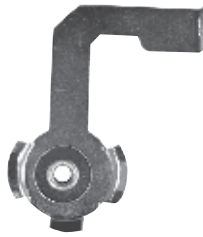

[figure 4]  
LARGE BRACKET

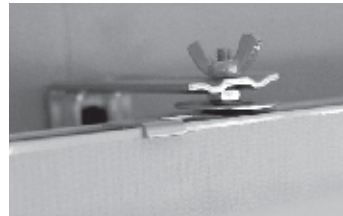

[figure 5]

### WALL OR FACE MOUNT

For this kind of installation you will use an L bracket to attach the swivel bracket to the wall.

1. Attach the swivel brackets to the L bracket using the screw and nut provided. [figure 6]
2. Mark with a pencil the desired height of the L bracket, based on the length of shade you ordered. Then measure in 4" from the ends of the headrail. Secure the L brackets to the wall with the screws provided and using the correct anchors for your mounting surface.
3. Space any additional L brackets evenly between the two end brackets. Use a level to make sure all brackets are level. Uneven brackets may stop the brackets engaging properly with the headrail.



[figure 6]

## WALL OR FACE MOUNT continued

4. Ensure the swivel brackets are in the correct, open position (see item 4 in Ceiling Mount).
5. Place track against the brackets and rotate the swivel to the closed position (see item 5 in Ceiling Mount). Check that the headrail is securely held by all brackets.

## STEP 2: ATTACH PANELS (AND VALANCE)

Secure the panels to the hangers with the velcro provided. Take care to position the panels so that the velcro engages fully and make sure the panel is level. Repeat with all panels. [figure 7]

If a valance has been ordered, attach the valance and any returns to the front and the sides of the track, using the velcro provided.



[figure 7]

## STEP 3: ATTACH THE CORD TENSIONER

Loose and dangling cords can provide a strangulation hazard for young children and pets. Your shade has been provided with a cord tensioner, which must be secured to the wall, to allow safe operation of the shade.

Locate the tensioner as close to the shade as possible and mount the tensioner to the wall using the screws provided and making sure that the cord is under tension, but still able to move freely.



## Window Blind Cord Can STRANGLE Your Child

- Children can strangle in the loop above the cord bead.
- Children can climb furniture to reach cords.
- Move crib and furniture away.
- Shorten cords to prevent reach.
- Keep cords separate – Twisted or knotted cords can create a loop.
- Keep all cords out of children's reach.

