



Timber Care Guide

Timber Care Guide

Every piece of Acorn furniture is handcrafted in our Motueka factory. All of our materials sourced with longevity in mind and with careful care and maintenance your timber furniture will last well into the future.

For more information about cleaning your timber furniture, contact Acorn Furniture: hello@acornfurniture.co.nz or 0800 601 701

- 01 Avoid long exposure to direct sunlight as this may affect the quality lacquer finish
- 02 Avoid extreme temperatures. Keep furniture away from direct heaters, air conditioning units and fireplaces. Intensive heat can cause the timber to distort.
- 03 To give your furniture a general clean, wipe surfaces with a damp cloth (not wet). Wipe dry in the direction of the grain, using a microfibre cloth.
- 04 Avoid writing on paper directly on top of polished surfaces as indentations may become evident.
- 05 Lift objects, do not drag across surfaces, as this may scratch the lacquer finish.
- 06 To rejuvenate the finish, use Mirotone Spray Glow (a blend of colourless waxes to preserve and protect the furniture) - you can purchase more of this from Acorn Furniture
- 07 Lift furniture to reposition, do not drag, as this can weaken the joints.
- 08 Protect polished surfaces from crockery, heat, moisture and other objects by using placemats or similar.
- 09 Do not leave liquids on the surfaces as this will cause the lacquer to discolour, lift and fail over time.

