

T2 – DL2700 Programming - Cheat Sheet

Factory Code = 12345

1. *Change Factory code to the new Master code. (Must be 3-5 digits in length.)*

1 2 3 4 5	A _L	1	A _L		A _L	
-----------	----------------	---	----------------	--	----------------	--

(Enter Master Code) (Re Enter Master Code)

2. *Create Manager Code (Code length must be the same as the master code)*

Master Code	A _L	2	A _L	
-------------	----------------	---	----------------	--

(Enter Manager Code)

3. *Add User Code(s) (Code length must be the same as the master code)*

Bank 1

User 1	Master or Manager code	A _L	11	A _L	
User 2	Master or Manager code	A _L	12	A _L	
User 3	Master or Manager code	A _L	13	A _L	
User 4	Master or Manager code	A _L	14	A _L	
User 5	Master or Manager code	A _L	15	A _L	

(Enter User Code)

Bank 2

User 1	Master or Manager code	A _L	21	A _L	
User 2	Master or Manager code	A _L	22	A _L	
User 3	Master or Manager code	A _L	23	A _L	
User 4	Master or Manager code	A _L	24	A _L	
User 5	Master or Manager code	A _L	25	A _L	

(Enter User Code)

Bank 3

User 1	Master or Manager code	A _L	31	A _L	
User 2	Master or Manager code	A _L	32	A _L	
User 3	Master or Manager code	A _L	33	A _L	
User 4	Master or Manager code	A _L	34	A _L	
User 5	Master or Manager code	A _L	35	A _L	

(Enter User Code)

4. *1 Time Code (Replaces Bank 3 User 5)*
- | | | | | |
|------------------------|----------------|---|----------------|--|
| Master or Manager code | A _L | 3 | A _L | |
|------------------------|----------------|---|----------------|--|
- (Enter User Code)

5. *Passage Mode*
- | | | | | |
|-------------|----------------|---|----------------|--|
| Master Code | A _L | 4 | A _L | |
|-------------|----------------|---|----------------|--|

6. *Re-Lock*
- | | | | | |
|-------------|----------------|---|----------------|--|
| Master Code | A _L | 5 | A _L | |
|-------------|----------------|---|----------------|--|

7. *Disable Banks*
- | | | | | | |
|--------|------------------------|----------------|----|----------------|--|
| Bank 1 | Master or Manager code | A _L | 51 | A _L | |
| Bank 2 | Master or Manager code | A _L | 52 | A _L | |
| Bank 3 | Master or Manager code | A _L | 53 | A _L | |

8. *Re-Enable Banks*
- | | | | | | |
|--------|------------------------|----------------|----|----------------|--|
| Bank 1 | Master or Manager code | A _L | 41 | A _L | |
| Bank 2 | Master or Manager code | A _L | 42 | A _L | |
| Bank 3 | Master or Manager code | A _L | 43 | A _L | |

9. *Disable/Re-Enable Individual User(s)*
- | | | | | | |
|------------------------|----------------|--|--|----------------|--|
| Master or Manager code | A _L | | | A _L | |
|------------------------|----------------|--|--|----------------|--|
- (Bank #) (User #)