



Once You get an OCTOKEY to turn in and remove the lock to get the code.

- 1. Start with the DOOR/IGNITION set. Try each Octokey in the door lock until you find one that turns both directions. DO NOT force the Octokey. (Take note of any Octokey that turned in only one direction.) Once you find a key that turns in BOTH directions take note of the OCTOKEY number. (IF you do not find an OCTOKEY that turned in both directions use the OCTOKEY(s) that only turned in one direction.)
- 2. To determine the number use the SIDE KEY. Insert the side key and take note of the X stamped on the blade. Remove key and insert so the "X" is now on the other side. The side of the lock where the "X" was furthest from the face of the lock is the OCTOKEY number you want to use.
- 3. Use the cart below. In the igntion the NUMBER will face away from you when you use the keys. Use a small pair of vise grips and use a quick snap turn twice. DO NOT force the key.

TRY IN IGNTION KEY #
2,10,18,26
35, 43, 51 ,59
68, 72 ,80, 88
69, 77 ,85, 93
102, 110, 118, 126
103, 111, 119, 127
8, 16, 24, 32
41, 49, 57, 65
34, 42, 50, 58
67, 75, 83, 91
68, 76, 84, 92
101, 109, 117, 125
102, 110, 118, 126
7, 15, 23, 31
40,48,56,64
9,17,25,33
66,74,82,90
67,75,83,91
100,108,116,124
101,109,117,125
6,14,22,30
39,47,55,63
8,16,24,32
41,49,57,65
66,74,82,90
99.107,115,123
100,108,116,124
5,13,21,29
38,46,54,62
7,15,23,31
40,48,56,64
73,81,89,97

KEY#	TRY IN IGNTION KEY #	
34	98,106,114,122	
35	99.107,115,123	
36	4,12,20,28	
37	37,45,53,61	
38	6,14,22,30	
39	39,47,55,63	
40	72,80,88,96	
41	73,81,89,97	
42	98,106,114,122	
43	3,11,19,27	
44	36,44,52,60	
45	5,13,21,29	
46	38,46,54,62	
47	71,79,87,95	
48	72,80,88,96	
49	105,113,121,129	
50	2,10,18,26	
51	35,43,51,59	
52	4,12,20,28	
53	37,45,53,61	
54	70,78,86,94	
55	71,79,87,95	
56	104,112,120,128	
57	105,113,121,129	
58	34,42,50,58	
59	3,11,19,27	
60	36,44,52,60	
61	69,77,85,93	
62	70,78,86,94	
63	103,111,119,127	
64	104,112,120,128	
65	9,17,25,33 Copyright 2020 Thomas Tusing	
55576 22235		