PenLoader Application List

| REFLASHING | | | | | | | |
|------------|------------|-----------|--------------------------------|-----|--------------|--|--|
| MAKE | MODEL | YEARS | ECU LOCATION | RED | BLUE | | |
| Acura | NSX | 1997-2004 | Attached to Steering Column | | \checkmark | | |
| | RL | 1997-2002 | Attached to Steering Column | | \checkmark | | |
| Honda | Prelude | 1996-2004 | Attached to Steering Column | | \checkmark | | |
| | ES300 | 1998-2003 | Behind Glove Box | | \checkmark | | |
| | ES330 | 2004 | Behind Glove Box | | | | |
| | GS300 | 1998-2004 | Under Hood (Driver's Side) | | 1998-2003 | | |
| | GS400 | 1998-2000 | Under Hood (Driver's Side) | | \checkmark | | |
| | GS430 | 2001-2003 | Under Hood (Driver's Side) | | \checkmark | | |
| | GX470 | 2003-2004 | Behind Instrument Cluster | | | | |
| | IS300 | 2001-2003 | Under Hood (Driver's Side) | | \checkmark | | |
| Lexus | LS400 | 1997 | Behind Glove Box | | Exp Board | | |
| Lexus | LS400 | 1998-2000 | Behind Glove Box | | \checkmark | | |
| | LS430 | 2001-2004 | Above Navigation System | | | | |
| | LX470 | 1998-2004 | Behind Glove Box | | 2001-2002 | | |
| | RX300 | 1999-2003 | Behind Glove Box | | \checkmark | | |
| | RX330 | 2004 | Above Center Dash | | | | |
| | SC300 | 1998-2000 | Below Glove Box (Under Carpet) | | \checkmark | | |
| | SC400 | 1998-2000 | Below Glove Box (Under Carpet) | | \checkmark | | |
| | SC430 | 2002-2003 | Behind Instrument Cluster | | | | |
| Saab | 93 | 2003-2009 | Behind Glove Box | | Exp Board | | |
| Toyota | 4-Runner | 1998-2004 | Behind Glove Box | | 1998-2002 | | |
| | Avalon | 1998-2003 | Behind Glove Box | | \checkmark | | |
| | Camry | 1998-2009 | Behind Glove Box | | \checkmark | | |
| | FJ Cruiser | | | | Exp Board | | |
| | Highlander | 2001-2003 | Behind Glove Box | | \checkmark | | |

PenLoader Application List

| REFLASHING | | | | | | | |
|--|--------------|-----------|---|-----|--------------|--|--|
| MAKE | MODEL | YEARS | ECU LOCATION | RED | BLUE | | |
| Toyota | Landcruiser | 1998-2004 | Behind Glove Box | | 1998-2002 | | |
| | MR2 | 2001-2003 | Behind Glove Box | | \checkmark | | |
| | Prius | 2001-2004 | Under Dashboard (Above Column) | | 2001-2003 | | |
| | RAV4 | 2002-2003 | Behind Glove Box | | \checkmark | | |
| | Sequoia | 2001+ | Behind Glove Box, Behind Cluster (03+) | | \checkmark | | |
| | Sienna | 1998-2004 | Behind Glove Box, Above Center Dash (04+) | | 1998-2003 | | |
| | Solara | 1998-2004 | Behind Glove Box | | \checkmark | | |
| ADDITIONA | AL FUNCTIONS | | | | | | |
| DESCRIPTION | | | | | BLUE | | |
| Restore Last Reflashed File Saved to Backup Slot | | | | | \checkmark | | |
| Save Up to 4 Customer Files | | | | | Exp Board | | |
| Reflash Toyota/Lexus 16-Bit with Already Working Keys (requires pre-cloned key) | | | | | Exp Board | | |
| Extract and display existing key values from 16-bit Lexus/Toyota models | | | | | | | |
| Read PIN for all GM models using HU100-style remote head key | | | | | | | |
| Read PIN for Fiat models made for US market | | | | | | | |
| Read PIN for Saab models | | | | | | | |
| Read PIN from Dodge Caravan 20XX-20XX | | | | | | | |
| Read PIN from Jeep Liberty 2006 | | | | | | | |
| Read PIN from Nissan/Infiniti models between 2005-2008 | | | | | | | |
| Read PIN from Nissan/Infiniti models between 2009-2012 | | | | | | | |
| Read PIN from VW Beetle 2000+ | | | | | | | |
| Read PIN from Isuzu Axiom/Rodeo 2003-2005 | | | | | | | |
| Read PIN from all Type 1 Chryslers | | | | | | | |
| Read PIN from all Type 1 ChryslersImage: ChryslersRestore non-transponder file after accidentally reflashing a to non-transponder Toyota/Lexus model. Also can disable transponder system for Toyota Camry 2002-2005 (see user manual for specific years and models).Image: Chryslers model | | | | | Exp Board | | |

| ADDITIONAL FUNCTIONS | | |
|---|--|-----------|
| DESCRIPTION | | BLUE |
| Update Smart Key Proximity ID box when locked | | Exp Board |
| Replace data with all FF values (for testing) | | Exp Board |
| Replace data with all 00 values (for testing) | | Exp Board |
| Display PenLoader Serial Number & Power Level | | |
| Add Additional Files / Programs | | Exp Board |
| Update firmware via connection to PC | | |