
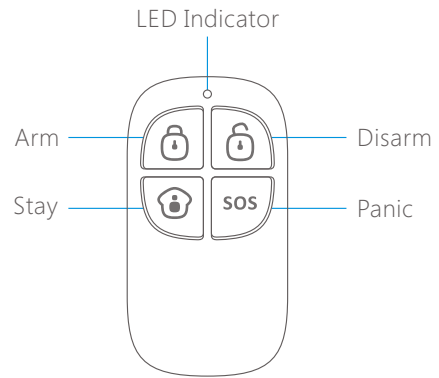


Appearance

Wireless Remote Control

RC-80

Operation Manual

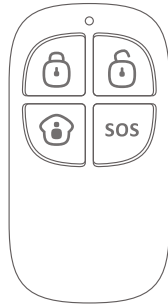

Features

The remote control enables you to turn the alarm system on and off before entering the home or after exiting. If there is an emergency, press SOS button on the remote control to trigger the panel. RC-80, compact and portable, is designed to fit on a keychain, in a pocket, or in a purse.

LED Indication

LED flashes once: sends the transmitting signal

Low light-level: Low battery, please replace the battery immediately.

Usage

Specifications

Power supply

DC 3V (CR2025 Lithium Battery x 1pc)

Alarm current

≤ 7mA

Transmitting distance

≤80m (in open area)

Radio frequency

315MHz or 433MHz (± 75KHz)

Housing material

ABS plastic

Operating Condition

temperature -10°C~50°C

Relative humidity ≤80%RH (non-condensing)

Dimensions (L x W x H)

58 x 31 x 9.5mm

	Arm	Press to arm the alarm panel and all of the accessories. (Away Mode)
	Disarm	Press to disarm the alarm system.
	Stay/ Home Mode	Press to arm all sensors except the ones in zone A or Home Mode Zone, sensors in zone A or Home Mode Zone will not activate an alarm.
	Panic	Press to activate a panic alarm and the control panel auto-dials the pre-set phone numbers immediately.
	Mute Arm	Press to arm the system in mute.
	Mute Disarm	Press to disarm the system in mute.