## Model



### **MAELSTROM**

MM-X





**POWER** 

Two CR123A batteries (up to 4.2 volts each)



OUTPUT

Maximum: 900 lumens Moonlight: 0.5 lumen



**RUNTIME** 

Maximum: 1.5 hours Moonlight: 25 days



**STROBE** 

Strobe, S.O.S and Beacon

flash modes

### OPERATOR'S MANUAL

## Warranty

FOURSEVENS warrants its products to be free from defects in materials and workmanship. We will repair or replace, at our option, without charge any product or part which is found to be defective under normal use and service within 120 months from the date of purchase with proof of purchase. Such repair or replacement shall be the purchaser's sole and exclusive remedy under this warranty. This warranty does not cover normal maintenance and service and does not apply to any products or parts which have been subject to modification, misuse, abuse, negligence, accident, or improper maintenance or repair by anyone other than FOURSEVENS.

> **Prometheus Lights** support@darksucks.com www.darksucks.com

# **Specifications**

Dimensions

Power Source

Length: 6.0 in Two CR123A or Two RCR123A Batteries

Diameter: 1.5 in Operating Range: 3.0~8.4 V

Weight: 5.1 oz

#### Typical Output and Runtimes

Mode	Output (out the front)	Runtime
Moonlight	0.5 lumen	25 days
Low	32 lumens	21 hours
Medium	250 lumens	3.7 hours
High	900 lumens *	1.5 hours
Strobe		1 hours
S.O.S.		4 hours
Beacon**		12 hours

<sup>\*\*</sup> Beacon mode first flashes 5 times, then once every 10 seconds.

Operation

The MM-X features a unique 4-point switch engagement in the head of the flashlight that lets you select the different outputs smoothly and silently by simply loosening or tightening the head. Every quarter-turn (approximately 90 degrees) of the head selects a different output. As you loosen or tighten the head, you change modes as follows:

OFF | Auxiliary 2 | Auxiliary 1 | Secondary | Primary |

The MM-X's 7 total modes of output are split into 2 sets, Regular and Special. The following are the modes in order from Auxiliary 2 to Primary (Loose → Tight):

Regular: Moonlight, Low, Medium, High

Special: Beacon, S.O.S., Strobe, High

As you can see, switching between the modes in a set is very simple - you just tighten or loosen the head to get to your

desired mode.

Switching between sets is also simple. Fully tighten the head of the flashlight so that you are in the Primary mode. Then, quickly loosen and tighten the head (switching between Secondary and Primary) 4 times to change to the alternative set of modes.

Notice: Custom molded holster shaped for the MM-X is included. This holster is designed as bezel down carry only to help retain the light even when flap is open.

<sup>\*</sup> BURST mode: First 1 minute output at max, then rampdown to 50% within next 30 seconds.