



FOURSEVENS

**MINI
Mk II**

Radically Small. Simply Brilliant.

OPERATOR'S MANUAL

Model

MINI Mk II

Radically Small. Simply Brilliant.



CR123A battery
(up to 3.0 Volts)

RCR123A battery
(up to 4.2 Volts)



High: 550~300 lumens
Moonlight: 0.8 lumens

High: 1020~300 lumens
Moonlight: 0.8 lumens



High: 15s + 87min
Moonlight: 19 days

High: 15s + 48min
Moonlight: 7 days



Strobe, S.O.S and
Beacon flash modes

Strobe, S.O.S and
Beacon flash modes

Operation

Operating your new Mini Mk II is simple. Make sure that the battery is inserted with the positive side (+) toward the head. To turn it on, tighten the bezel ('head') fully down. The Mini Mk II will turn on when the bezel is fully tightened, and turn off when the bezel is loosened.

Changing Configurations

The Mini Mark II is initially set to Configuration 6. To change the configuration, quickly twist the Mini Mk II on and off ten times within three seconds. The flashlight will then start to flash one to six times, corresponding to the configuration number (see chart). Quickly turn the light off and on by twisting the head to select the next configuration. Once your desired configuration is selected, turn the Mini Mk II off for five seconds to confirm the setting.

Configurations	
Configuration 1	High
Configuration 2	High – Low
Configuration 3	High – Strobe
Configuration 4	Low – Medium – High – Strobe
Configuration 5	Low – Medium – High – Strobe – SOS – Beacon (High) – Beacon (Low)
Configuration 6	Low – Medium – High – Moonlight

Charger

Using the FOURSEVENS Flex Charger

(Not included with all versions of the Mini Mk II)

To use the charger, insert the USB plug into any compatible USB port. Once you are plugged into a power source, attach the two magnetic charging contacts to the positive and negative terminals of your battery. The contacts are not specific to either the positive or negative terminals; just make sure that one contact is attached to each of the two battery terminals.

The light at the base of the cord will change color depending on the status:

Blinking Red: plugged in, but not currently charging a battery

Solid Red: charging is underway

Solid Green: charging is complete

WARNING: Do not use non-rechargeable batteries with the charger. Attempting to recharge non-rechargeable batteries can cause dangerous heat buildup and damage the battery, which may result in personal injury or damage to nearby devices.

FOURSEVENS brand rechargeable RCR123A batteries have a red band across the top. Our non-rechargeable, single use CR123A batteries have a blue band.

Specifications

Dimensions

Length: 2.17 in Diameter: 0.8 in

Weight: 0.62 oz(Only flashlight)

Color: Black

Voltage Range: 2.0 to 4.2V

Power Source

One CR123A / RCR123A Battery

Operating Range: 2.0V~4.2V

Typical Output and Runtimes

Output Mode	1600mAh 3V CR123A	550mAh 3.7V RCR123A
	Runtime	Runtime
High 1020 to 300 lumens	N / A	15s + 48min
High 550 to 300 lumens	15s + 87min	N / A
Medium 250 lumens	110 min	70 min
Low 20 lumens	29 hours	16 hours
Moonlight 0.8 lumens	19 days	7 days
Strobe	2.5 hours	1.5 hours
S.O.S	4 hours	3 hours
Beacon (High)	14 hours	8 hours
Beacon (Low)	18 hours	12 hours

Warranty

FOURSEVENS warrants its products to be free from defects in materials and workmanship. We will repair or replace, at our option, without charge, any product or part which is found to be defective under normal use and service within 120 months from the date of purchase with proof of purchase. Such repair or replacement shall be the purchaser's sole and exclusive remedy under this warranty. This warranty does not cover normal maintenance and service and does not apply to any products or parts which have been subject to modification, misuse, abuse, negligence, accident, or improper maintenance or repair by anyone other than FOURSEVENS. To initiate a warranty claim, please create an account with us at www.FOURSEVENS.com. Then email us at customerservice@4sevens.com with a brief description of your issue.

FOURSEVENS, LLC
678.608.0308
customerservice@4Sevens.com
www.FOURSEVENS.com