


KidsEmbrace[®]

Making Safety Fun

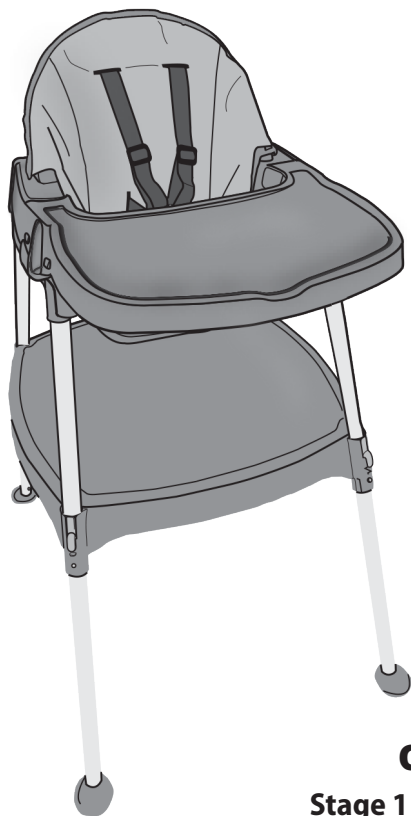

**KidsEmbrace
4-in-1
Eat & Grow
Convertible
High Chair
Owner's Manual**

Child Requirements

Stage 1

Max weight is: 40 lbs. (18.1 kg)

Max age is: 36 months

Stage 2 & 3

Max weight is: 50 lbs. (22.6 kg)

! WARNING!

Read and follow all instructions before using the KidsEmbrace Deluxe High Chair.

Table of Contents

Table of Contents	2
About Us	3
Registration and Recall Information	3
Parts List	4
Warranty	5
Warnings	6-7
High Chair Features	8
High Chair Stages	9
Assembly	
Chair Leg Assembly	10
Table Leg Assembly	10
High Chair Assembly	11
Chair Back Assembly	12
Five-point Harness Assembly	13
Tray Assembly	14
Harness Operation	15
Stages 1 & 2	16
Stages 3 & 4	17
Other	
Maintenance	18
Cleaning	18
Warranty	18
Registration	18
Notes	19

About Us

About Us

Welcome to the KidsEmbrace family and thank you for purchasing your new KidsEmbrace 4-in-1 Eat & Grow Convertible High Chair. Please make sure to carefully read through all the information in this Instruction Manual to properly use your new Deluxe 4-in-1 High Chair.

KidsEmbrace takes safety seriously and it is our #1 priority. Each product starts with a strict internal design evaluation to assure it is a premium product. Next, we begin the extensive government compliance testing program to assure it meets/exceeds all regulatory and internal standards. Only after the completion of this lengthy process we are proud to put the KidsEmbrace brand on the product along with the global brands of our key partners.

Thank you again for choosing KidsEmbrace and enjoy your new KidsEmbrace 4-in-1 Eat & Grow Convertible High Chair. If you have any questions or need assistance, please contact us at 1-866-947-3287.

Registration and Recall Information

Recall Information






High Chairs could be recalled for safety reasons. You must register this High Chair in order to be reached in a recall. Send your name, address, e-mail address if available, and the restraint's model number and manufacturing date to:

KidsEmbrace

6711 Odessa Ave
Van Nuys, CA 91406-5747

or call 1-866-947-3887 or register online at
<http://www.KidsEmbrace.com/product-registration>

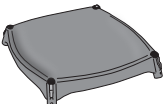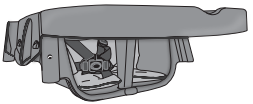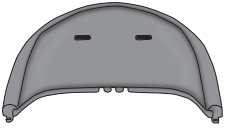Parts List

Item	Name	Quantity	Picture
A	Table	1 pc	
C	Chair Base Assembly	1 pc	
D	Chair Back	1 pc	
E	Table Leg	4 pc	
F	Chair Leg	4 pc	

Warranty

KidsEmbrace warrants products to the original retail purchaser as follows:

Limited One Year Warranty

This product is warranted against defective materials or workmanship for one year from the date of original purchase. Proof of purchase is required. The exclusive remedy for this warranty is that KidsEmbrace will at its option; provide, repair, or offer replacement components for this product or refund the original purchase price of the product. KidsEmbrace reserves the right to discontinue or change fabrics, parts, products, or to make substitutions. To make a claim under this warranty, contact KidsEmbrace Consumer Services at 1-866-947-3287.

Warranty Limitations

This warranty does not include damage which arises from negligence, misuse, or use not in accordance with the product instructions. The use of non-KidsEmbrace covers, inserts, toys, accessories, or tightening devices is not approved by KidsEmbrace. Their use could take this KidsEmbrace 4-in-1 Eat & Grow Convertible High Chair out of compliance or negatively affect the performance. Their use automatically voids the KidsEmbrace warranty.

Warnings

WARNING!

Failure to follow all warnings and instructions may result in serious injury or death.

Your child's safety is important to us, so please follow the owner's manual and labels when using this product.

Please save the owner's manual for future use.


- **FALL HAZARD:** Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.
- **ALWAYS** use the restraints, and adjust to fit snugly.
- Tray is not designed to hold child in chair.
- Stay near and watch child during use. **NEVER** leave child unattended.
- **Adult assembly required.** Take precaution as the Kidsembrace 4-in-1 Eat & Grow Convertible High Chair contains small parts and sharp edges
- **Always ensure** that all components are correctly fitted and adjusted before use. To avoid the danger of suffocation, remove all plastic covers before using the high chair. Immediately destroy the plastic cover to keep it away from babies and children.
- **NEVER leave child unattended.** Always keep child in view while in high chair.
- **Prevent serious injury or death from falls or sliding out.**
- **Always** secure child in the restraint with the harness.
- **DO NOT adjust** the high chair with your child in it.
- **DO NOT force tray** against child.
- **ALWAYS** place the high chair on a horizontal, stable surface.
- **NEVER** place the high chair near stairs or steps. Do not move chair with child in it.

Warnings

WARNING!


- **DO NOT leave** the high chair near walls, curtains, or windows, where the child can become tangled, or where a child may be able to use its feet to push against the high chair.
- **DO NOT place** any heavy bags, packages, or other items on the high chair tray. They may damage the tray or cause the chair to tip over.
- **DO NOT use** the high chair if any part is broken, torn, or missing.
- **DO NOT use** the high chair for more than one child at a time and **DO NOT leave** other children playing unattended near the high chair.
- It is recommended that the high chair be used only by children capable of sitting upright unassisted.
- To avoid the risk of fire, never leave the high chair near sources of strong heat such as open fires, electric heaters, and gas stoves. If the chair is exposed to direct sunlight, wait for it to cool down before placing your child in it.
- **DO NOT** leave high chair in direct sunlight as the sun could fade the fabric.
- This high chair in Stage 1 is recommended for children up to 36 months old, or for children who weigh less than 40 pounds.
- This high chair in Stage 2 is recommended for children who weigh less than 50 pounds.
- This high chair in Stage 3 is recommended for children who are walking and who weigh less than 50 pounds.
- **DO NOT use** accessories, spare parts, and components other than those supplied by KidsEmbrace.
- **DO NOT** allow child to climb in or out of the high chair or on table.
- **DO NOT** place heavy items on the table.

High Chair Features

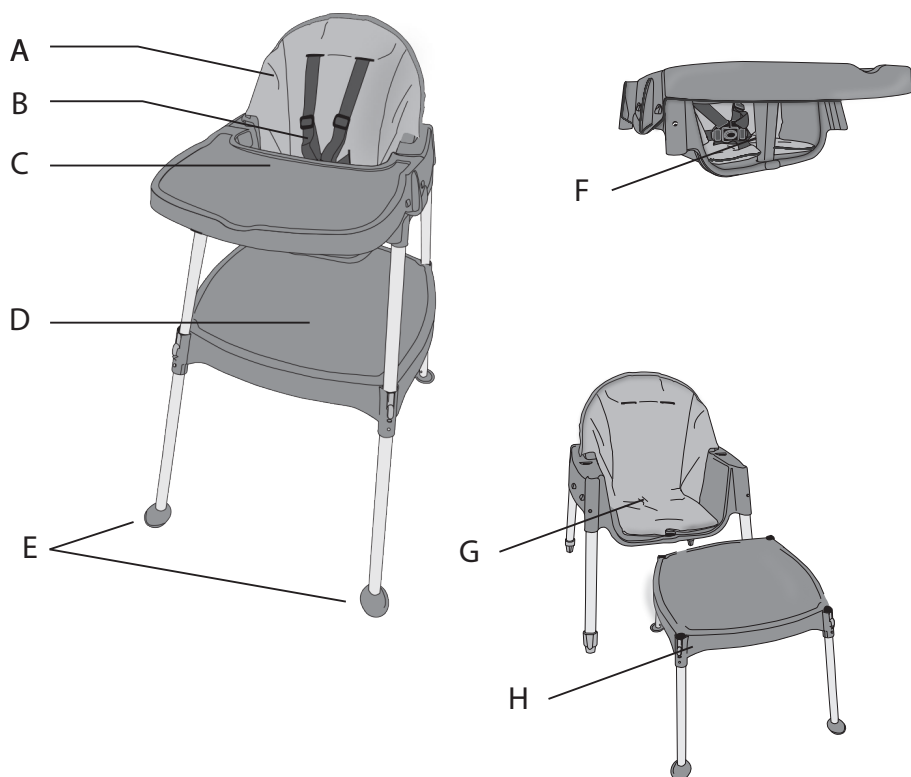

- A. Deluxe trim cover
- B. Five-point harness system
- C. Tray assembly
- D. Table assembly
- E. Anti skid table legs
- F. Crotch post
- G. Stand alone chair
- H. Stand alone table

High Chair Stages

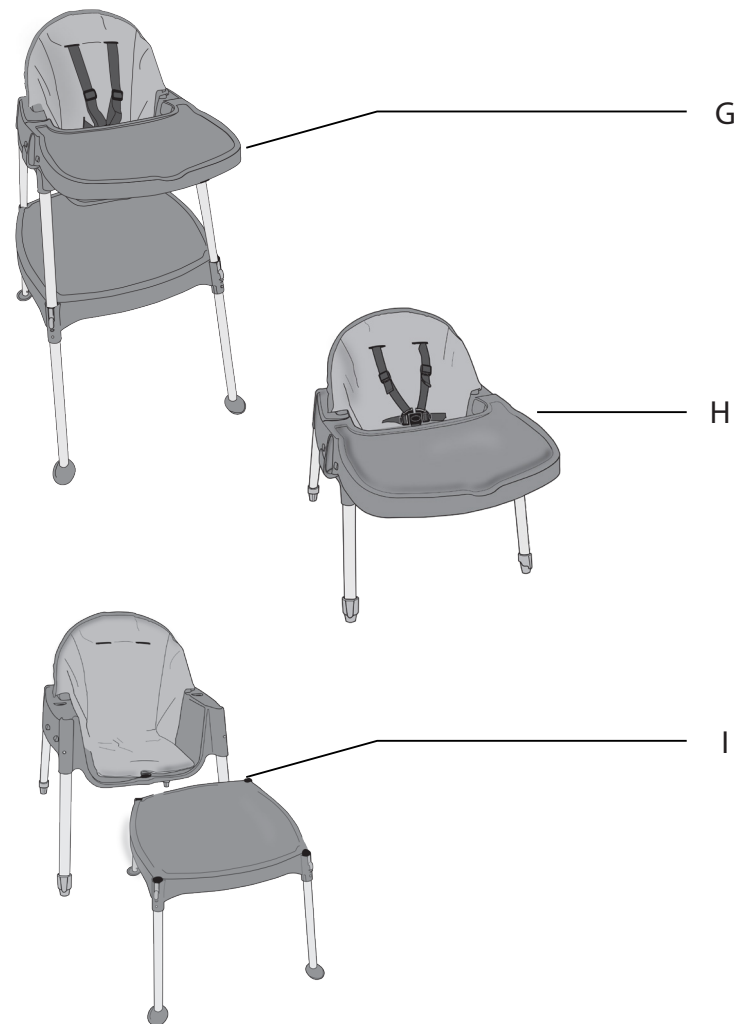

- G. Stage 1 - Up to 40 lbs
- H. Stage 2 - Up to 50 lbs
- I. Stage 3 - Up to 50 lbs & are walking

Chair Leg & Table Leg Assembly

1. Unpack all contents and please check that all parts are present before starting assembly. Please see **PARTS LIST** (pg 4). After checking all parts are present discard the packaging materials.

WARNING: Please make sure children are at a safe distance while you are opening the high chair.

2. Place the Chair base Assembly ① upside down and install a Chair leg ② until you hear an audible “click” (Fig 1). After hearing “click” you can pull on the Chair Leg ② to verify connected properly.

Repeat with other three Chair Legs ②.

3. Place the Table ③ upside down and install a Table Leg ④ until you hear an audible “click” (Fig 2). After hearing “click” you can pull on the Table Leg ④ to verify connected properly.

Repeat with other three Chair Legs ④.

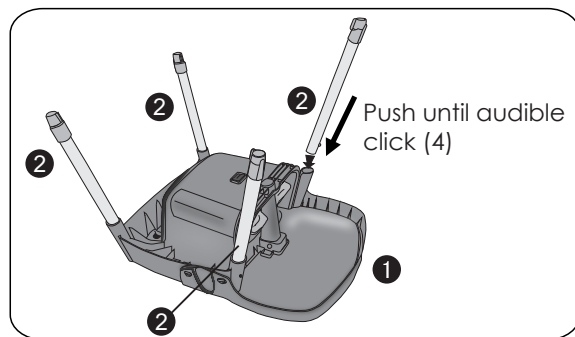


Figure 1

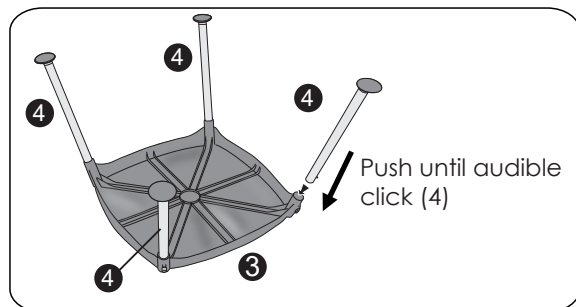


Figure 2

High Chair Assembly

WARNING: Please make sure children are at a safe distance while you are assembling or disassembling the high chair.

WARNING: The front of the Table Assembly ① and front of the Chair Base Assembly ② must align in order for them to be secured correctly.

Assemble High Chair

1. Place the Table Assembly ① so that the logo on the Table Assembly ① is facing towards you (Fig 3).
③
2. Install the four Chair Legs ③ into the top of the Table Assembly ①. Push the Chair Legs ③ in to the top of the Table Assembly ① until you hear and audible “click” (Fig 3).
3. After hearing “click” you can pull on the four Chair Legs ③ to verify connected properly.

Disassemble High Chair

- 1 Start with the front two Chair Base Legs, pull up on the front lock releases ④ and let sit. Then pull up on the rear lock releases ⑤ and then remove the Chair Base Assembly ⑥ from the Table Assembly ⑦ (Fig 4).



Figure 3

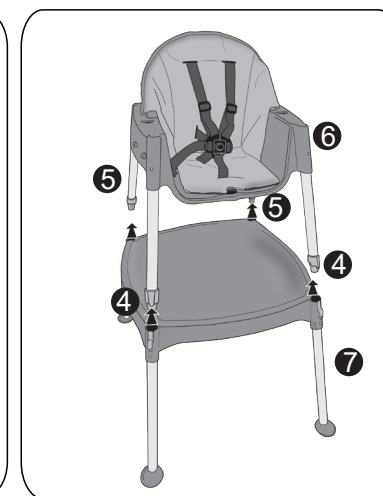


Figure 4

Chair Back Assembly

WARNING: Please make sure children are at a safe distance while you are opening the high chair.

WARNING: DO NOT force Chair Back tabs into the Chair Base Assembly arms.

1. Locate the Chair Back tabs **1** on the bottom of the Chair Back **2** (Fig 5). Insert the Chair Back tabs **1** into the Chair Base Assembly arms slots **3** of the Chair Base Assembly **4** (Fig 6). Push down until you hear an audible “click” (Fig 7). After hearing a “click” you can pull on the Chair Back **2** to verify connected properly (Fig 7).

2.

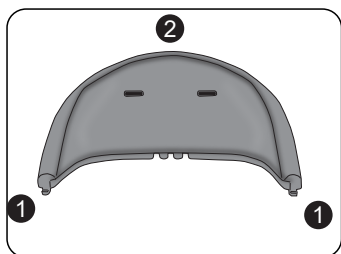


Figure 5

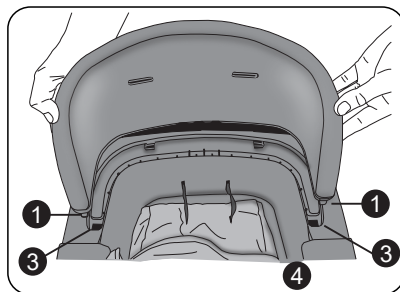


Figure 6

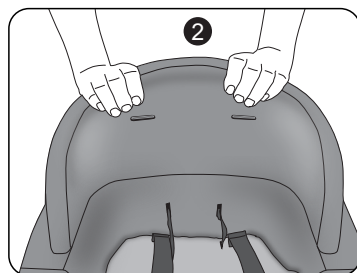


Figure 7

Five-point Harness Assembly

WARNING: DO NOT assemble Five-point Harness Assembly with child in seat.

Assemble Five-point Harness

1. Locate the five-point harness assembly anchors **1** and push each through the corresponding Chair Back slots **2** (Fig 8). Look on the back side of the Chair Back **3** to check five-point harness assembly anchors **4** are flat against the Chair Back **3** (Fig 9).

Note: After both five-point harness assembly anchors are in the slots, pull on each strap to make sure securely installed.

2. Place Deluxe Trim Cover **5** over the Chair Back **6** (Fig 10).

Disassemble Five-point Harness

1. From the Back of the Chair Back **7** Push both the five-point harness assembly anchors **8** through the corresponding slots in the Chair Back (Fig 11).
2. Then Push both the waist strap restraint anchors **9** through the corresponding slots (Fig 11). From underneath the Chair Base Assembly, push the center waist restraint strap anchor **10** up through the slot.

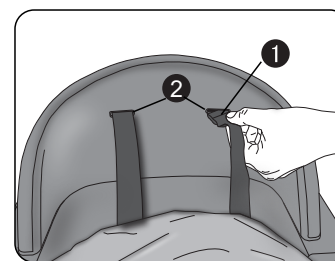


Figure 8

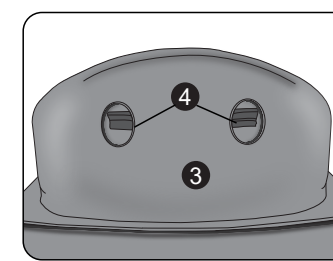


Figure 9



Figure 10

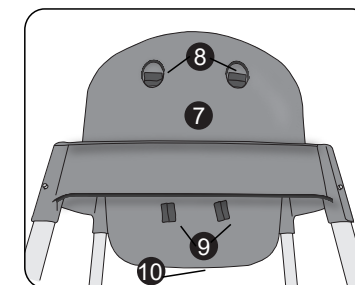


Figure 11

Tray Assembly

WARNING: DO NOT assemble tray with child in seat. **DO NOT** lean on tray.
WARNING: DO NOT force Tray onto Chair Base Assembly.

Install Tray

1. Locate the Tray tabs **1** on the Tray **2**. Insert the Tray tabs into the Chair Base Assembly slots **3** (Fig 12).
2. Rotate the Tray **4** down until the Tray slots **5** connect to the Chair Base Assembly tabs **6**. (Fig 13)
3. Make sure Crotch Post **7** is secure in the Chair Base Assembly pocket (Fig 14).
4. Check Chair Base Assembly Tabs are engaged and pull up on the Tray to check it is securely connected to the Chair Base Assembly (Fig 14).

Remove Tray

1. Pull out Tray flanges **8** on both sides of Tray while rotating tray up and then up from the Base Assembly slots (Fig 15).

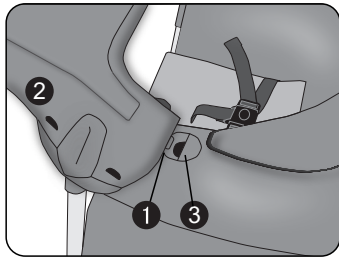


Figure 12

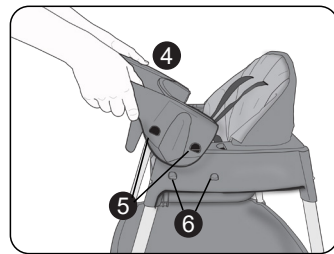


Figure 13

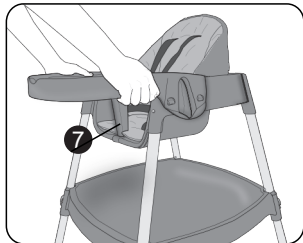


Figure 14

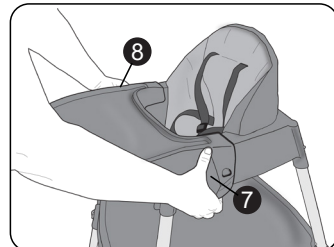


Figure 15

Five-point Harness Operation

WARNING:

• **Prevent Serious Injury or Death from falls or sliding out.** Always secure child with the safety harness. Never leave child unattended in the high chair. The tray and crotch post alone **DO NOT** guarantee the safety of your child. Always use the harness system

1. Installing Harness

With the Tray removed, place the harness straps **1** around the child's shoulders connecting the harness straps to the waist straps **2**. Place the crotch strap **3** between the child's legs. Insert the male end of the shoulder waist belt into the buckle on the crotch strap **4** (Fig 16).

Note: Harness can be shortened/lengthened using the adjusters **5** on all straps (Fig 16).

2. Install Tray

Refer to page 14

3. Releasing Harness

To release, apply pressure to center button **6** in middle to release both sides of the Harness **7** (Fig 17).

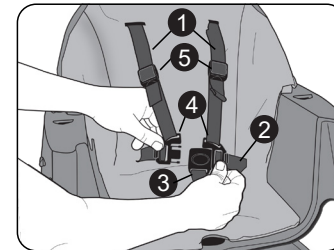


Figure 16

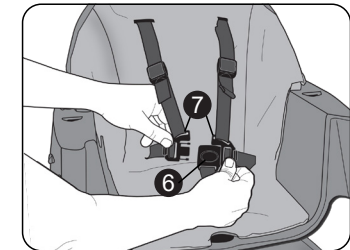


Figure 17

Stages

WARNING:

• **Prevent Serious Injury or Death from falls or sliding out.** Always secure child with the safety harness. Never leave child unattended in the high chair. The tray and crotch post alone **DO NOT** guarantee the safety of your child. Always use the harness system

1. Stage 1 - Infant High Chair

For children who are approximately 6 months old (MUST be capable of sitting upright and unassisted) and less than 40 lbs (Fig 18).

2. Stage 2 - Toddler Dining Chair & Tray

For children who weight less than 50 lbs (Fig 19).

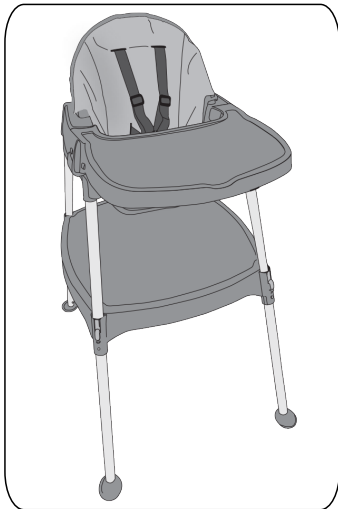


Figure 18

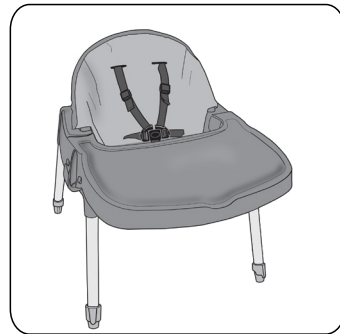


Figure 19

Stages

WARNING:

• **Prevent Serious Injury or Death from falls or sliding out.** Always secure child with the safety harness. Never leave child unattended in the high chair. The tray and crotch post alone **DO NOT** guarantee the safety of your child. Always use the harness system

1. Stage 3 - Toddler Stand alone Chair

For children who weight less than 50 lbs and are able to walk (Fig 20).

2. Stage 4 - Big Kid Table & Chair

For children who weight less than 50 lbs and are able to walk (Fig 21).



Figure 20

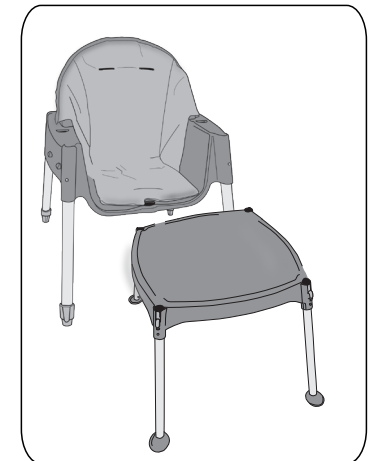


Figure 21

Other

1. **Maintenance**

Before using always check for worn parts, torn fabric, or stitching. Replace or repair the parts as needed. Use only KidsEmbrace replacement parts.

2. **Cleaning**

Use only household soap and warm water to clean the high chair including trim cover. Always dry plastic and metal parts.

DO NOT use bleach or detergent. **DO NOT** iron. **DO NOT** tumble dry. **DO NOT** dry clean.

3. **Limited One-Year Warranty**

This product is warranted against defective materials or workmanship for one year from the date of original purchase. Proof of purchase is required. The exclusive remedy for this warranty is that KidsEmbrace will at its option, provide repair or replacement components for this product or refund the original purchase price of the product. KidsEmbrace reserves the right to discontinue or change fabrics, parts, or products, or to make substitutions. To make a claim under this warranty, contact KidsEmbrace consumer services at 1-866-947-3287.

5. **Warranty Limitations**

This warranty does not include damages which arise from negligence, misuse or use not in accordance with the product instructions. The use of non-KidsEmbrace covers, inserts, toys, accessories, or tightening devices is not approved by KidsEmbrace. Their use could take this high chair out of compliance with ASTM F404 safety standard or negatively affect the performance. Their use automatically voids the KidsEmbrace warranty.

6. **Register**

To register your KidsEmbrace product visit us online at www.kidsembrace.com/product-registration or return the registration card provided with your high chair. We do not accept product registrations from those living outside the United States of America.

Notes

Keep this instruction manual for future use.

KidsEmbrace[®]

Making Safety Fun

KidsEmbrace, LLC
6711 Odessa Ave
Van Nuys, CA 91406

www.KidsEmbrace.com

Questions or comments?
Email: info@kidsembrace.com
Call: 1-866-947-3287