



X350

Quick Start Guide

Visit kaiserbaas.com for more information

OVERVIEW

**Before operating your X350
please ensure you have read
and understood the safety
precautions**

Please ensure you remove the plastic protection film from the front lens and back screen before using.

1

Remove the camera from the Waterproof case. Release latch to unlock casing.

2

 
Charge your X350

Connect your camera to a USB charger (not included) or computer using the included Micro USB cable. Whilst charging the red light will appear. Once fully charged it will turn off.

3

Insert your SD Card

Once your camera is fully charged, insert the Micro SD card (not supplied) into the SD card slot. We recommend using a Class UHS 1 and above Micro SD card up to 64GB for maximum performance.

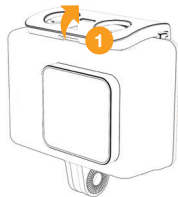

Note: Please ensure you format your SD card before you start filming with it for the first time.

 
Format your SD Card before using the camera for the first time

3

When the camera is turned on, press and hold the Record/OK button until the menu appears. Select the Settings mode using the Up/Down Arrow Buttons on the side of your camera and press the Record/OK button to confirm.

Press the Mode button and select the General Settings.

Scroll down the menu using the arrow keys on the side until you get to Format SD Card. Select Format SD Card and press the Record/OK button. Select Confirm to format your SD Card.

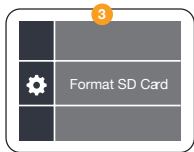

Using your Camera

1

To turn your camera on/off - hold the Power/Mode button on the top of your X350 for few seconds.

Press the Mode button to toggle between Video and Photo. To choose and access different modes - press and hold the Record/OK button, scroll down using the Up/Down Buttons to select the required Mode icon and press the Record/OK button to confirm.

Mode options include:

Video

Slow Motion

 
Loop Recording

Photo

Self Timer

Burst Mode

Time Lapse

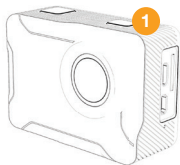

Using your Camera

3

To change the Video/Image resolution - press and hold the Record/OK button until the menu appears. Select the Settings mode using the Up/Down Buttons on the side. Once selected press the Record/OK button to confirm.

4

To start recording video, press the Record button on the top of your camera.



Reviewing your footage

5

To review footage, press and hold the Record/OK button, select the Playback Mode and press the Record/OK to confirm.

6

Scroll through the files using the Up/Down buttons on the side and press the Record/OK button to review footage.

7

Press and hold the Record/OK button to delete the selected file.

8

Press Mode button to exit the Playback mode.



Playback Screen



Connecting to the KB Capture App

 
1

Press and hold the Up arrow button at the side to activate the Wi-Fi.

2

Go to your Smartphone settings and ensure your Wi-Fi is turned on. Select KB X350 network. The default password is: 12345678. If your connection fails, please close down the App and relaunch it and restart the camera.

App Name: KB Capture

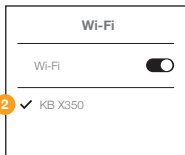

Scan these codes to access the KB-X230 App.

PRODUCT SPECIFICATIONS

07 - ENG

X350 Action Cam

13 Megapixels

Video Resolution Options

4K 30FPS Default

2.7K 30FPS

1080P 120/60FPS



Photo Resolution (Image Size)

16M, 13M, 8M, 5M, 2M

Storage

We recommend using a Class UHS 1 and above Micro SD card up to 64GB for maximum performance.

  Visit www.kaiserbaas.com/support or email helpdesk@kaiserbaas.com for support. For the complete user guide, visit www.kaiserbaas.com

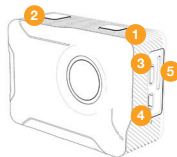

1. Power / Mode

2. Record/OK

3. Micro USB

4. Micro HDMI

5. Micro SD Slot

6. Up / Down Scroll
Buttons

7. Battery Latch

KB KAISER BAAS



@kaiserbaas

kaiserbaas.com

#KBdiscover #captureadventure