




1. Remove from CPU Hanger assembly from packaging.

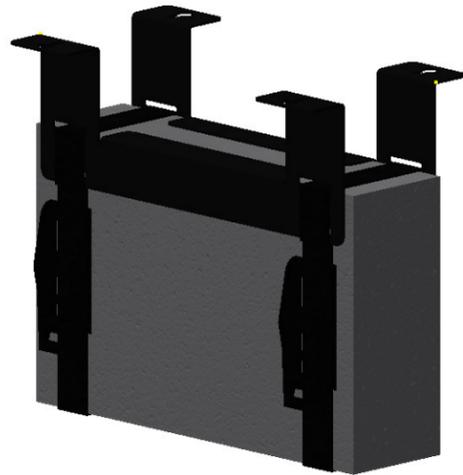

2. Release the tension from the buckles by fully opening each buckle.

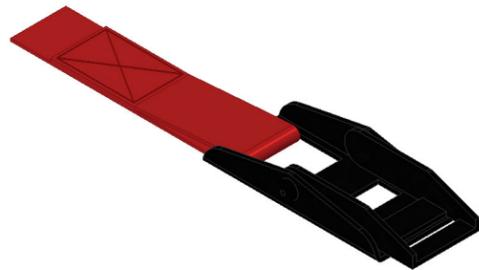


Open Position

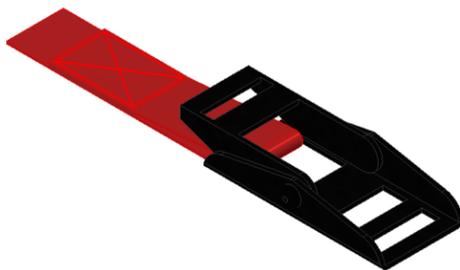

Closed Position


3. Loosen straps to fit over your CPU
(Do not unthread strap from buckle)

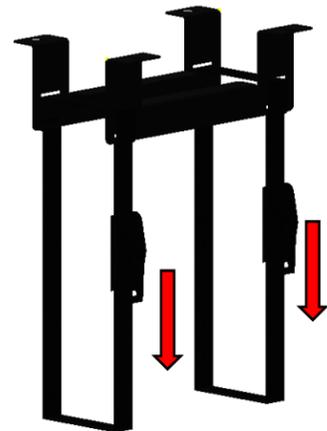

**With the buckle in the open position, pull the straps from below the buckle to loosen.*

4. Remove foam packaging block

5. Fit straps over CPU
(Verify both sides are aligned)


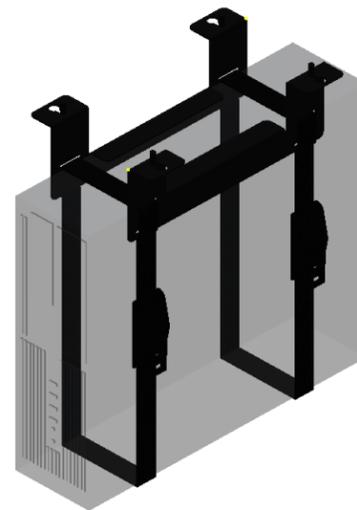


6. Pull strap to fit CPU snugly.

7. Close buckle. Straps should be tight, but not so tight as to damage CPU case.

8. Place CPU hanger assembly over the desired holes on whichever side of the table the CPU is to be located.



9. Install two of the provided #10 x 5/8" screws (see full scale image below) into the holes most closely located to the smaller slots in the CPU hanger. Leave a gap between the head of the screw and the work surface large enough for the CPU hanger to slide in place.

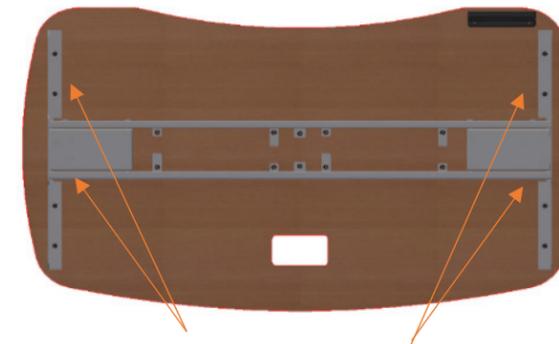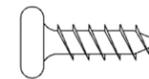

LEFT OR RIGHT MOUNTED CPU


****Steps 10 & 11 are to be done with the table in the upright position and lowest height.**

10. Install CPU hanger assembly over the screws. Place the larger part of the mounting slot over the head of the screw then slide the assembly over to position the head of the screw over the smaller part of the mounting slot.

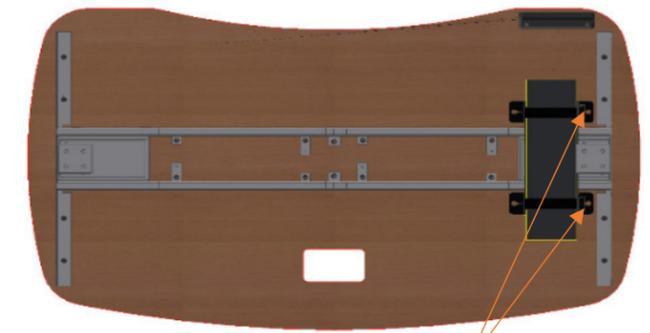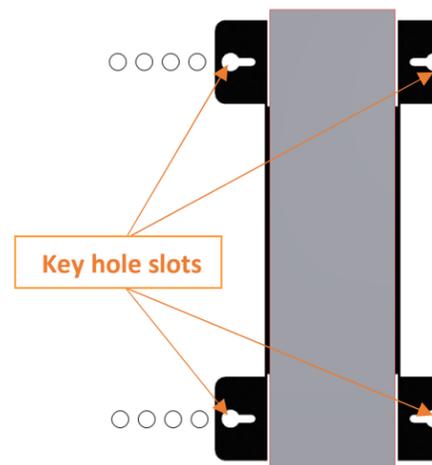

Key hole slots

11. Install the remaining two screws provided over the smaller part of the remaining two mounting slots as shown below. Use the closest pre-drilled holes in alignment with the keyhole slot.

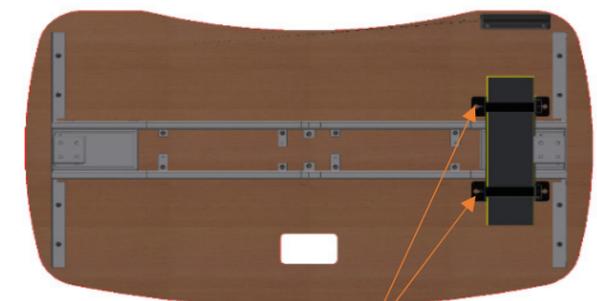


Key hole slots


12. Tighten all four screws installed to secure the CPU hangers in place.




1. Make sure the strap is not twisted at any point in the process of threading the strap through the buckle.
2. Insert the end of the strap through the outer slot of the buckle.

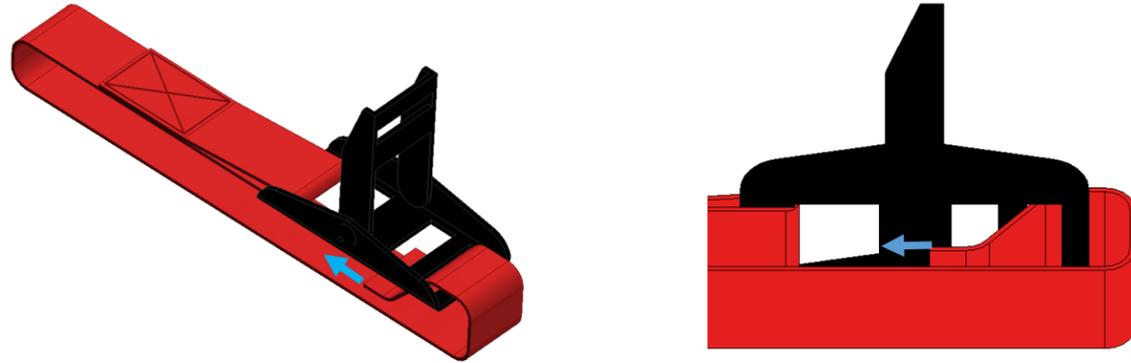

3. Feed the strap through the larger slot of the buckle on the opposite end.

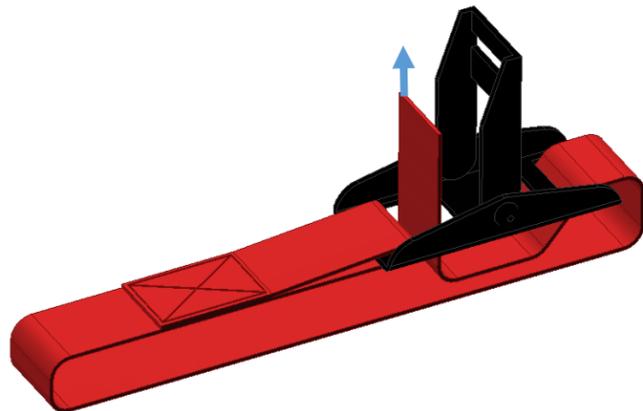


4. Insert the strap through the top slot of the handle.

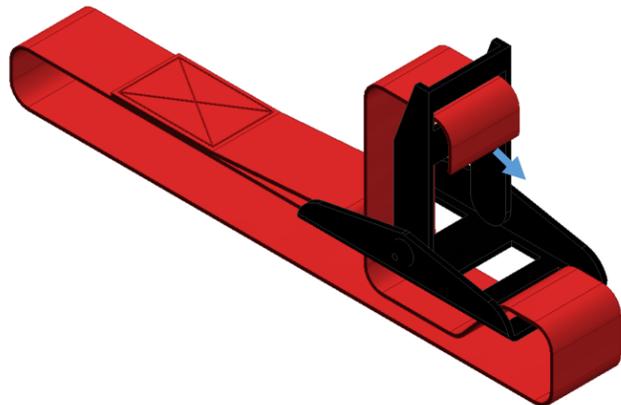


5. Feed the strap through the lower slot of the handle and back through the larger slot in the base of the strap.



6. Insert the strap through the inner slot of the base.

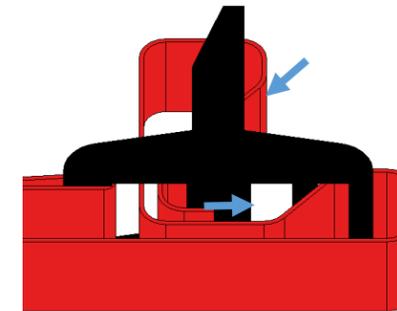

7. Pull the end of the strap to remove slack.

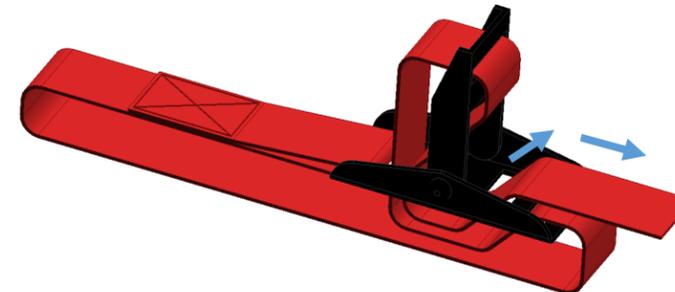

8. Close the buckle to tighten and lock.