 


## MojoDesk 2020 Hand Control

### Operation Instructions

## 1. Product Drawing

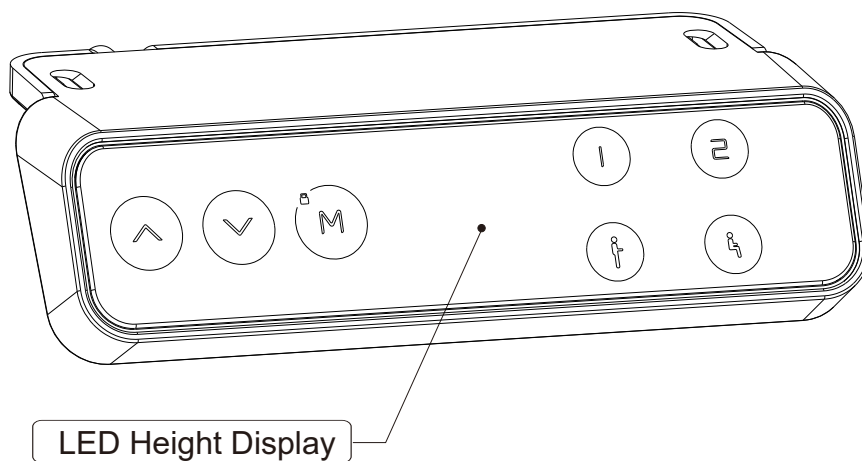

## 2. Button Functions

Button functions: There are seven buttons "▲", "▼", "1", "2", "人", "人", "M"

1. "▲" : Adjust the desk upwards
2. "▼" : Adjust the desk downwards
3. "1" : Position 1, first height position saved by the user
4. "2" : Position 2, second height position saved by the user
5. "人" : Position 3, the standing height saved by the user
6. "人" : Position 4, the seated height saved by the user
7. "M" : Memory saving button, for height memory function and Child lock: for security

### 3. Operating Instructions

- **Height Adjustment:**  
Press the "▲" or "▼" button to adjust the height. The LED display shows the current height.
- **Set Memory Positions:**
  - a. Press the "▲" or "▼" button to adjust to the desired height
  - b. Press and release "M" to enter memory setting mode and the screen will display "5-"
  - c. Press 1, 2, "f", or "h" to save the height to the corresponding position which will show in the display screen as "5-1", "5-2", or "5-3", or "5-4";
- **Move to Memory Positions:**  
Press and release the "1", "2", "f", or "h" button to automatically adjust to the saved position.
  
- **Anti-collision:** During height adjustment, if tabletop comes in contact with another object, it instantly stops and reverses to avoid damage.
  
- **Anti-collision sensitivity adjustment - optional:**  
Press and hold the "▲" "▼" buttons for 5 seconds at the same time to switch the sensitivity. Once the display shows "A-#" it has cycled to the next setting. Release buttons and repeat to cycle through settings.  
"A-0", the anti-collision function is off; "A-1", low sensitivity  
"A-2", medium sensitivity; "A-3", high sensitivity (default)
  
- **Child lock function:**
  - a. To engage or disengage child lock, press and hold the M button for about 5 seconds.
  - b. When child lock is turned on, a blue LED light activates above "▼" and M. Any button press creates a flash of the blue LED, a beep and LOC on the display
  - c. Only when the child lock is unlocked, will all the buttons work normally.
  
- **Troubleshooting:**
  - a. Reset: When the LED shows "RST", press "▼" button until the desk reaches its lowest height and rebounds to stop, the reset has been finished.
  - b. If LED shows "E01" or "E02", please retry 18 mins later, desk overuse.
  - c. If the "▼" button doesn't work, please check cable connections and then unplug power for at least 10 seconds. Reconnect power and press "▼" button to start the reset process when it shows the "RST".
  - d. Still not working?, please contact MojoDesk customer service 800-297-6656.

#### Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.