

#### Technical data

Column Stage	3
Max. Load Capacity	330.7lbs
Height range	22.8"-48.4"


#### Accessory list

If there are any tools missing or installation problems, please contact us at [info@mojodesk.com](mailto:info@mojodesk.com)

No.	Image	Spec	Qty
A		M6	6
B		M6	8
C		M6	16
D		M6	12
E		M8	4
F		S14.2	24
G		S14.2	6
H		Cable Tie	6
I		Allen Wrench 0.16"x0.16" Allen Wrench (with cross) 0.20"x0.20"	1

#### STEP 1


Install left and right connecting plates

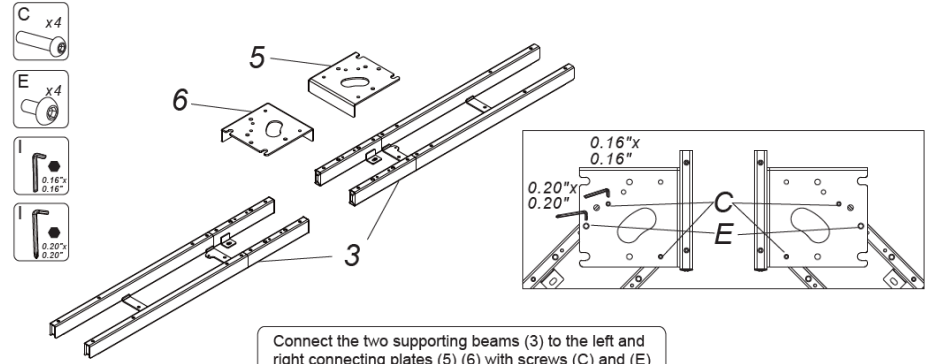

Connect the two supporting beams (3) to the left and right connecting plates (5) (6) with screws (C) and (E) respectively. There are three angles to choose , and finally tighten them with an allen wrench (I).

#### Component list


No.	Part	Qty	No.	Part	Qty
1	Pedestal	3	2	Lifting Column	3
No.	Part	Qty	No.	Part	Qty
3	Supporting Beam	2	4	Side Bracket	3
No.	Part	Qty	No.	Part	Qty
5	Left Connecting Plate	1	6	Right Connecting Plate	1
No.	Part	Qty	No.	Part	Qty
7	Control Box	1	8	Handset	1
No.	Part	Qty	No.	Part	Qty
9	Handset Screw	2	10	Switch Cord	1
No.	Part	Qty			
11	Power Plug	1			

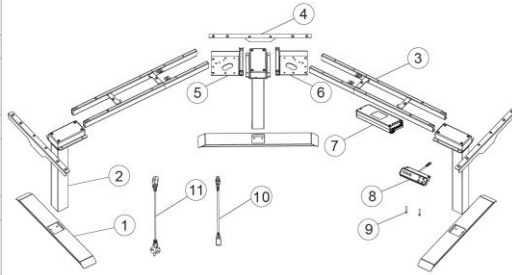

Note: There are three angles of installation for this type of desk, 90°, 120°, 180°

#### STEP 2

Install Feet

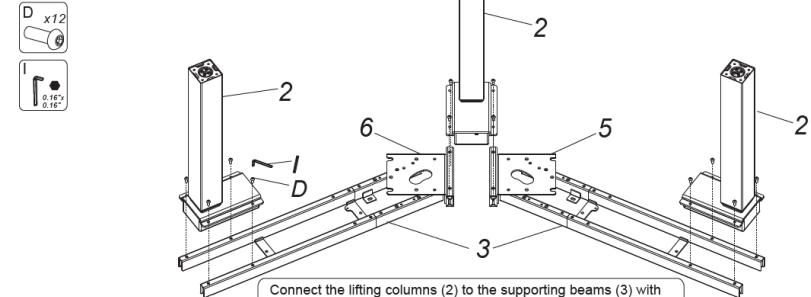


Connect the lifting columns (2) to the supporting beams (3) with screws (D), the middle column (2) to the left and right connecting plates (5) (6), and use an allen wrench (I) to tighten the screws; the installation methods of 90° and 180° placements are the same as 120°.

### STEP 3

Install Pedestals




90° & 120° Placement

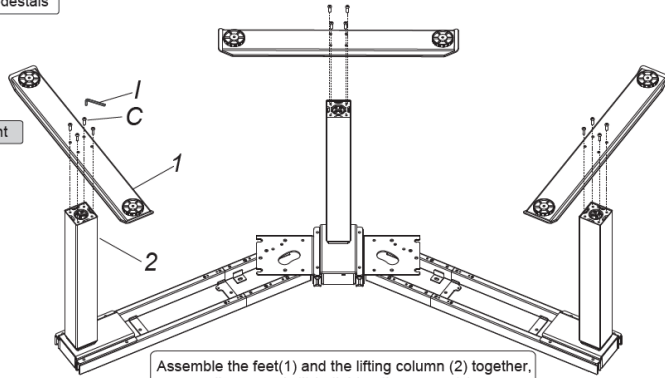

Assemble the feet (1) and the lifting column (2) together, use an allen wrench (I) to tighten the screws (c).


### STEP 4

Install Side Brackets

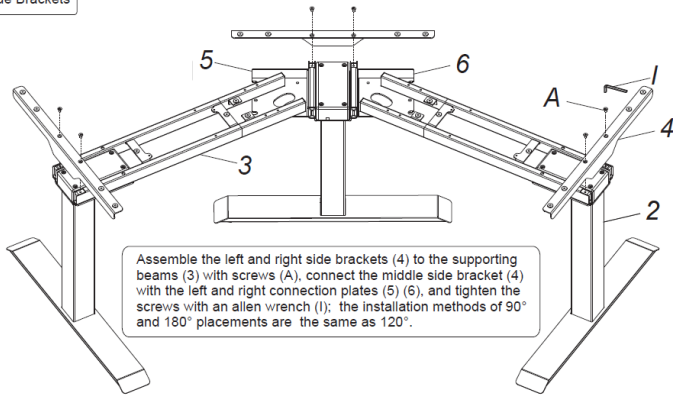

Assemble the left and right side brackets (4) to the supporting beams (3) with screws (A), connect the middle side bracket (4) with the left and right connection plates (5) (6), and tighten the screws with an allen wrench (I); the installation methods of 90° and 180° placements are the same as 120°.



### STEP 5

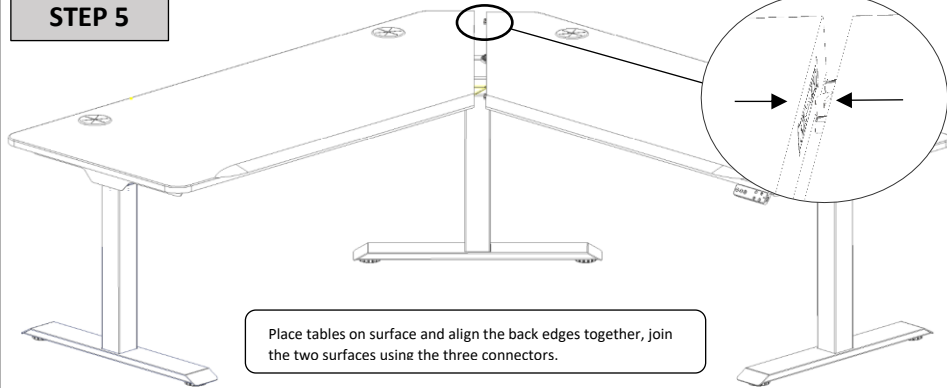

Place tables on surface and align the back edges together, join the two surfaces using the three connectors.


### STEP 6

NOTE: If tables are misaligned, repeat STEP 5 before completing STEP 6.

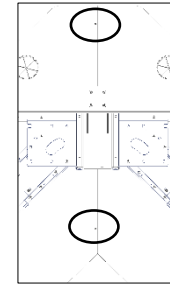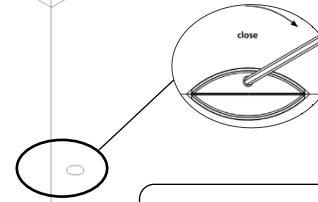


Lock the two tables together by inserting allen wrench (I) into the two holes located underneath the surface and turning clockwise until it clicks, and it cannot turn any further.


### STEP 7

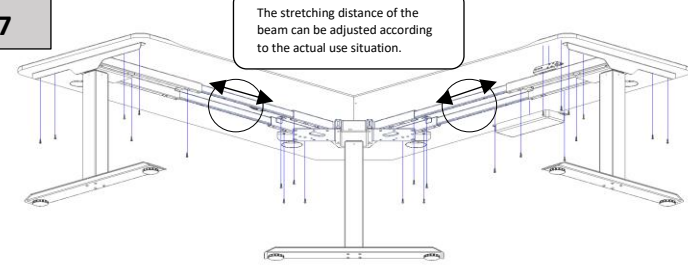

The stretching distance of the beam can be adjusted according to the actual use situation.


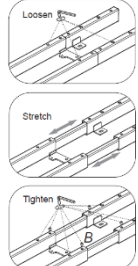


Install the table to the base with screws (F), the control box (7) to the table with screws (F) and the hand control with screws (9). You will want to install hand control and control box on the same side.

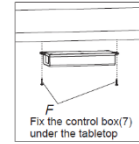

### STEP 8

 Wire all cables to Control Box

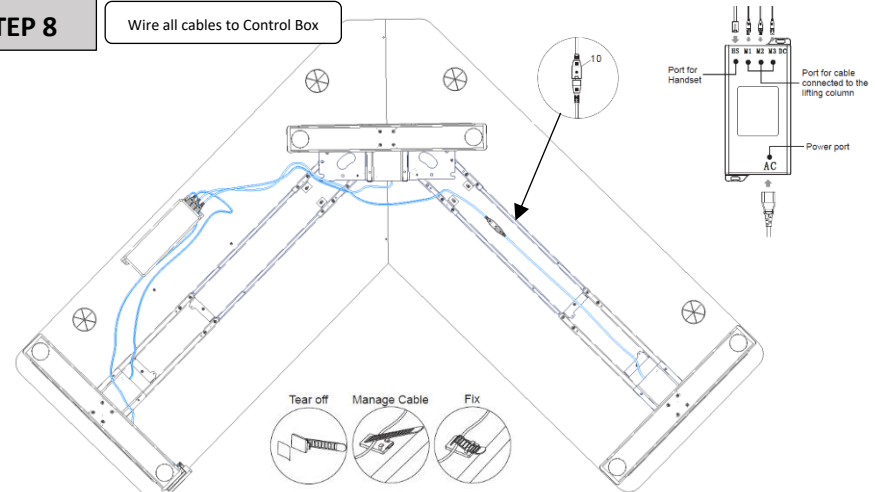

The cable tie (H) can be glued on the table and can also be screwed on the table with screws (G).

### Common fault treatment

The following tips will help you detect and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1. Check if all the cables be connected well 2. Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1. Check if all the cables be connected well 2. Contact your supplier or dealer
Rising in a low speed	1. Check if overloaded, max loading: 330.7lbs; 2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
Go down but not go up	1. Reposition 2. Contact your supplier or dealer
Downward sliding	1. Check if overloaded, max loading: 330.7lbs; 2. Contact your supplier or dealer
Frequently Reposition	1. Check if overloaded, max loading: 330.7lbs; 2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)	1. Restart after suspend for 18mins while connecting with power; 2. Contact your supplier or dealer;
Not enough up&down height	1. Press "M" and "3" together for 3 seconds or more, after hearing continuous beeping for twice, it will restore factory settings 2. Contact your supplier or dealer



### Attention

- Power supply: AC200V-240V, 50/60Hz
- Service Environment: 32-104°F
- Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
- The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
- Check carefully to ensure correct and complete assembly before using.
- Be familiar with all functions and program settings of the product before first use.
- Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
- Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
- Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
- Keep the original package of the equipment if necessary in case of the future use in transportation.

### Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.