RIDE INTO THE FUTURE Ride into the future with us. Get a step closer to reducing carbon footprint with E-mobility products and create a comfortable lifestyle with essentials, electronics, outdoor & fitness collection. Our Proud brands: E-mobility products Fitness products www.imgadgets.com



And if you are not satisfied, we would like to know what we could do to make your experience better.



GYROCOPTERS HOVER KART X3



Dear Customer

Thank you for purchasing Gyrocopters Hover kart X3. Please read the user manual carefully before you start to use the Gyrocopters Hover kart X3. Please note that items purchased are covered by 90 days warranty. During this period, all accessories can get a free replacement condition being that the hover kart is physically abused and used as per instructions.

Your package should include:

- 1. Seat x 1
- 2. Handle x 2
- 3. Frame x 1
- 4. Front tube x 1
- 5. Wheel x 1
- 6 Strap x 4
- 7. Instruction Manual
- 8. Install Tool

Any problem,

Contact us at customercare@imgadgets.com with your order number

We look forward to serving for you

Kind Regards,

Never ride your Gyrocopters Hover kart X3 in darkness or at night time. Avoid riding it during very low visibility conditions.

- Wear protectors (elbow, knee, wrist etc.) and a helmet while riding Gyrocopters Hover kart X3.
- This Hover kart X3 is only for personal use. Don't use it for commercial purposes.
- Hover kart X3 is not recommended for children under 7 hence consider the risk if you do so.
- Gyrocopters Hover kart X3 is not suitable for elderly people and pregnant women.
- Do not ride your Gyrocopters Hover kart X3 after drinking or using drugs.
- Be familiar with local traffic regulations and comply with local laws. Have respect for pedestrians.
- Control your speed and pay attention to your all facts, which would influence your riding. Good
 visibility is very important. Don't exceed the speed limit and observe the weight limit to avoid an
 accident.
- In case of any accident, stay in place and wait for help.
- When you ride your Gyrocopters Hover kart X3 with other users, keep a safe distance between each other to avoid a collision.
- Other activities (such as phone using, listening to music, etc.) can distract your attention from riding. Hence it's highly recommended not to use them while driving your Gyrocopters Hover kart X3.
- Don't ride on slippery or wet roads and don't use it during the rain. Don't ride on an uneven surface. Don't use it in snow or frozen area. Avoid dirt and small stones. Use it only on a flat and clean surface.

EXPLANATION OF SYMBOLS



The symbol means that the product must not be disposed of with any combination of electrical waste and electronic equipment. You can prevent potential negative effects on the environment and human health that could arise from inappropriate handling of waste from used electronic equipment if the product is disposed of properly.



The symbol means that the packaging contains an instruction manual that must be read before use.

SAFETY INSTRUCTIONS

- Read this manual carefully before using your Gyrocopters Hover kart X3 and keep it for future reference.
- Checking if all components, like screws and nuts, fit well. Check wheels and bearings before use.
- Pay attention to speed limits.
- Don't expose yourself or others to danger while riding Gyrocopters Hover kart X3. Don't ride on steep slopes or
 on an uneven surface.
- Use it only according to the attached manual. Don't do any improper adjustments or maintenance. This could bring safety concerns while using your Gyrocopters Hover kart X3,
- An inappropriate manner of using your Gyrocopters Hover kart X3 can cause serious injuries.
- Check your Gyrocopters Hover kart X3 regularly and be aware that worn or used parts must be replaced immediately.
- Do not use it if you notice any damage on your Gyrocopters Hover kart X3.
- Do not use it if you find any sharp edges on your Gyrocopters Hover kart X3.
- Train and gain experience before your first ride on Gyrocopters Hover kart X3. Try to learn how to use it properly before the first ride. If you are not sure, ask someone for help or advice.
- Pay attention while riding on Gyrocopters Hover kart X3 on public roads or sidewalks if it is allowed to use. Make sure that you don't violate local laws. If you are not sure, ask local authorities.
- Do not use it on public roads (including motorways).
- Only one person can use it at the same time. Don't use it for the transportation of other people.
- Do not carry items while riding.

8

Contents

COMPONENTS LIST	
ASSEMBLY STEPS	-05
SAFE USING	
MAINTENANCE AND CLEANING 07	
TERMS AND CONDITIONS OF WARRANTY AND CLAIMS	
EXPLANATION OF SYMBOLS	
SAFETY INSTRUCTIONS	
LIMITS)

	(1)seat	Ĵ	(2)Wrenches	0	(4)8mm Nut
H —	(1)seat frame		(1)Allen Wrench set	0	(4)6mm NUT
-	(1)Frame Extension	-	(1)Twist knob	0	(4)m6 Small Washers
	(2)Handle Bar		(4)Large Screws	0	(2) m10 Large Washers
	(1)Left and right handle rest		(4)Small Screws	0	(4)m10 Large Washers
	(2)velcro Straps	_	(2) Large screws	AA AA	(4)sensor foam pads

MAINTENANCE AND CLEANING

Regular maintenance and cleaning can increase the product life.

- ·Check all parts, wheels and bearings for wear.
- ·Replace damaged or worn parts immediately.
- •Don't use a lot of water to wash it. Metal parts could go rusty.
- ·Use only little soapy water (cold or lukewarm).
- ·Use a duster cloth to clean it.
- ·Don't use any chemical cleaners.

TERMS AND CONDITIONS OF WARRANTY AND CLAIMS

1. The Gyrocopters Hover kart X3 is free from design and material defects that could affect its functionality, provided that the instruction manual provided at the conclusion of the contract was followed.

2. The warranty covers only the territory of Canada, and the warranty period for Gyrocopters Hover Kart X3 is 90 days, counting from the date of sale of the equipment.

3.Defects revealed during the guarantee period will be removed free of charge within the shortest possible time, not exceeding 21 business days from the device being physically accepted to the site. If it is necessary to bring spare parts from abroad, the deadline may be extended by another 30 days.

4.This warranty does not cover damage resulting from the fault of the customer, in addition, the guarantor is not liable for damages and losses resulting from the use of the device being repaired

5. Full warranty terms and information can be found on www.imgadgets.com



Horizontal stop Keep both handles horizontal.



Backwards
Lift up both handles.



Turn right
Put down the left handle.
Do not move your right handle.



Forward
Push both handles down.



Put down the right handle.

Do not move your left handle.

SAFE USING

Before each riding:
1.Sit on the seat.
2.Keep handles horizontally.
3.Turn on the power switch.

ASSEMBLY STEPS

Follow these steps to assemble it correctly:

Step 1: Open the box and check if there is no missing parts.

Step 2: Front tube: put the tube into it and adjust the suitable hole. Use the Knob (COMPONENTS 4) to fit in suitable length.







Step 3: Handles: Use Allen wrench (COMPONENTS 2) and Allen key (1) to assemble handles with four Allen screws M8*50MM (COMPONENTS 3) and four Anti-slip nuts M8 (COMPONENTS 6). Make sure that you have attached the handles correctly before next step.











Step 4: Seat: Use Allen key (COMPONENTS 1) to fasten the seat to the transverse support with 3 four Allen screws M8*20MM (COMPONENTS 5).







Step 5: Attach the complete assembly to a board and adjust the nut on the end of the transverse support, so that it fit the board size. Fasten this assembly to the board with the belts. Check if the belts are firmly tighted before each using.







WARNING:

- Don't let this device work without any person sitting on. It could be dangerous.
- · If you want to detach this device from the board, loose the belts.





