



Flash Pro Max



Flash Pro Max Manual

 
HELMETS SAVE LIVES!

Always wear a properly fitted helmet that complies with CPSC or CE safety standards when you ride your scooter.



Correct Fitting:

Make sure your helmet covers your forehead.

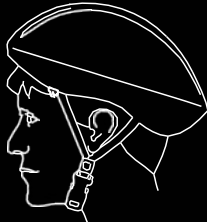

Incorrect Fitting:

Forehead is exposed and vulnerable to serious injury.

WARNING

As with all mechanical components, the Flash Pro Max is subjected to wear and high stresses. Different materials and components may react to wear or fatigue in different ways. If the design life of a component has been exceeded, it may suddenly fail possibly causing injuries to the rider. Any form of crack, scratch or change of coloring in highly stressed areas indicate that the life of the component has been reached and it should be replaced. Do not ride in an abusive manner.

CAUTION

In this manual, the CAUTION sign indicates a hazardous situation which, if not avoided, can cause minor or moderate injury.

WARNING

In this manual, the WARNING sign indicates a hazardous situation which, if not avoided, can cause death or serious injury.

WARNING

Great care should be taken with the Flash Pro Max when folding or unfolding.

DO NOT RIDE YOUR FLASH PRO MAX WITHOUT ALL RELEASES SECURELY LOCKED.

WARNING!

PLEASE READ THE USER MANUAL THOROUGHLY.

Failure to follow the basic instructions and safety precautions listed in the user manual can lead to damage to your device, other property damage, serious bodily injury, and even death.

Thank you for purchasing the Gyrocopters Flash Pro Max. Please read all instructions carefully before using and retain this manual for future use and reference.

This manual applies to the Gyrocopters Flash Pro Max

- In order to avoid dangers that are caused by collisions, falls, and loss of control, please learn how to ride safely.
- You can learn operating skills by reading the product manual and watching videos.
- This manual includes operating instructions and precautions. Users must read it carefully and follow the instructions.
- All users are responsible for any consequences caused by violating warning contents or prompt operations. Gyrocopters Flash Pro Max can not be held liable.

ATTENTION

1. Use only the supplied charger with this scooter.

Charger Manufacturer: SHENZHEN FUYUANDIAN POWER CO LTD
Model: FY0634201500

2. The operating temperature range of the charger is $-4 - 140^{\circ}\text{F}$ ($-20 - 60^{\circ}\text{C}$).

3. The operating temperature range of the E-Scooter is $32 - 113^{\circ}\text{F}$ ($0 - 45^{\circ}\text{C}$).

4. Do not ride on icy or slippery surfaces

5. Read the operation manual and warning labels before riding.

6. Store the scooter in a dry, ventilated environment.

7. When transporting the Gyrocopters Flash Pro Max avoid violent crashes or impact.

LOW TEMPERATURE WARNING

Low temperature will affect the lubrication of moving parts inside the scooter increasing internal resistance. At the same time, in low temperatures, the discharge capacity and the capacity itself of the battery will be significantly decreased.

Use caution when riding the scooter cold temperatures (below 40 degrees F).

Doing so may increase the risk of mechanical failures of the scooter, which may lead to damage to your device, other property damage, serious bodily injury and even death.

SAFETY INSTRUCTIONS

- Keep the device away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the device if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the device.
- Do not use the device if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by the manufacturer. Improper repair voids the warranty and may place the user at serious risk.
- Do not puncture or harm the exterior surface of the product in any way.
- Keep the device free from dust, lint, etc.
- Do not use this device for anything other than its intended use or purpose. Doing so may damage the device or lead to property damage, injury or death.
- This product is not a toy. Keep out of reach of children.
- Do not expose batteries, battery pack, or batteries installed to excessive heat, such as direct sunlight, or open flame.
- Do not allow hands, feet, hair, body parts, clothing or similar articles to come in contact with moving parts, wheels or drive-train, while the Gyrocopters Flash Pro Max is running.

- Do not operate, or allow others to operate, the Gyrocopters Flash Pro Max until the user understands all instructions, warnings and safety features described in this manual.
- Check with your doctor if you have a medical condition that could affect your ability to use the Gyrocopters Flash Pro Max.
- Persons with head, back or neck ailments or prior surgeries to those areas of the body are not recommended to use this Gyrocopters Flash Pro Max.
- Do not operate if you are pregnant, have a heart condition, or have both.
- Persons with any mental or physical conditions that may make them susceptible to injury or impair their physical or mental capabilities to recognize, understand and perform all of the safety instructions and to be able to assume the hazards inherent in unit use, should not use the Gyrocopters Flash Pro Max.

NOTES:

In this manual, the above symbol with the word "NOTES" indicates instructions or relevant facts the user should remember prior to using the device.

CAUTION!

In this manual, the above symbol with the word "CAUTION" indicates a hazardous situation which, if not avoided, can cause minor or moderate injury.

WARNING!

In this manual, the above symbol with the word "WARNING" indicates a hazardous situation which, if not avoided, can cause death or serious injury.

WARNING!

WARNING: Prolonged exposure to UV rays, rain and the elements may damage the enclosure materials. Store indoors when not in use.

INTRODUCTION

This manual is designed to give you the information you need for the safe operation and maintenance of your new Gyrocopters Flash Pro Max scooter. Please read it thoroughly before riding your Gyrocopters Flash Pro Max.

WARNING

Make sure you read this complete manual before riding your Flash Pro Max. Failure to do so, or failure to follow its guidelines could lead to serious injury or death.

The Flash Pro Max is a personal transporter. Our technology and production processes are developed with strict testing for each Flash Pro Max scooter. Operating the Flash Pro Max without following the contents of this manual may lead to damage to your scooter, or bodily injury.

PACKAGE CONTENTS

- Flash PRO MAX Electric Folding Scooter
- Charging Cable
- Wall Charger
- Operation Manual

Your Gyrocopters Flash Pro Max serial number is stamped respectively on the kickstand side of the platform. Record the serial number in the designated area of the “WARRANTY” section of this manual in the event that your Flash PRO MAX is lost or stolen.

SAFETY PRECAUTIONS

- The first rule in safe riding is to use common sense.
- Different localities and countries have different laws governing riding electric transportation devices on public roads.
- You should check with local officials to ensure you are complying with local traffic law requirements.
- Flash PRO MAX is not liable for tickets or violations given to riders who do not follow local laws and regulations.
- For your safety, always wear a helmet that meets CPSC or CE safety standards. In the event of an accident, a helmet can protect you from serious injury and in some cases, even death.

- Obey all local traffic laws. Obey red and green lights, one-way streets, stop signs, pedestrian crosswalks, etc.
- Ride with the traffic, not against it.
- Ride defensively; expect the unexpected.
- Give pedestrians the right-of-way.
- Do not ride too close to pedestrians and alert them if you intend to pass them from behind.
- Slow down at all street intersections and look to the left and right before crossing.

Your Flash Pro Max electric folding scooter is not equipped with reflectors. It is not recommended that you ride in conditions of low visibility.

If you are riding your scooter in low-visibility conditions, ensure your LED light is turned on, and that you are wearing bright, reflective clothing.



Think about safety when you ride. You can prevent many accidents if you think about safety. Below is a helpful checklist for riders.

SAFETY CHECKLIST

- Do not ride above your skill level. Ensure you have had enough practice with all functions and features of your Flash Pro Max.
- Do not ride too fast -- with increased speed comes increased risk. If you are moving at a higher speed, small bumps can turn into large impacts, leading to a higher risk of injury if an accident occurs.
- Do not ride with pets.
- Before stepping on your Gyrocopters Flash Pro Max make sure it is placed flat on level ground and the power is on.

- Do not try to open or modify your scooter. Doing so, voids the manufacturer warranty and may cause your scooter to fail, resulting in injury or death.
- Do not use the scooter in a manner that would put people or property in danger.
- If you and your friend(s) are riding scooters together, be sure to keep a safe distance between each other to prevent collisions, property damage, serious injuries or even death.
- Be sure to keep your feet on the scooter at all times. Moving your feet off your scooter while driving is dangerous and may cause the scooter to stop or veer sideways.
- Do not operate while under the influence of drugs and/or alcohol.
- Do not operate when you are restless or sleepy.
- Use your best judgment to keep yourself out of dangerous situations with your scooter.
- Do not ride scooter off of curbs, ramps, or attempt to operate in a skate park, empty pool, or in any way similar to a skateboard. Misuse of your scooter voids the manufacturer warranty and may lead to injury or damage.
- Do not abuse your scooter, doing so can damage your unit and cause failure to the operating system which may lead to injury. Physical abuse, including dropping your scooter, voids the manufacturer warranty.
- Do not operate in or near puddles of water, mud, sand, stones, gravel, debris or near rough and rugged terrain.
- The scooter can be used on paved surfaces that are flat and even. If you encounter uneven pavement, please lift your scooter over and past the obstruction.
- Do not ride in inclement weather: snow, rain, hail, sleet, on icy roads or in extreme heat or cold.
- Bend your knees when riding on bumpy or uneven pavement to absorb the shock and vibration and help you keep your balance.
- If you are unsure if you can safely ride on a specific terrain, step off

WARNING

Proper use of your brake is vital to ensure safe, efficient stopping. To avoid misuse and potential injury, do not apply sudden or excessive force to your brakes. Apply your brakes gradually and give yourself enough room to come to a complete stop safely.

and carry your . ALWAYS BE ON THE SIDE OF CAUTION.

- Do not attempt to ride over bumps or objects greater than ½ in. even when prepared and bending your knees.
- PAY ATTENTION - look at where you are riding and be conscious of the road conditions, people, places, property and objects around you.
- Do not operate the scooter in crowded areas.
- Operate your scooter with extreme caution when indoors, especially around people, property, and narrow spaces.
- Do not operate the while talking, texting, or looking at your phone.
- Do not ride your scooter where it is not permitted.
- Do not ride your near motor vehicles or on public roads.
- Do not travel up or down steep hills.
- The scooter is intended for use by a single individual, DO NOT attempt to operate the scooter with two or more people.
- Do not carry anything while riding the scooter.
- Individuals with lack of balance should not attempt to operate the scooter.
- Pregnant women should not operate the Gyrocopters Flash Pro Max scooter.
- Young children and the elderly should not operate the scooter.
- At higher speeds, always take into consideration longer stopping distances.
- Do not attempt to jump on or off your scooter.

WARNING

When you ride in low-visibility conditions such as fog, dusk, or night, you might be difficult to see, which could lead to a collision. In addition wear bright, reflective clothing when riding in poor lighting conditions.

- Do not attempt any stunts or tricks with your scooter.
- Do not ride the Gyrocopters Flash Pro Max in dark or poorly lit areas.
- Do not ride the scooter near or over potholes, cracks or uneven pavement or surfaces.
- Do not operate your scooter off-road.
- Do not turn sharply, especially at high speeds.
- Do not exceed the maximum or minimum weight limits.
- Avoid driving the Flash Pro Max in unsafe places, including near areas with flammable gas, steam, liquid, dust, fiber, which could cause fire and explosion accidents.
- Do not operate near swimming pools or other bodies of water.

WARNING

There may be additional risk to injury if you use your scooter incorrectly. This includes, but is not limited to:

- Jumping your scooter
- Riding over debris or obstacles
- Performing stunts
- Riding in off-road terrain
- Riding fast
- Racing other riders
- Riding in unusual manner

The aforementioned examples add stress to each part of your scooter and can lead to long term damage of the device. Damage to your scooter can lead to an accident or increase your risk of injury. To decrease your risk of injury, use your scooter correctly.

WARNING

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider.

WARNING

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider.

CARE & MAINTENANCE

- Do not expose the device to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.
- Do not dispose of the device in fire as it may explode or combust.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the device.
- Use only the charger provided by Gyrocopters Flash Pro Max.

WARNING

Avoid using water or other liquids for cleaning. If water or other liquids enter the Flash Pro Max it will cause permanent damage to the internal components.

WARNING

Users who disassemble the scooter without permission will void the warranty.

BATTERY CARE / MAINTENANCE

BATTERY SPECIFICATIONS

Battery Type: Rechargeable lithium-ion battery

Charge Time: 5-6 hours

Battery Voltage: 37V

Battery Capacity: 10 Ah

Working Temperature: -4°F - 140°F

Charging Temperature: 32°F - 113°F

Storage Time: 1 month

Storage Temperature: -4°F - 104°F

Storage Humidity: 5% - 95%

BATTERY MAINTENANCE

The lithium-ion battery is built into the device. Do not disassemble the device to remove the battery or attempt to separate it from the device. Make sure to charge scooter at least once a month or battery may not revive anymore.

- When charging the device, please use the enclosed 1-pin charging cable or otherwise ensure that the battery charging conditions are met.
- Do not connect or attach the device or the battery to a power supply plug or directly to a car's cigarette lighter.
- Do not place the device or batteries near a fire, or into direct sunlight. Heating the device and/or the battery can cause additional heating, breaking, or ignition of the battery inside the device.
- Do not continue charging the battery if it does not recharge within the specified charging time. Doing so may cause the battery to become hot, rupture, or ignite.

To preserve natural resources, please recycle or dispose of batteries properly. This product contains lithium-ion batteries. Local, state, or federal laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

WARNING

Failure to follow the safety precautions listed below could lead to serious bodily injury and/or death.

- Do not attempt to modify, change, or replace your battery.
- Do not use your device if the battery begins to emit odor, overheats, or begins to leak.
- Do not touch any leaking materials or breathe fumes emitted.
- Do not allow children and animals to touch the battery.
- The battery contains dangerous substances, do not open the battery, or insert anything into the battery.
- Please only use the charger provided.
- Do not attempt to charge the device if the battery has discharge or emits any substances. In that case, immediately distance yourself from the battery in case of fire or explosion.
- Lithium-ion batteries are considered to be hazardous materials. Please follow all local, state and federal laws in regards to recycling, handling and disposing of Lithium-ion batteries.

 **WARNING**

SEEK IMMEDIATE MEDICAL ASSISTANCE IF
YOU ARE EXPOSED TO ANY SUBSTANCE
THAT IS EMITTED FROM THE BATTERY.

SPECIFICATIONS

Model:	Flash Pro Max
Net Weight:	33.07 lbs (15 kg)
Max Supported Weight:	264.5 lbs (120 kg)
Max Speed:	Up to 18.6 miles (30 km/h)
Max Distance Range:	Up to 24.85 miles (35-40 km)
Battery Type:	Lithium-ion
Motor:	Brushless Motor
Battery Voltage:	37 V
Capacity:	10AH

 
Folded Size: 1160*440*490mm

Unfolded Size: 1160*440*1140mm


Tire Type:	Air tire
Tire Size:	10 inch
Brake Type:	Handle Activated Rear

PARTS LIST

- A. Scooter Frame
- B. Handle Bar Assembly
- C. Charger + Charge Cable
- D. Allen Wrench & Bolts

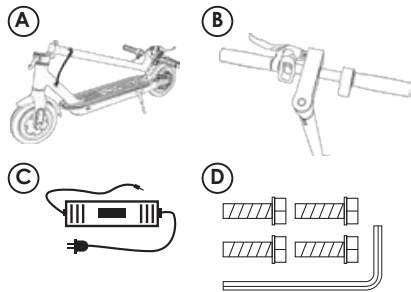


Flash Pro Max DIAGRAM

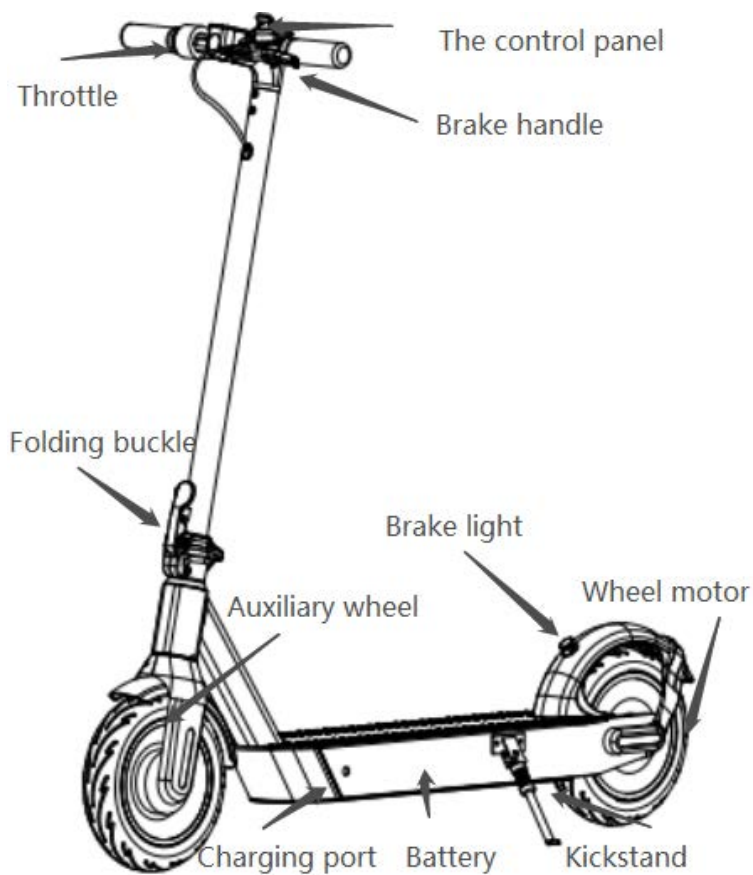 

FLASH PRO MAX DIAGRAM



 LCD DISPLAY

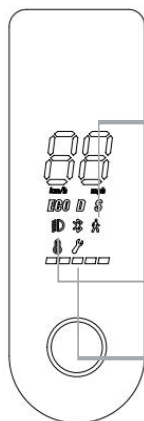

SPEEDOMETER

Displays your current speed in Mph. Displays the current speed in Level: Ensure it is power on, Press once to switch modes:

- 1 Comfort (ECO) - Speed 10Kms
- 2 Normal (D) -Speed 15Kms
- 3 Sports (S) - Speed 30Kms
- 4 Walk - Speed 6Kms

SWITCH FROM KMS/MPH

Press the power button three times to switch from Kms to Mph

HEADLIGHT ICON

Indicates the headlight is activated.

BATTERY INDICATOR

Displays your current battery level.

NOTE:

- BACK LIGHT BLINKS FOR SAFETY ON WALKING MODE.
- MAX SPEED ON ANY MODES OTHER THAN WALKING MODE CAN BE CHANGED THROUGH THE APP

CHARGING YOUR FLASH PRO MAX

CHARGING THE DEVICE

- Ensure that the charging port is clean and dry.
- Make sure that there is no dust, debris or dirt inside the port.
- Plug the charger into a grounded wall outlet.
- Connect the cable with the power supply (100V ~ 240V; 50/60 Hz).
- Align and connect the 1-pin charging cable into the charging port of the Flash Pro Max Scooter.

(DO NOT FORCE OR BEND THE CHARGING CABLE AS IT MAY CAUSE THE PRONGS TO BEND OR BREAK.)

- The charging indicator light on the charger itself should change to RED, indicating that your device is now being charged.
- When the RED indicator light on your charger turns to GREEN, then your device is fully charged.
- After fully charging your Scooter, unplug the charger from your device and from the power outlet.

CAUTION

Only use the included charging cable and charger to charge your Flash Pro Max. Using any other unauthorized charger may damage your Flash Pro Max.

WARNING

Any Flash Pro Max that does not work properly can cause you to lose control and fall. Inspect the entire device thoroughly before every ride, and do not ride it until any problems have been corrected.

PREPARING YOUR SCOOTER

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY

ATTACHING THE HANDLEBAR KIT

Attach the handle bar kit by placing it into the steering column, align the front and back screw holes, and tighten the 4 screws into place.



PINCH POINTS

Some parts of your Flash Pro Max can injure you if mishandled. Moving and folding parts can cut skin. Clamps and pivoting parts such as brake levers can pinch. When folding and unfolding your Flash 3.0, Please watch for pinch points where possible injury may be sustained. Do not leave your hand in these areas during folding or unfolding.



FOLDING & UNFOLDING

FOLDING & UNFOLDING YOUR Flash Pro Max SCOOTER.

To unfold your scooter press down on the folding clip and pull the steering column up. Raise the safety lock up and push it into place to secure the steering column. You will hear a “click”, indicating the steering column is locked. Ensure the steering column is secured in place.



HIGH SPEED MODE

To active high speed mode, ensure the scooter is powered on and not in motion. Press the power button twice. The high speed mode indicator should light up on your display to indicate it is activated.

CRUISE CONTROL

To active cruise control, you must hold the throttle at a constant speed above 3mph for 5 seconds. For example, if you want to activate cruise control at 10mph, hold the throttle at 10 mph for 5 seconds. You will hear a beep and the cruise control indicator will light up on the LCD display indicating that it is activated.

BEFORE RIDING

WARNING

Any Flash Pro Max Scooter that does not work properly can cause you to lose control and fall. Do not ride the scooter with a part that is damaged; replace the damaged part before riding.

It is important that you fully understand all elements of your scooter. If these elements are not used correctly, you will not have full control of your scooter. Before you ride, learn the functions of the various mechanisms on your scooter.

Practice using these elements of your Flash Pro Max at slower speeds in a flat, open area before taking the device out in public areas.

PRE-RIDE CHECKLIST

Ensure that your scooter is in proper working order each and every time you ride. If a part of the scooter does not function correctly, please contact our Customer Support Center.

- Ensure the battery is fully charged before riding your scooter.
- If the Flash Pro Max scooter is not used for an extended period of time, you may need to recharge the battery at least once a month to maintain the battery life.
- Please wear all appropriate safety and protective gear as previously mentioned in the User Manual before operating your device.
- Make sure to wear comfortable clothes and flat closed-toe shoes when operating your device.
- Please carefully read the Operation Manual, which will assist in explaining the basic working principles and provide tips on how to best enjoy your experience.

RIDING YOUR Flash PRO MAX SCOOTER

FAILURE TO FOLLOW ANY OF THE FOLLOWING SAFETY PRECAUTIONS CAN AND MAY LEAD TO DAMAGE TO YOUR DEVICE, VOID YOUR MANUFACTURER WARRANTY, LEAD TO PROPERTY DAMAGE, CAUSE SERIOUS BODILY INJURY, AND CAN LEAD TO DEATH.

OPERATING YOUR DEVICE

Make sure the device is fully charged before the first initial use. Before turning on your scooter, ride it like a normal kick scooter to get comfortable with the device before using it with the motor.

When comfortable, power on the Gyrocopters Flash Pro Max. To activate the motor, you must first push the scooter forward with one of your feet, keeping the other foot on the scooter and then press the thumb-throttle.

To slow down the scooter, disengage the Throttle and squeeze the Brake handle to engage the disk brake. The Brake is pressure sensitive so a tighter grip means more stopping power.

To turn, use the handlebar to turn in the direction you wish to turn.

The scooter can be operated manually if you do not wish to use the motor.

As you get comfortable on the device, you will notice it becomes easier to maneuver. Remember at higher speeds, it is necessary to shift your weight to overcome the centrifugal force.

Prepare to brace yourself if you encounter bumps or uneven surfaces, then dismount and carry your scooter to a safe operating surface.



WARNING

Do not turn sharply or at high speeds to avoid danger. Do not turn or ride quickly along slopes, as it may cause injury.

WEIGHT AND SPEED LIMITATIONS

Speed and weight limits are set for your own safety. Please do not exceed the limits listed in the “Specifications” section of this manual.

WARNING

Overweight exertion on the device may increase possibility of injury or product damage.

OPERATING RANGE

The following are some of the major factors that will affect the operating range of your device.

- **Terrain:** Riding distance is highest when riding on a smooth, flat surface. Riding uphill and/or on rough terrain will reduce distance significantly.
- **Weight:** A lighter user will have further range than a heavier user.
- **Ambient temperature:** Please ride and store the device under recommended temperatures, which will increase driving distance; battery life, and overall performance of your device.
- **Speed and Riding Style:** Maintaining a moderate and consistent speed while riding produces maximum distance. Traveling at high speeds for extended periods, frequent starts and stops, idling and frequent acceleration or deceleration will decrease overall distance.

*Do not attempt to stop suddenly as this may lead to injury or damage to your brake discs.

WARNING

Proper use of your brake is vital to ensure safe, efficient stopping. To avoid misuse and potential injury, do not apply sudden or excessive force to your brake. Apply the brake gradually and give yourself enough room to come to a complete stop safely.

Please follow all local, state and federal laws in regards to recycling, handling and disposing of Lead-acid battery.



SAFETY ALERTS

While riding your Scooter, if there is a system error or illegal operation performed the device will prompt the user in a variety of ways.

The following are common occurrences where you will see Safety Alerts. These notices should not be ignored, but appropriate action should be taken to correct any illegal operation, failure or errors.

- Prohibited riding surfaces (uneven, too steep, unsafe, etc.)
- Battery voltage is too low.
- The device is still charging.
- Overheating, or motor temperature is too high.
- When the battery is about to run out of power, the battery icon will flash.
- If any or both tires are blocked, the device will stop after 10 seconds.
- When the battery level has depleted below protection mode, the device motor will power off after 15 seconds.

While sustaining a high discharge current during use (such as riding up a steep slope for a long period of time), the device motor will power off after 15 seconds.

Flash Pro Max App



MiniRobot
Lebi Computer Technology
Co. Ltd.

OPEN



(IOS APP View)



MiniRobot
LebiTEC

Install

(Android APP View)

Go to the Google Play Store (Android) or the Apple APP Store (iOS) and search for “ MiniRobot ” by Lebi Technology to download and install the APP.

△ WARNING

THERE IS A MINIMUM ANDROID/IOS/
BLUETOOTH VERSION REQUIRED. IOS
8.0 OR ABOVE, ANDROID 4.3 OR
ABOVE

FIRST RIDE

 
There are safety risks when learning to ride the Flash Pro Max. You must read the Safety Instructions via the APP before your first ride.

For your safety, your new Flash Pro Max is not activated and will beep occasionally after Power on.


Until activated, the Flash Pro Max maintains a very low riding speed, and can not be ridden with full function. Install the APP on your mobile device (with Bluetooth 4.0 or above). Connect to the Flash Pro Max with Bluetooth. And follow the App instructions to activate your Flash Pro Max and enjoy the full performance.

Scan the QR code to download the APP (IOS 8.0 or above, Android 4.3 or above).


1. Install the APP and turn on your phone's Bluetooth.

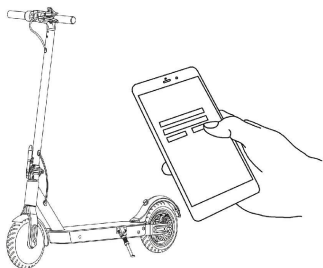

 
2. Power on the Gyrocopters Flash Pro Max, then open the APP, it will automatically search for Bluetooth devices.

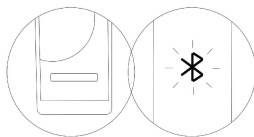

 3. Click the Bluetooth, The Flash Pro Max will beep when the connection is successful. Simultaneously, the display interface will automatically load the home page.

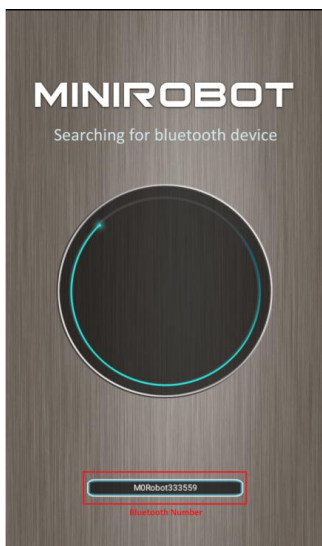

IMPORTANT APP SETTINGS

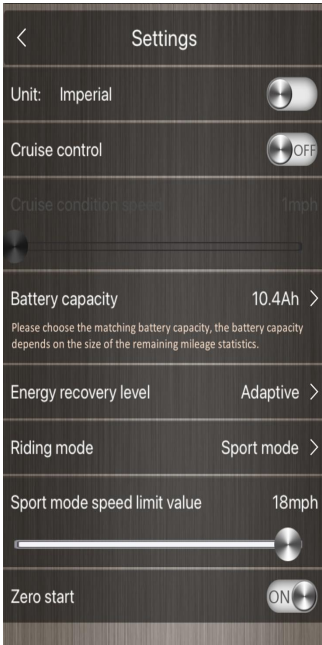 

Allows you to change from Kms to Mph

Use Mode speed regulator to control the speed on any mode

Zero start allows you to start the Gyrocopters Flash Pro Max with out pushing it initially

WARRANTY

From the date of purchase the customer is eligible for 90 days limited manufacturer warranty. Manufacturer warranty does not cover any physical/accidental damage due to improper usage. The warranty does not cover normal wear and tear, wheel, fender, or any other physical damage or water/liquid damage to your parts and unit.

For warranty information, Please visit us at www.gyrocopters.ca or email us at customer@gyrocopters.ca