

GYROCOPTERS


PLAID E-SCOOTER




**OPERATION
MANUAL :
GYROCOPTERS
PLAID E-SCOOTER**

HELMETS SAVE LIVES!

Always wear a properly fitted helmet that complies with CPSC or CE safety standards when you ride your Gyrocopters Plaid E-Scooter.

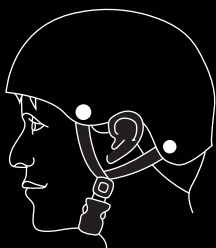

Correct Fit:
Make sure your helmet covers your forehead.

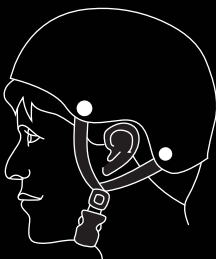

Incorrect Fit:
Forehead is exposed and vulnerable to serious injury.

WARNING

As with all mechanical devices, the Gyrocopters Plaid E-Scooter is subject to wear and high stresses. Different materials and components may react to wear or fatigue in different ways. If the design life of a component has been exceeded, it may suddenly fail, possibly causing injuries to the rider. Any form of crack, scratch, or change of coloring in highly stressed areas indicate that the life of the component has been reached and it should be replaced. Do not ride in an abusive manner.

CAUTION

In this manual, the CAUTION sign indicates a hazardous situation which, if not avoided, can cause minor or moderate injury.

WARNING

In this manual, the WARNING sign indicates a hazardous situation which, if not avoided, can cause serious injury or death.

WARNING

Great care should be taken with the Gyrocopters Plaid E-Scooter while folding and unfolding it. Moving and folding parts can cut skin or pinch if mishandled.

DO NOT RIDE YOUR SCOOTER WITHOUT THE STEERING COLUMN, FOLDING HINGE, AND HANDLEBARS SECURELY LOCKED IN PLACE.

WARNING

PLEASE READ THE OPERATION MANUAL THOROUGHLY.

Failure to follow the basic instructions and safety precautions listed in the operation manual can lead to damage to your Gyrocopters Plaid E-Scooter, property damage, serious bodily injury, and even death.

Thank you for purchasing the Gyrocopters Plaid E-Scooter. Please read all instructions carefully before using it and retain this manual for future reference.

- To avoid collisions, falls, and loss of control, please learn how to ride the Gyrocopter Plaid E-scooter safely.
- You can learn how to ride the Gyrocopters Plaid E- Scooter by reading the operation manual and watching videos.
- All users are responsible for any consequences caused by violating warning contents or proper operations. Gyrocopters can not be held liable .

ATTENTION:

1. Use only the supplied charger from Gyrocopters with this E-Scooter.
2. The operating temperature range of the charger is 32°F - 104°F (0°C - 40°C).
3. The operating temperature range of the Plaid is 32°F - 104°F (0°C - 40°C).
4. Do not ride on icy or slippery surfaces.
5. Read the operation manual and warning labels before riding.
6. Store the Gyrocopters Plaid E-Scooter in a dry, ventilated environment.
7. When transporting the Gyrocopters Plaid E- Scooter, avoid violent crashes or impact.

LOW TEMPERATURE WARNING

Low temperatures will affect the lubrication of moving parts inside the E-scooter, increasing internal resistance. Additionally, the discharge capacity and capacity of the battery will be significantly decreased.

Use caution when riding in cold temperatures (below 40°F/4°C). Doing so may increase the risk of mechanical failures of the Gyrocopters Plaid E-Scooter, which may lead to damage to your device, property damage, serious bodily injury, and even death.

SAFETY INSTRUCTIONS

- Keep the Gyrocopters Plaid E-Scooter away from heat sources, direct sunlight, humidity, water, and any other liquids.
- Do not operate the Gyrocopters Plaid E-Scooter if it has been exposed to water, moisture, or any other liquids to prevent electric shock, explosion, and/or injury to yourself and damage to the E-Scooter.
- Do not use the Gyrocopters Plaid E-Scooter if it has been dropped or damaged.
- Repairs to electrical equipment should only be performed by the manufacturer. Improper repairs void the warranty and may place the user at serious risk.
- Do not puncture or harm the exterior surface of your Gyrocopters Plaid E-Scooter in any way.
- Keep the device free from dust, lint, etc.
- Do not use your Gyrocopters Plaid E-Scooter for anything other than its intended use or purpose. Doing so may damage the E-Scooter or lead to property damage, injury, or death.
- This product is not a toy. Keep out of the reach of children.
- Do not expose the batteries to excessive heat such as direct sunlight or an open flame.
- Do not allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts and wheels while your Gyrocopters Plaid Electric scooter is running.

- Do not operate or allow others to operate your Gyrocopters Plaid E-Scooter until the user understands all instructions, warnings, and safety features described in this manual.
- Check with your doctor if you have a medical condition that could affect your ability to use Gyrocopters Plaid E-Scooter.
- Persons with head, back, neck ailments, or prior surgeries to those areas of the body are not recommended to use the Gyrocopters Plaid E-Scooter.
- Do not operate if you are pregnant or have a heart condition.
- Persons with any mental or physical conditions that may make them susceptible to injury or impair their physical or mental capabilities to recognize, understand, and perform all of the safety instructions and assume the hazards inherent in operation should not use the Gyrocopters Plaid E-Scooter.

WARNING

Prolonged exposure to UV rays, rain, and the elements may damage the enclosure materials. Store indoors when not in use.

INTRODUCTION

Gyrocopters Plaid E-Scooter is a personal transporter. Operating the scooter without following the contents of this manual may lead to damage to your E-Scooter or bodily injury.


PACKAGE CONTENTS

- Gyrocopters Plaid Electric Folding Scooter
- 4 screws, 1 X internal hexagon wrench
- Charger & Charging Cable

Your Gyrocopters Plaid E-scooter serial number is stamped on the bottom of the E-Scooter platform.

SAFETY PRECAUTIONS

- The first rule of safe riding is to use common sense.
- Different localities and countries have different laws about riding electric transportation devices on public roads. You should check with local officials to ensure you are complying with local traffic law requirements.
- Gyrocopters is not liable for tickets or violations given to riders who do not follow local laws and regulations.
- For your safety, always wear a helmet that meets CPSC or CE safety standards. In the event of an accident, a helmet can protect you from serious injury and in some cases, even death.

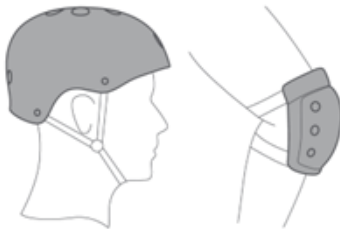

- Obey all local traffic laws. Obey red and green lights, one-way streets, stop signs, pedestrian crosswalks, etc.
- Ride with traffic, not against it.
- Ride defensively; expect the unexpected.
- Give pedestrians the right-of-way.
- Do not ride too close to pedestrians and alert them if you intend to pass them from behind.
- Slow down at all street intersections and look to the left and right before crossing.
- Your Gyrocopter Plaid E-Scooter is equipped with reflectors.
- If you are riding your Gyrocopter E-Scooter in low-visibility conditions, ensure your LED headlight is turned on, and that you are wearing bright, reflective clothing.



WARNING

When you ride in low-visibility conditions such as fog, dusk, or night, you might be difficult to see, which could lead to a collision. To increase your level of safety, be sure to wear bright, reflective clothing while riding in low-visibility conditions.

- Do not ride above your skill level. Ensure you have had enough practice with all functions and features of your Gyrocopter Plaid Electric Scooter.
- Do not ride too fast – with increased speed comes increased risk. If you are moving at a higher speed, small bumps can create strong impacts, leading to a higher risk of injury.
- Do not ride with pets.
- Before stepping on your Gyrocopter Plaid E-Scooter, make sure it is placed flat on the level ground.

- Do not try to open or modify your Gyrocopters Plaid E-Scooter. Doing so voids the manufacturer warranty and may cause your scooter to fail, resulting in injury or death.
- Do not use the Gyrocopters Plaid E-Scooter in a manner that would put people or property in danger.
- If you are riding near other riders, be sure to maintain a safe distance between each other to prevent collisions.
- Be sure to keep your feet on the E-scooter at all times. Moving your feet off while driving is dangerous and may cause the Gyrocopters Plaid to stop suddenly or veer sideways.
- Do not operate your Gyrocopters Plaid E-Scooter while under the influence of drugs or alcohol.
- Do not operate the Gyrocopters Plaid E-Scooter when you are restless or sleepy.
- Use your best judgment to keep yourself out of dangerous situations with your Gyrocopters Plaid E-Scooter.
- Do not ride your Gyrocopters Plaid E-Scooter off of curbs, ramps, or attempt to operate in a skate park, empty pool, or in any way similar to a skateboard. Misuse of your scooter voids the manufacturer warranty and may lead to injury or damage.
- Do not abuse your Gyrocopters Plaid E-Scooter. Doing so can damage your unit and cause failure to the operating system, which may lead to injury. Physical abuse, including dropping your Plaid, voids the manufacturer warranty.
- Do not operate in or near puddles of water, mud, sand, stones, gravel, debris, or near rough and rugged terrain.
- The E-scooter can be used on paved surfaces that are flat and even. If you encounter uneven pavement, lift your Gyrocopters Plaid E-Scooter over and past the obstruction.
- Do not ride in inclement weather: snow, rain, hail, sleet, on icy roads, or in extreme heat or cold.
- Bend your knees when riding on bumpy pavement to absorb the shock and vibrations. This will help you keep your balance.
- If you are unsure if you can safely ride on a specific terrain, step off and carry your Gyrocopters Plaid E-Scooter. Always be on the side of caution.



WARNING

Proper use of your brake is vital to ensure safe, efficient stopping. To avoid misuse and potential injury, do not apply sudden or excessive force to your brakes. Apply your brakes gradually and give yourself enough room to come to a complete stop safely.

- Do not attempt to ride over bumps or objects greater than ½ inch, even when prepared and bending your knees.
- Pay attention. Look where you are riding and be conscious of the road conditions, people, property, and objects around you.
- Do not operate the Gyrocopters Plaid E-scooter in crowded areas.
- Operate your Gyrocopters Plaid E-Scooter with extreme caution when indoors, especially around people, property, and narrow spaces.
- Do not operate the Gyrocopters Plaid E-Scooter while talking, texting, or looking at your phone.
- Do not ride your Gyrocopters Plaid E-Scooter where it is not permitted.
- Do not travel up or down steep hills.
- The Gyrocopters Plaid E-Scooter is intended for use by a single individual, DO NOT attempt to operate the E-Scooter with two or more people.
- Do not carry anything while riding the Gyrocopters Plaid E-Scooter.
- Individuals with lack of balance should not attempt to operate the Gyrocopters Plaid E-Scooter
- Young children and the elderly should not operate the Gyrocopters Plaid E-Scooter
- At higher speeds, always take longer stopping distances into consideration.
- Do not attempt to jump on or off your Gyrocopters Plaid E-Scooter.
- Do not attempt any stunts or tricks with your Gyrocopters Plaid E-Scooter.
- Do not ride the Gyrocopters Plaid E-Scooter in dark or poorly lit areas.

- Do not ride the Gyrocopters Plaid E-Scooter near or over potholes, cracks, or uneven pavement or surfaces.
- Do not turn sharply, especially at high speeds.
- Do not exceed the maximum weight limit of 330 lbs (150 kg).
- Avoid driving the Gyrocopters Plaid E-Scooter in unsafe places, including areas with inflammable gas, steam, liquid, dust, or fiber that could cause fire and explosion accidents.
- Do not operate near swimming pools or other bodies of water.
- Maintain a safe braking distance during wet conditions.

WARNING

There may be additional risk of injury if you use your E-Scooter incorrectly. This includes, but is not limited to:

- Jumping your E-Scooter
- Riding over debris or obstacles
- Performing stunts
- Riding fast
- Racing other riders
- Riding in an unusual manner

The aforementioned examples add stress to each part of your E-Scooter and can lead to long term damage of the device. Damage to your E-Scooter can lead to an accident or increase your risk of injury. To decrease your risk of injury, use your E-Scooter correctly.

WARNING

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools, or other bodies of water. Always wear shoes, and never allow more than one rider at a time.

CARE & MAINTENANCE

- To avoid damage to the Plaid's internal circuitry, do not expose it to liquid, moisture, or humidity.
- Do not use abrasive cleaning solvents to clean the Plaid.
- Do not expose the Gyrocopters Plaid E-Scooter to extremely high or low temperatures, as this will shorten the life of the device, destroy the battery, and/or distort certain plastic parts.
- Do not dispose of the Gyrocopters Plaid E-Scooter in fire as it may explode or combust.
- Do not let the Gyrocopters Plaid E-Scooter come into contact with sharp objects, as this will cause scratches and damage.
- Do not let the Gyrocopters Plaid E-Scooter fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the Gyrocopters Plaid E-Scooter.
- Use only the charger provided by Gyrocopters.
- Use only the manufacturer's authorized replacement parts.

WARNING

Avoid using water or other liquids for cleaning. If water or other liquids enter the Plaid, it will cause permanent damage to the internal components.

WARNING

Users who disassemble the Plaid without permission from Gyrocopters will void the warranty.

BATTERY CARE / MAINTENANCE

BATTERY SPECIFICATIONS

Battery Type: Rechargeable lithium-ion

Battery Charge Time: Up to 5 hours

Battery Voltage: 48V

Battery Capacity: 10Ah

Working Temperature: 32°F - 104°F

Charging Temperature: 32°F - 104°F

Storage Time: 1 year

Storage Temperature: 32°F - 104°F

Storage Humidity: 5% - 95%

BATTERY MAINTENANCE

- The lithium-ion battery is built into the Gyrocopters Plaid E-Scooter. Do not disassemble the E-Scooter to remove the battery or attempt to separate it from the E-Scooter.
- When charging the E-Scooter, only use the enclosed charger provided by Gyrocopters. Use of any other charger or cable may lead to damage to the E-Scooter, overheating, and risk of fire. Use of any other charger or cable voids the manufacturer warranty.
- Do not connect or attach the Gyrocopters Plaid E-Scooter or the battery to a power supply plug or directly to a car's cigarette lighter.
- Do not place the Gyrocopters Plaid E-Scooter near a fire or leave it out in direct sunlight. Heating the E-Scooter can break or ignite the battery inside the device.
- Do not continue charging the battery if it does not recharge within the specified charging time. Doing so may cause the battery to become hot, rupture, or ignite.
- To preserve natural resources, please recycle or dispose of batteries properly. This product contains lithium-ion batteries. Local, state, or federal laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.



WARNING

Failure to follow the safety precautions listed below could lead to serious bodily injury or death.

- Do not attempt to modify, change, or replace your battery.
- Do not use your device if the battery begins to emit odor, overheats, or begins to leak.
- Do not touch any leaking materials or breathe fumes emitted.
- Do not allow children or animals to touch the battery.
- The battery contains dangerous substances. Do not open the battery or insert anything into the battery.
- Do not attempt to charge the device if the battery has discharge or emits any substances. In that case, immediately distance yourself from the battery in case of fire or explosion.
- If the Gyrocopters Plaid Electric Scooter is not used for a long time, the battery should be fully charged every 90 days. Otherwise the battery will discharge itself and be damaged.

WARNING

SEEK IMMEDIATE MEDICAL ASSISTANCE IF
YOU ARE EXPOSED TO ANY SUBSTANCE
THAT IS EMITTED FROM THE BATTERY.

SPECIFICATIONS

Model:	PLAID E-SCOOTER
Net Weight:	54. 2 lbs (23.6 kg) 330
Max Supported Weight: Min	lbs (150 kg)
Supported Weight: Max	44 lbs (20 kg)
Speed:	Up to 18 mph (45 km/h)
Max Range:	Up to 40 km (varies based on riders weight)
Battery Type:	Lithium-ion
Motor Power:	800W brush-less motor
Battery Voltage: Battery	48 V
Capacity: Power	10 Ah
Requirement: Folding Size:	49" x 26.5" x 21.8"
Open Size:	49" x 26.5" x 46"
Tire Type:	Air-filled tires
Brake:	Front and rear mechanical disc brake
UL Certification:	Handle-activated rear disc brake UL2272 certified


PARTS LIST

A. Plaid E-Scooter


B. Screws x 4

C. Charger + Charging Cable


D. Hex Key

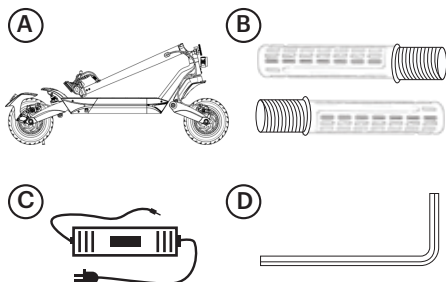


GYROCOPTERS PLAID DIAGRAM

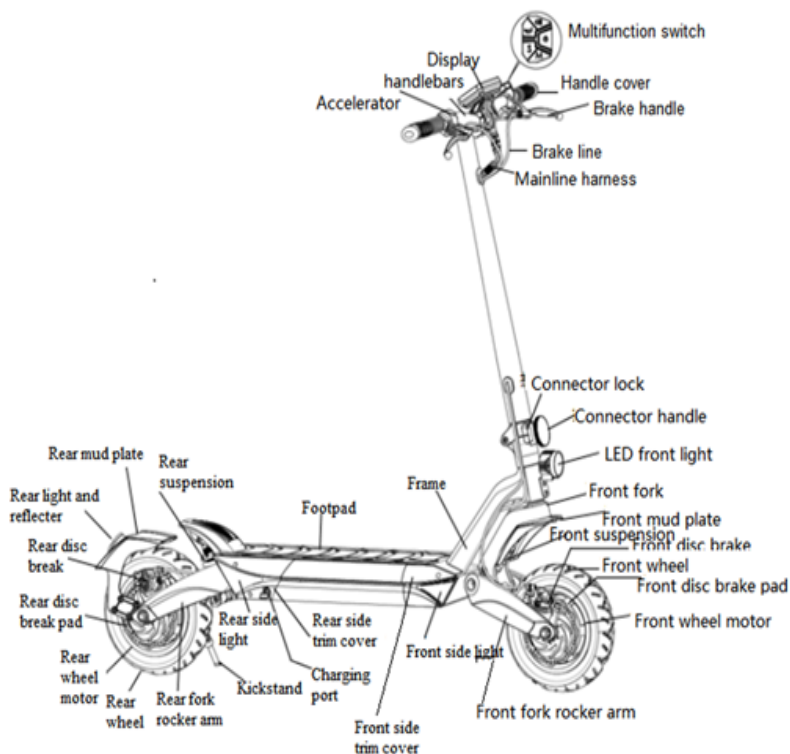

FEATURES/PARTS

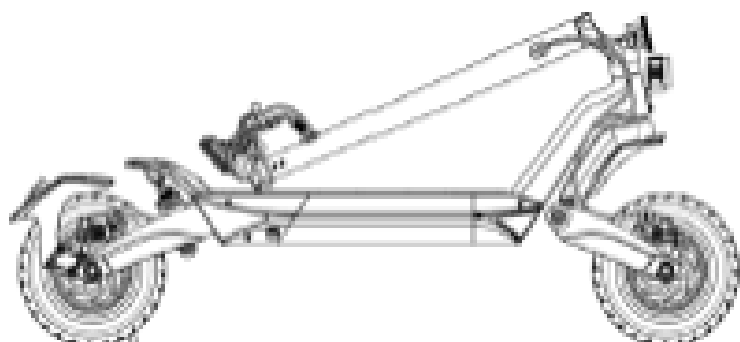


LCD DISPLAY

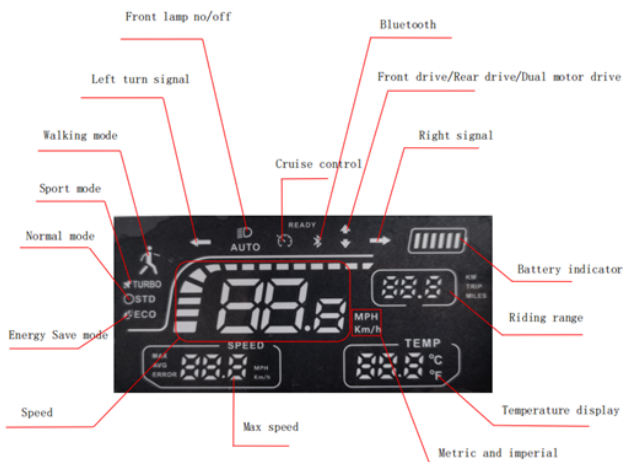

1. **Battery Indicator:** Six led light bars on the display show the battery level. It is recommended not to drain the battery by 100% and charge it before use.
2. **Left and Right Turn Signal:** The left and right turn signals indicate the corresponding lower turn light flash while you are steering left or right.
3. **Double-drive mode:** Double-click headlight switch to shift to a dual-drive mode. [Applicable only for Dual Motor Models]
4. **Bluetooth connection:** The Display board has a Bluetooth symbol, indicating the scooter is connected to mobile Bluetooth and app functions are active.
5. **Cruise Control:** Turn on the cruise speed function by holding down the accelerator till you hear a beep. Once the cruise control is active you can release the acceleration handle, the vehicle will continue to ride at a uniform speed. Cruise Control gets deactivated if you brake or press the acceleration bar again.
6. **Light Symbol:** After the vehicle is powered on, press the headlight switch once to switch on all the lights. A light symbol appears on the display when all the lights of the vehicle are turned on.
7. **Pedestrian mode:** Walking mode symbols on the instrument display when the vehicle speed is less than 6km/h.
8. **Maximum speed:** It shows the top speed of the whole ride.
9. **Current speed:** The Display shows the current speed.
10. **Single Mileage:** Show the current mileage during the ride, and automatically return to zero after turning off the power supply.

CONTROL BUTTONS

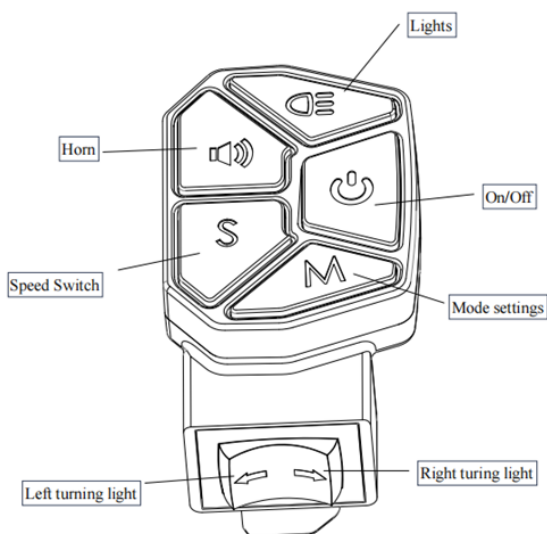

1. On/Off Switch: Press 2 seconds to turn the scooter On or Off.
2. Lights Switch: Click the switch to turn on all lights and click twice to turn off all the lights.
3. Horn Switch: Press and hold the horn switch for horn sound, and release the horn switch to stop the sound.
4. Speed Switch: Click the speed switch one to shift from Eco to standard speed mode. Click twice to switch to sports mode.
5. Mode Settings: Click on the mode switch to shift between metric and imperial modes.
6. Turning Switches: Press the left and right turning switches to turn on the corresponding turn indicator lights.

CHARGING YOUR GYROCOPTERS PLAID E-SCOOTER

- Ensure that the charging port is clean and dry.
- Make sure that there is no dust, debris or dirt inside the port.
- Plug the charger into a grounded wall outlet.
- Connect the cable with the power supply (100V~240V; 50 Hz/60 Hz).
- Align and connect the charging cable into the charging port of the Plaid (DO NOT FORCE OR BEND THE CHARGING CABLE AS IT MAY CAUSE THE PRONGS TO BEND OR BREAK).
- The charging indicator light on the charger itself should change to red, indicating that your device is now being charged.
- When the red indicator light on your charger changes to green, then your device is fully charged.
- After fully charging your Plaid E-Scooter, unplug the charger from your device and from the power outlet.




CAUTION

Only use the included charging cable and charger to charge your Plaid. Using any other charger may damage your Plaid.

PREPARING YOUR GYROCOPTERS PLAID E-SCOOTER


PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY

ATTACHING THE HANDLEBARS AND BRAKE HANDLE

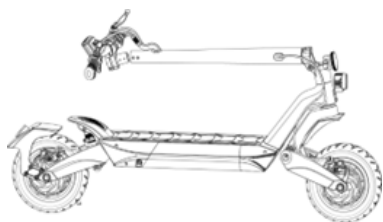

PINCH POINTS

Some parts of your Plaid can injure you if mishandled. Moving and folding parts can cut skin. Clamps and pivoting parts such as brake levers can pinch. When folding and unfolding your Plaid, please watch for pinch points where injury may be sustained. Do not leave your hand in these areas during the folding or unfolding process.

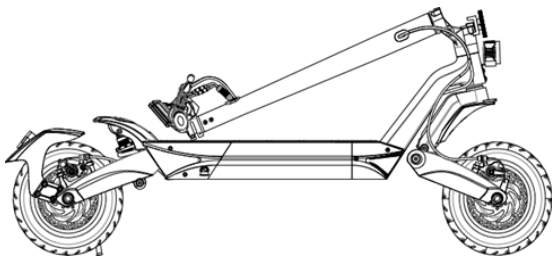

For safety reasons, the Gyrocopters Plaid E-Scooter will not accelerate unless it is already moving at least 1.8 mph (3 km/h). You must first kick off the ground and then press the throttle in order to ride the E-Scooter.

GYROCOPTERS PLAID E-SCOOTER APP



Scan to download the App for Android
(Google Play)




Scan to download the App for iOS
(App Store)

Go to the Google Play Store (Android) or the Apple APP Store (iOS) and search for “ MiniRobot ” to download and install the APP.


LOCKING MECHANISM

The locking mechanism is very crucial so ensure the locking is secured. Insert the handlebars in to the tube and lock it with 4 screws.

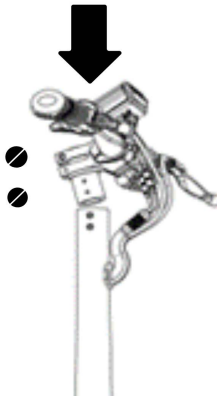

FOLDING & UNFOLDING

Turn the fold connector knob counter-clockwise until the fold connector buckle no longer holds the connector. Fold the handlebars and tubes to the rear fender.

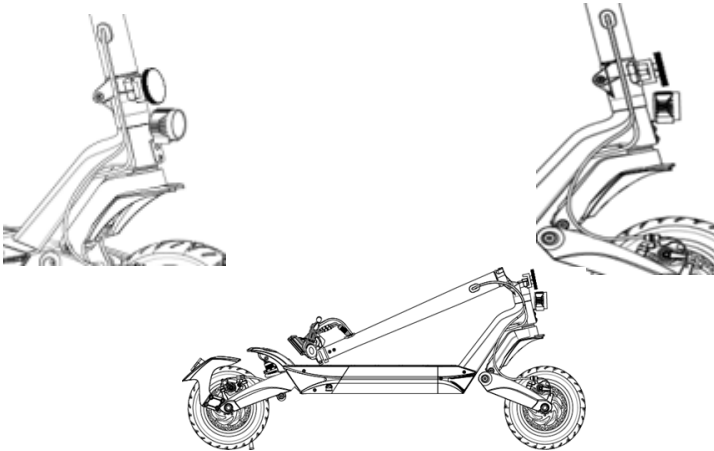

BEFORE RIDING

Before each use, the E-Scooter operator shall perform the pre-operation checks as specified below:

- The area that the unit is to be operated in is safe and suitable for safe operation.
- The braking system is functioning properly.
- All safety labels are in place and understood by the operator.
- Any and all axle guards, chain guards, or other covers and guards supplied by the manufacturer are in place and in serviceable condition.
- The tires are in good condition, inflated properly, and have sufficient tread remaining.

WARNING

Any E-Scooter that does not work properly can cause you to lose control and fall. Do not ride an E-Scooter with a part that is damaged. Replace the damaged part before riding.

It is important that you fully understand all the functions of your Gyrocopters Plaid E-Scooter. If these functions are not used correctly, you will not have full control of your Plaid.

Practice using the Gyrocopters Plaid E-Scooter at slower speeds in a flat, open area before taking it out into public areas.

PRE- RIDE CHECKLIST

Ensure that your Gyrocopters Plaid E-Scooter is in proper working order each time you ride. If a part of the Plaid does not function correctly, please contact our Customer Support Center.

- Ensure the battery is fully charged before riding your Gyrocopters Plaid E-Scooter.
- Please wear all appropriate safety gear before operating your E-Scooter.
- Make sure to wear comfortable clothes and flat, closed-toe shoes when operating your Gyrocopters E-Scooter.

RIDING YOUR PLAID E-SCOOTER

FAILURE TO FOLLOW ANY OF THE FOLLOWING SAFETY PRECAUTIONS MAY LEAD TO DAMAGE TO YOUR DEVICE, DAMAGE TO PROPERTY, VOID YOUR MANUFACTURER WARRANTY, AND MAY CAUSE SERIOUS BODILY INJURY OR DEATH.

OPERATING YOUR DEVICE: Make sure the device is fully charged before the first use. Before turning on your Gyrocopters Plaid E-Scooter, ride it like a normal kick scooter to get comfortable with the device before using it with the motor.

Press the power switch and turn on the vehicle power supply, confirm that the power is sufficient before riding.

Standing on the deck with one foot on deck, press the acceleration once the scooter has gained momentum put the other foot on deck/


Press the acceleration switch on the handle to accelerate, release the switch to decelerate.

Press the rear and front brakes at the same time in case of an emergency, braking with only the front brake may cause an accident.

When turning, please slow down and turn the handlebars slowly.

As you get comfortable on your Gyrocopters Plaid E-Scooter, you will notice it becomes easier to maneuver. Remember at higher speeds, it is necessary to shift your weight when making turns to maintain your stability.

Prepare to brace yourself if you encounter bumps or uneven surfaces. If necessary, dismount your Plaid and carry it to a safe operating surface.

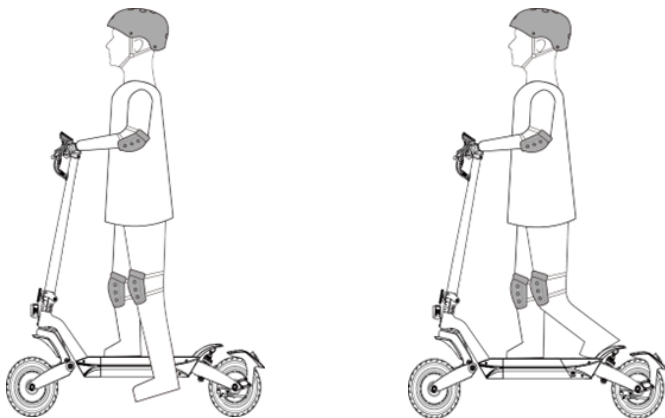

SPEED AND WEIGHT LIMITATIONS

Speed and weight limits are set for your own safety. Please abide by the limits listed here in the manual.

- Maximum Speed: 18 mph
- Maximum Supported Weight: 264 lbs
- Minimum Supported Weight: 44 lbs



WARNING

Riding the Plaid while exceeding the weight limit may increase the possibility of injury or product damage.

OPERATING RANGE

The Gyrocopters Plaid E-Scooter can travel up to 18 miles on a fully charged battery under ideal riding conditions. The following are some of the major factors that will affect the operating range of your device:

- **Terrain:** Operating range is highest when riding on a smooth, flat surface. Riding uphill and/or on rough terrain will reduce the operating range significantly.
- **Weight:** A lighter user will have a higher operating range than a heavier user.
- **Ambient Temperature:** Please ride and store the E-Scooter in recommended temperatures. This will increase operating range, battery life, and overall performance of your device.
- **Speed and Riding Style:** Maintaining a moderate and consistent speed while riding produces maximum operating range. Traveling at high speeds for extended periods of time, frequent starts and stops, and idling will decrease operating range.



WARNING

Proper use of your brake is vital to ensure safe, efficient stopping. To avoid misuse and potential injury, do not apply sudden or excessive force to your brake. Apply the brake gradually and give yourself enough room to come to a complete stop safely.

SAFETY ALERTS

If a system error occurs or an improper operation is performed while riding your Gyrocopters Plaid E-Scooter, the device will alert the user in a variety of ways.

The following are common occurrences that will produce safety alerts. These notices should not be ignored and appropriate action should be taken to correct any improper operation, failure, or errors.

- Prohibited riding surfaces (uneven, too steep, unsafe, etc.)
- Battery voltage is too low.
- The E-Scooter is still charging.
- The E-Scooter is overheating, or the motor temperature is too high.
- When the battery is about to run out of power, the battery icon will flash.
- If any or both tires are blocked, the device will stop after 10 seconds.
- When the battery level has depleted below protection mode, the motor will power off after 15 seconds.
- If a high discharge current is produced during use (such as riding up a steep slope for a long period of time), the motor will shut off after 15 seconds.

WARRANTY

From the date of purchase the customer is eligible for 90 days limited manufacturer warranty. Manufacturer warranty does not cover any physical /accidental damage due to improper usage. The warranty does not cover normal wear and tear , wheel, fender, or any other physical damage or water/liquid damage to your parts and unit.

For warranty information, please visit us at www.imgadgets.com or email us at customercare@gyrocopters.ca



@gyrocopters



@imgadgets



www.imgadgets.com