


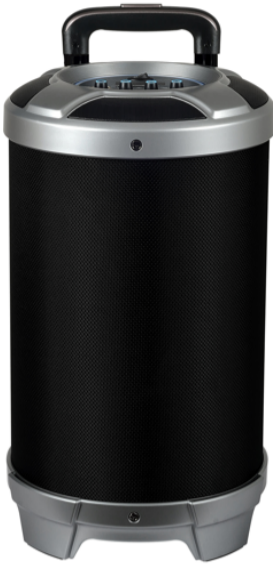 
尺寸: A5 (148mm X 210mm)

双面印刷

正面





 



反面





**PartyRckr
Karaoke Bluetooth Speaker**

USER'S MANUAL

 Subwoofer  AUX  Portable  2 Wireless Microphones  USB  LED Lights  Wireless  Memory Card

Features


- 2.1 channel portable Bluetooth Speaker with 8-inch subwoofer
- Output: very clear sound and heavy bass, with dynamic sound effects
- A2DP Bluetooth: wirelessly stream music from any Bluetooth-enabled device
- Secure and simple pairing for user-friendly operation
- 10 meters operating range
- USB and Micro SD card inputs
- FM radio
- Includes 2 Microphone input
- With line-in function, it is suitable for PC, MID, TV and other audio devices
- Side panel control for volume and bass
- Built-in lithium rechargeable battery 4400mAh

Specification:
Product size: 318(L)*265(W)*487(H)MM
Horn Size: 4 inch
Subwoofer Size: 8 inch
Horn output: 9.5W*2,4Q
Subwoofer output: 30W,4Q
Battery Capacity: 4400mAh
Frequency Response: 80Hz-16KHz
Power supply: DC5V
USB/Micro SD supporting: MAXIMUM 32GB

Accessories:
Adapter, charge cable, audio cable, 1 wireless microphone, user manual

Control Panel:

1.Mic input 1
2.Mic input 2
3.Previous
4.Play/Pause
5.Mode (Switch to Bluetooth, USB disk, Micro SD, FM and AUX-IN state)
6.USB port
7.Aux-in jack
8.Charging jack
9.Mic volume knob
10.Mic Echo knob
11. Bass knob
12. Volume knob
13.LED display
14.On/Off button
15.Micro SD slot
16.Next

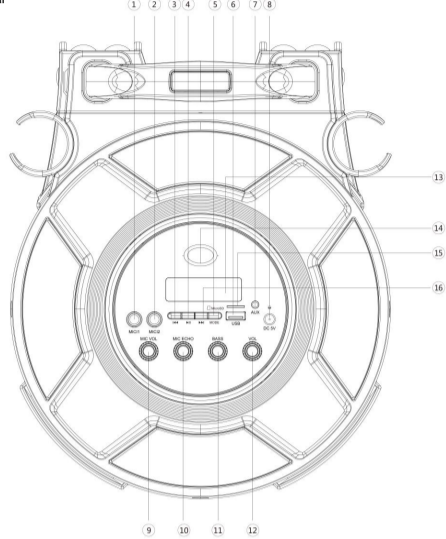

Music Playing:

- Turn the Power button to "ON"
- Insert Micro SD card or USB flash disk into slot, audio files will play automatically.
- Under playing mode, short press PREV or NEXT to select songs you like, long press to fast forward or rewind songs
- Spin VOL knob to adjust the volume up or down. Spin "Bass-vol" knob to adjust the bass volume
- Press PLAY/PAUSE to play or pause
- Please turn the Power button to "OFF" while not using

Use Bluetooth Function:

- Turn the power button to "ON", the LED screen will display BT and beep twice, flashing quickly
- Activate Bluetooth on your Bluetooth-enabled device and search for the name "PartyRckr", then connect to it. The BT on the screen will stop flashing and beep three times once connected successfully.
- Play the music from your Bluetooth-enabled device and enjoy.
- Press PREV or NEXT button on the device or on your Bluetooth-enabled device to select songs you like.
- Press play/pause button on the device or on your Bluetooth-enabled device to play/pause the music.
- Use the Volume Knob to adjust the volume up or down, or adjust the Bluetooth-enabled device's volume.
- Use the "Bass knob" to adjust bass.

Use FM Radio:

- Under the FM radio state, the audio cable provided can work as an antenna. Please insert the audio cable to get the best FM signal before using.
- Turn the power button to "ON" then press the "MODE" button to switch to FM. (The order of the mode is Bluetooth, USB, Micro SD, FM and AUX-IN)
- Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.
- Press PREV or NEXT button to change the stored FM channel.

AUX-IN:
For other compatible music devices like your MP3/MP4 players, use the supplied audio cable to connect from the device's "Line Out" to the "Aux In" of this device. Then press the "MODE" button to switch to the AUX-IN state.
When using an external device, all functions can be controlled by the external device.

Use Wired or Wireless Microphones: This product comes with 2 wireless microphones included with the speaker. Two additional wired microphones (not included) can be used with the speaker using the "Mic 1" and "Mic 2" inputs. To use the wireless microphones included, use the "ON" button on each microphone to turn it on and start singing! Wireless microphones need two AA batteries (not included) each to work. Both wired and wireless microphones can work together. The Microphone Volume and Microphone Echo can be adjusted by the "MIC-VOL" and "MIC-ECHO" knobs.

Charging:

- Plug the provided charging cable into the charging jack, connect the other end to the provided adapter. The charging indicator will keep flashing. (When playing music while charging, please put the volume to middle, because for some songs with a heavy bass, the adapter may not support high currents temporarily under the maximum volume)
- Charge time is approx. 10 hours. When charging is full, the indicator light will switch off.
- To prolong the life of battery, **DO NOT CHARGE CONTINUOUSLY FOR LONGER THAN 15 HOURS.**