

128g 铜版纸, A6 (105x148mm), 三折页 单黑

IMGADGETS WAVEBLSTR Bluetooth Karaoke Speaker



User Manual

For correct operation of the speaker, please read this manual carefully before using. We are not responsible for any consequences caused by oversight of this manual.

FEATURES:

1. 4.1-inch New Portable Bluetooth Speaker: Delivers clear sound with powerful bass
2. TWS function: Pair two speakers together wirelessly to experience True Stereo Sound
3. A2DP Bluetooth: Wirelessly stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
4. Secure simple pairing for user-friendly operating
5. 10 meters operating range
6. USB Port
7. FM radio
8. With line-in function: Suitable for PC, MID, TV and other audio devices
9. Built-in lithium rechargeable battery 7.4V, 4400mAh
10. With a strong handle making it easy for transport


SPECIFICATION:

- Bluetooth version: V4.2+BR
- Horn Size: 2.5 inch*4
- Horn output: 5W*4, 4Ω
- Subwoofer Size: 5.25 inch
- Subwoofer output: 800W, 4Ω
- Battery Capacity: 7.4V, 4400mAh
- Frequency Response: 80Hz-15kHz
- Product size: 215(L) * 215(W) * 387 (H) mm

Accessories:

- IMGadgets WaveBlstr Bluetooth Karaoke Speaker
- Charging cable
- Audio cable
- User Manual
- 1 wired microphone

Product Overview:

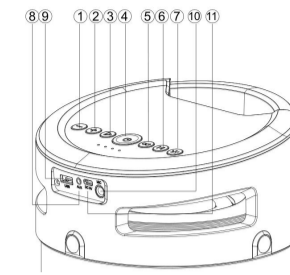

1. Backward/Volume down
2. Forward/Volume up
3. Play/Pause
4. Power On/Off
5. TWS button
6. Mode (Switch Bluetooth, USB disk, FM and AUX-IN state)
7. Light control
8. AUX In
9. USB Port
10. Wired Mic Port
11. Charging jack

How to Connect via Bluetooth:

1. Turn the power button to "ON". The LED light will turn blue and twinkle quickly, then enter Bluetooth mode
2. Turn on the Bluetooth on your mobile phone and search for device name "WaveBlstr" then connect it. The blue LED light will keep lighting and make a tone once connected
3. Play the music from your mobile phone and enjoy
4. Press Forward or Backward button on the speaker or on your phone to select songs you like
5. Press Play/Pause button on the speaker or on your phone to play/pause the music
6. Long press Forward or Backward button to adjust volume up and down, or adjust your phone's volume
7. Long press Play/Pause button to activate voice assistant SIRI/GOOGLE ASSISTANT

How to play music from USB port:

1. Turn the Power button to "ON"
2. Insert a USB flash disk into the slot, the speaker will play the stored music automatically
3. Under playing mode, short press Forward or Backward button to select songs you like, long press to adjust the volume up and down
4. Press Play/Pause to play or pause

Note: Under Bluetooth playing mode, inserting a USB flash disk will disconnect the Bluetooth and switch to playing music from the USB. You can press the MODE button to switch to Bluetooth mode again

How to play music under FM Radio:

1. Under FM radio mode, the audio cable provided works as an antenna. Please Insert the audio cable to get the best FM signal before using
2. Turn the power button to "ON", press the "MODE" button to FM mode
3. Under FM mode, short press "Play/Pause" button to auto search the FM Channel and, pressing the "Play/Pause" again to store it automatically
4. Short press Forward or Backward button to change the stored FM channel, long press to adjust the volume

How to use the TWS Function:

1. Turn on two identical speakers you want to pair, both under BT mode. You only need to connect to one of the two units
2. Press the TWS button, the speaker will make a tone to start pairing. A tone will be audible again once successfully paired
3. Connect to your desired Bluetooth enabled device to play music by the two paired speakers, creating a more powerful surround sound effect
4. When you want to exit the TWS mode, press TWS button again
5. Once two units are paired with TWS, when they both are turned on next time within effective range, they can be automatically paired again

Note:

1. Users need to make TWS connection first, then make Bluetooth connection with the mobile phone
2. Under TWS mode and Bluetooth connected, when the user long presses the TWS button, both the TWS connection and Bluetooth connection will be disconnected

AUX-IN:

1. For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this speaker to enjoy your music
2. Under any playing mode, when you use the audio cable to connect the speaker, it will automatically switch to the AUX mode
3. Under AUX mode, all functions can be controlled by external device

Note:

1. When Bluetooth is connected with your mobile phone, there will be a battery icon indicating the speaker battery and volume on your phone
2. Press the MODE button to switch the different modes. **The order is Bluetooth, USB disk, FM radio and AUX-IN**
3. When the speaker is connected via Bluetooth on a mobile device, the user can long-press the TWS button to disconnect the previous device, then make a Bluetooth connection with another mobile device
4. Default volume is at 40% status of max volume
5. The speaker will turn off after 10 mins of no use

How to charge:

1. Power off the speaker, put the provided charging cable into the charge slot of the speaker, connect the other end to a PC or wall outlet with a 5V output
2. The charging time is approximately 5-8 hours. The light is red while charging, and the indicator light will switch off when fully charged.
(When playing music while charging, please only turn the volume halfway because for some songs with heavy bass, the charger may not be able to sustain the high current under the maximum volume)

Warranty Details

IMGadgets offers 90 days warranty on all products. 90 days warranty commences from the date of purchase.

Please retain your payment receipt/order#, and original packaging for proof of purchase and to claim your warranty/repairs. All defective merchandise is eligible for repair within 90 days of the original purchase date.

This warranty **DOES NOT** cover normal wear and tear or any other physical damage or liquid damage caused to your parts/unit by improper usage or handling.

Warranty does not cover over-charging, or damages due to improperly maintaining the battery installed in the unit. Opening and altering the device will void any original manufacturing warranty.

By opening your unit, you acknowledge that you assume all responsibility for your device, and its functionality or lack thereof. We assume no liability for loss or damages caused by or improper usage. Our warranty does not cover when used unsafely or out of limits.

IMGadgets will only accept returns or unused and undamaged products that are returned in the original packaging within 14 days of your purchase date.

IMPORTANT: This warranty does not cover physical damages resulting from accident, misuse, or abuse, lack of reasonable care, the affixing of any attachments, stunts, tricks, loss of parts, over-load or subject in the product to any but the specified voltage. Use of unauthorized replacement parts will void warranty. This warranty is only eligible for the purchase of the initial IMGadgets WaveBlstr Karaoke Speaker. No responsibility is assumed for any special, incidental, or consequential damages.

Contact Details

Gyrocopters e-mobility systems: www.gyrocopters.ca
For Support: customercare@imgadgets.com