



GYROCOPTERS

Plaid e-Scooter Instruction Manual

Do not use this product without carefully reading this instruction manual and understanding the performance of electric scooter.

Please keep the instruction manual properly.

HELMETS SAVE LIVES!

Always wear a properly fitted helmet that complies with CPSC or CE safety standards when you ride your Gyrocopters Plaid e-scooter.



Correct Fitting:
Make sure your
helmet covers your
forehead.



Incorrect Fitting:
Forehead is exposed
and vulnerable to
serious injury.



WARNING

As with all mechanical devices, the Gyrocopters Plaid E-Scooter is subject to wear and high stresses. Different materials and components may react to wear or fatigue in different ways. If the design life of a component has been exceeded, it may suddenly fail, possibly causing injuries to the rider. Any form of crack, scratch, or change of coloring in highly stressed areas indicate that the life of the component has been reached and it should be replaced. Do not ride in an abusive manner.



CAUTION

In this manual, the CAUTION sign indicates a hazardous situation which, if not avoided, can cause minor or moderate injury.



WARNING

In this manual, the WARNING sign indicates a hazardous situation which, if not avoided, can cause serious injury or death.



WARNING

Great care should be taken with the Gyrocopters Plaid E-Scooter while folding and unfolding it. Moving and folding parts can cut skin or pinch if mishandled.

DO NOT RIDE YOUR SCOOTER WITHOUT THE STEERING COLUMN, FOLDING HINGE, AND HANDLEBARS SECURELY LOCKED IN PLACE.

WARNING

PLEASE READ THE OPERATION MANUAL THOROUGHLY.

Neglecting to adhere to the fundamental instructions and safety measures outlined in the operation manual can result in various adverse outcomes, including harm to your Gyrocopters Plaid E-Scooter, damage to property, severe bodily injuries, and even loss of life.

Thank you for purchasing the Gyrocopters Plaid E-Scooter. Please read all instructions carefully before using it and retain this manual for future reference.

- It is crucial to acquire the knowledge of riding the Gyrocopters Plaid E-Scooter safely in order to prevent collisions, falls, and loss of control.
- Familiarize yourself with the operation manual and instructional videos to learn how to ride the Gyrocopters Plaid E-Scooter effectively.
- Users bear full responsibility for any repercussions resulting from disregarding the warning contents or improper operations. Gyrocopters cannot be held accountable for such incidents..

ATTENTION:

1. It is important to exclusively utilize the provided charger from Gyrocopters when charging this E-Scooter.
2. The operating temperature range of the charger is 32°F - 104°F (0°C - 40°C).
3. The operating temperature range of the Plaid is 32°F - 104°F (0°C - 40°C).
4. Avoid riding on surfaces that are icy or slippery.
5. Prior to riding, make sure to carefully read the operation manual and warning labels.
6. Store the Gyrocopters Plaid E-Scooter in a well-ventilated area that is dry.
7. When transporting the Gyrocopters Plaid E-Scooter, take precautions to prevent forceful collisions or impacts.

LOW TEMPERATURE WARNING:

Cold temperatures can impact the lubrication of internal moving parts within the E-scooter, resulting in heightened internal resistance. Moreover, the battery's discharge capacity and overall capacity will be noticeably reduced. Exercise caution when riding in chilly temperatures (below 40°F/4°C). This practice may elevate the likelihood of mechanical malfunctions in the Gyrocopters Plaid E-Scooter, potentially causing harm to your device, property, severe bodily injury, or even loss of life.

SAFETY INSTRUCTIONS

- Keep the Gyrocopters Plaid E-Scooter away from heat sources, direct sunlight, moisture, water, and any other liquids.
- Refrain from operating the Gyrocopters Plaid E-Scooter if it has been exposed to water, moisture, or any other liquids to prevent the risk of electric shock, explosion, personal injury, and damage to the E-Scooter.
- Avoid using the Gyrocopters Plaid E-Scooter if it has been dropped or subjected to damage.
- It is advised to have repairs to electrical components performed solely by the manufacturer. Improper repairs can invalidate the warranty and potentially endanger the user.
- Do not intentionally puncture or damage the external surface of your Gyrocopters Plaid in any way.

- Ensure that the device remains free from dust, lint, or other debris.
- Refrain from using the Gyrocopters Plaid E-Scooter for any purpose other than its intended use. Engaging in such activities may result in damage to the E-Scooter, property damage, personal injury, or even loss of life.
- This product is not a toy and should be kept out of the reach of children.
- Avoid subjecting the batteries to excessive heat, including direct sunlight or open flames.
- Exercise caution to prevent hands, feet, hair, body parts, clothing, or any similar objects from coming into contact with the moving parts and wheels while the Gyrocopters Plaid Electric scooter is in operation.

- Refrain from operating the Gyrocopters Plaid E-Scooter or allowing others to do so until the user has fully comprehended all instructions, warnings, and safety features outlined in this manual.
- If you have a medical condition that could potentially impact your ability to use the Gyrocopters Plaid E-Scooter, it is advisable to consult with your doctor.
- Individuals with head, back, neck ailments, or previous surgeries in those areas are advised against using the Gyrocopters Plaid E-Scooter.
- Avoid operating the E-Scooter if you are pregnant or have a heart condition.
- Individuals with mental or physical conditions that may increase their vulnerability to injury or hinder their ability to recognize, comprehend, and execute all safety instructions, as well as assume the inherent hazards of operation, should refrain from using the Gyrocopters Plaid E-Scooter.

WARNING

Extended exposure to UV rays, rain, and environmental conditions can potentially harm the enclosure materials. To mitigate this risk, it is recommended to store the scooter indoors when it is not in use.

INTRODUCTION

The Gyrocopters Plaid E-Scooter is designed as a personal transporter. Failure to adhere to the instructions provided in this manual while operating the scooter may result in damage to the E-Scooter itself or cause bodily injury.

 
PACKAGE CONTENTS

- Gyrocopters Plaid Electric Folding Scooter
- 4 screws, 1 X internal hexagon wrench
- Charger & Charging Cable
- Instruction Manual
- Review card

Your Gyrocopters Plaid E-scooter serial number is stamped on the bottom of the E-Scooter platform.

SAFETY PRECAUTIONS

- Employing common sense is the fundamental principle for safe riding.
- It is essential to familiarize yourself with the specific laws and regulations pertaining to the use of electric transportation devices on public roads in your locality or country. Consult with local officials to ensure compliance with the relevant traffic laws.
- Gyrocopters holds no responsibility for any tickets or violations issued to riders who fail to comply with local laws and regulations.
- Prioritize your safety by always wearing a helmet that meets the safety standards of CPSC or CE. Wearing a helmet can provide vital protection in the event of an accident, potentially preventing severe injuries or even loss of life.
- Ensure that the rider is wearing all the right gears for prevention and protection during the ride.

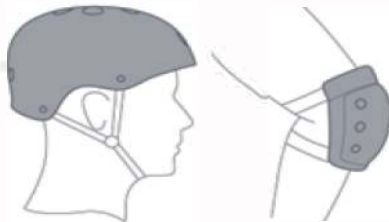

- Adhere to all local traffic laws, including respecting red and green lights, following one-way streets, stopping at stop signs, and yielding to pedestrians at crosswalks.
- Ride in the same direction as the traffic flow, not against it.
- Adopt a defensive riding approach by anticipating unexpected situations.
- Give pedestrians the right-of-way and maintain a safe distance from them. Notify them in advance if you plan to pass them from behind.
- Reduce your speed when approaching street intersections and carefully check both left and right before crossing.
- Your Gyrocopter Plaid E-Scooter is equipped with reflectors for enhanced visibility.
- When riding in low-visibility conditions, activate your LED headlight and wear brightly colored, reflective clothing to ensure visibility to others.
- Avoid riding beyond your proficiency level. Make sure you have adequately practiced using all functions and features of your Gyrocopters Plaid Electric Scooter.
- Exercise caution with speed, as increased velocity corresponds to heightened risk. When traveling at higher speeds, even minor bumps can result in substantial impacts, raising the risk of injury.
- Refrain from riding with pets on the scooter.
- Before mounting your Gyrocopters Plaid E-Scooter, ensure that it is positioned flat on level ground for stability and balance.
- Avoid operating your Gyrocopters Plaid E-Scooter in or near areas with puddles of water, mud, sand, stones, gravel, debris, or rough and uneven terrain.
- The E-scooter is designed for use on flat and even paved surfaces. If you encounter uneven pavement, it is recommended to lift your Gyrocopters Plaid E-Scooter over the obstruction.
- Refrain from riding in inclement weather conditions such as snow, rain, hail, sleet, on icy roads, or in extreme hot or cold temperatures.
- Maintain a bent-knee position when riding on bumpy pavement to absorb shocks and vibrations, thereby aiding in maintaining balance.
- If you are unsure about the suitability of a specific terrain, err on the side of caution by dismounting and carrying your Gyrocopters Plaid E-Scooter. Prioritize safety at all times.
- Refrain from riding your Gyrocopters Plaid E-Scooter while under the influence of drugs or alcohol.
- Avoid riding your scooter in drowsy state.
- Do not attempt to ride your Gyrocopters Plaid Scooter off curbs, ramps or engage in activities resembling skateboarding, such as operating in a skate park or empty pool.
- Treat your scooter with care Gyrocopters of injury Plaid or E damage. - Scooter with care and refrain from any abuse which will void the manufacturer warranty.
- Exercise caution when making sharp turns, especially when traveling at high speeds.
- Adhere to the maximum weight limit of 330 lbs (150 kg) and avoid exceeding it.
- Maintain a safe distance for braking when riding in wet conditions.
- Exercise caution when making sharp turns, especially when traveling at high speeds.

WARNING

Ensuring the safe and effective stopping of your Gyrocopters Plaid E-Scooter relies on the proper utilization of the brake system. To prevent misuse and potential injury, refrain from applying sudden or excessive force to the brakes. Instead, gradually engage the brakes and allow yourself ample distance to come to a complete stop in a secure manner.

WARNING

There may be additional risk of injury if you use your E-Scooter incorrectly. This includes, but is not limited to:

- Jumping your E-Scooter
- Riding over debris or obstacles
- Performing stunts
- Riding fast
- Racing other riders
- Riding in an unusual manner

The aforementioned examples add stress to each part of your E-Scooter and can lead to long term damage of the device. Damage to your E-Scooter can lead to an accident or increase your risk of injury. To decrease your risk of injury, use your E-Scooter correctly.

WARNING

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools, or other bodies of water. Always wear shoes, and never allow more than one rider at a time.

CARE & MAINTENANCE

- To prevent damage to the internal circuitry of the Plaid, avoid exposing it to liquids, moisture, or humidity.
- Refrain from using abrasive cleaning solvents when cleaning the Plaid.
- Avoid subjecting the Gyrocopters Plaid E-Scooter to extremely high or low temperatures, as this can negatively impact its lifespan, battery performance, and certain plastic components.
- Do not dispose of the Gyrocopters Plaid E-Scooter in fire, as it may result in explosion or combustion.
- Take care to prevent the Gyrocopters Plaid E-Scooter from coming into contact with sharp objects, as this can cause scratches and damage.
- Avoid dropping the Gyrocopters Plaid E-Scooter from high places, as it may cause harm to the internal circuitry.
- Do not attempt to disassemble the Gyrocopters Plaid E-Scooter.
- Only use the charger provided by Gyrocopters.
- Utilize only manufacturer-approved replacement parts for the Gyrocopters Plaid E-Scooter.

WARNING

Avoid using water or other liquids for cleaning. If water or other liquids enter the Plaid, it will cause permanent damage to the internal components.

WARNING

Users who disassemble the Plaid without permission from Gyrocopters will void the warranty.

BATTERY CARE / MAINTENANCE

BATTERY SPECIFICATIONS

Battery Type: Rechargeable lithium-ion

Battery Charge Time: Up to 5 hours

Battery Voltage: 48V

Battery Capacity: 10Ah

Working Temperature: 32°F - 104°F

Charging Temperature: 32°F - 104°F

Storage Time: 1 year

Storage Temperature: 32°F - 104°F

Storage Humidity: 5% - 95%

BATTERY MAINTENANCE

- The lithium-ion battery in the Gyrocopters Plaid E-Scooter is integrated and should not be disassembled or separated from the E-Scooter.
- Only use the provided charger from Gyrocopters when charging the E-Scooter. The use of any other charger or cable can cause damage to the E-Scooter, overheating, and fire risk and will void the warranty.
- Do not connect or attach the Gyrocopters Plaid E-Scooter or its battery directly to a power supply plug or a car's cigarette lighter.
- Avoid placing the Gyrocopters Plaid E-Scooter near a fire or in direct sunlight. Excessive heat can damage or ignite the battery inside the device.
- If the battery fails to recharge within the specified charging time, discontinue the charging process.
- To promote the preservation of natural resources, ensure proper recycling or disposal of batteries. The Gyrocopters Plaid E-Scooter contains lithium-ion batteries, which may be subject to local, state, or federal regulations regarding disposal. Contact your local waste authority for guidance on available recycling and disposal options.
- Do not modify, change or replace the battery of your device. The battery contains hazardous substances.
- Do not use your Plaid e-scooter if the battery emits any odor, overheats or shows sign of leakage or damage.
- Keep battery out of reach of children and animals.
- If you do not utilize your Plaid scooter for an extended period, it is recommended to fully charge the battery every 90 days to prevent self-discharge and potential damage.

WARNING

Failure to follow the safety precautions listed below could lead to serious bodily injury or death. Seek immediate medical assistance if you are exposed to any substance that is emitted from the battery

SPECIFICATIONS

The Project	Content	Parameters
Vehicle parameters	Expand open size: l x w x h	47.5" x 25.3." x 51"
	Folding Size: l x w x h	47.5" x 25.3" x 20.5
	Net weight for 10Ah Standard Plaid	23.6 kg
	Net weight for 20Ah Long range Plaid	24.7kg
	Top speed for 10Ah Standard Plaid	Up to 26 mph (42km/h)
	Top speed for 20Ah Long range Plaid	Up to 28 mph (45km/h)
	Range for 10Ah Standard Plaid	Up to 35 km
	Range for 20Ah Longrange Plaid	Up to 60 km
	Climbing ability	30 degrees
	Adapto the terrain	All terrains
	Operating temperature	-10~40 degrees
	Storage temperature	-20~40 degrees
	Waterproof rating	IP54
	Charging time	8 ~ for 10 hours
Battery parameters	Rated voltage	48V
	Rated capacity Standard Plaid	10Ah
	Rated capacity Long Range Plaid	20Ah
Motor parameters	Motor dimensions	In the 10 inches
	Maximum torque	32N
	Rated voltage	48V
	Rated power	800W
	Maximum power	1000W
	Motor control mode	The DC flow is brushless
Brake	Brake braking mode	Front and rear mechanical disc brake + power off
	Brake stop distance	<4.57 m
Outer fetus	Outer fetal form	10X2.75X6.5 vacuum tire
	Outer tire pattern	Off-road pattern or road pattern
Charger	Output power	84W
	Input the voltage	100V~240V
	Output voltage	54.6V
	Output current	2.0A
	Maximum load	150KG

 
PARTS LIST

A. Plaid E-Scooter


B. Screws x 4

C. Charger + Charging Cable

D. Hex Key

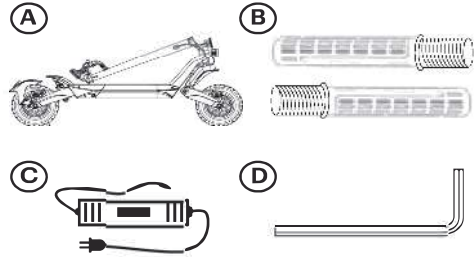

GYROCOPTERS PLAID DIAGRAM

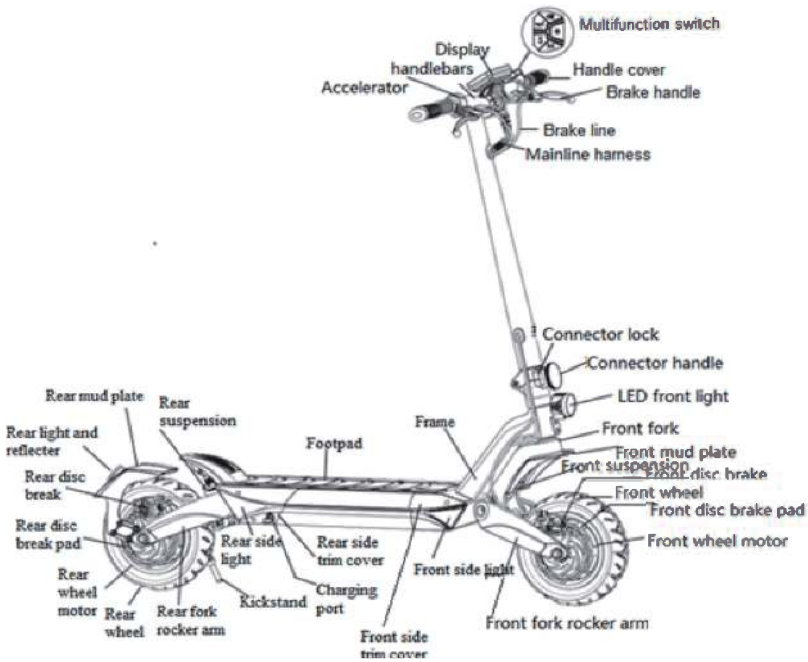 

FEATURES/PARTS

 


LCD DISPLAY



1. **Battery Indicator:** The display features six LED light bars that indicate the battery level. It is advisable not to fully deplete the battery and recharge it before use.
2. **Turn Signal:** The left and right turn signals activate the corresponding lower turn lights when you steer left or right.
3. **Bluetooth Connection:** The display board displays a Bluetooth symbol when the scooter is connected to a mobile device via Bluetooth, enabling app functions.
4. **Cruise Control:** Activate cruise control by holding down the accelerator until you hear a beep. Once cruise control is engaged, you can release the acceleration handle, and the vehicle will maintain a constant speed. Cruise control deactivates when you brake or press the acceleration bar again.
5. **Light Symbol:** Press the headlight switch once after powering on the vehicle to activate all lights. The display will show a light symbol when all vehicle lights are turned on.
6. **Pedestrian Mode:** The instrument display shows walking mode symbols when the vehicle speed is below 6km/h.
7. **Maximum Speed:** Displays the highest speed reached during the ride.
8. **Current Speed:** The display shows the current speed.
9. **Single Mileage:** Indicates the distance traveled during the ride and automatically resets to zero when the power supply is turned off.

CONTROL BUTTONS

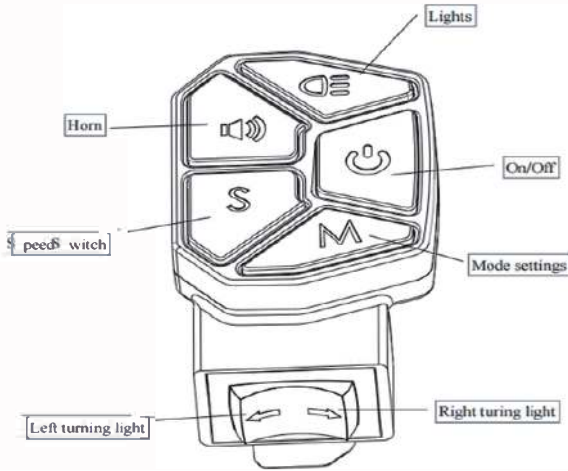

Power Button: Press and hold the power button for 2 seconds to turn the scooter on and off.

Light Button: Press the button once to activate all lights and press it again to deactivate the lights.

Horn Button: Press and hold the horn button to sound the horn, and release the button to stop the sound.

Speed Button: Press the speed button once to change the mode from Eco to Standard. Press twice to switch to Sports mode.

Mode Settings: Use the mode switch between metric and imperial modes.

Turn Signal Buttons: Press the left and right turn signal buttons to activate the corresponding turn indicator lights.

How to activate the Strobe light?

1. Press the Light Button once to activate the front lights.
2. Press the Light Button to turn off the light.
3. Press the Light Button once again to enable the front lights.
4. Press the Light Button to turn off the front lights.
5. Press the Light Button for the third time to activate the front strobe lights.

How to change the default speed mode on your Gyrocopters Plaid Electric Scooter?

1. Press the on/off button & the horn together.
2. Once the display changes to P11, Press the horn button twice to change the mode to P31.
3. If the display shows P30, Use the mode and speed buttons to choose speed modes as P31.
4. Press the horn button twice to set the new speed.

CHARGING YOUR GYROCOPTERS PLAID E-SCOOTER

- Ensure that the charging port is free from any dirt or moisture.
- Inspect the charging port for any dust, debris, or foreign objects and remove them if present.
- Plug the charger into a proper wall outlet.
- Connect the charging cable to the power supply (100V~240V; 50 Hz/60 Hz).
- Align the charging cable with the charging port of the Plaid E-Scooter and securely connect them without applying excessive force or bending the cable.
- The charging indicator light on the charger should turn red, indicating that the device is now being charged.
- Once the charging is complete, the indicator light on the charger will turn green.
- After fully charging your Plaid E-Scooter, disconnect the charger from both the device and the power outlet.

CAUTION

Only use the included charging cable and charger to charge your Plaid. Using any other charger may damage your Plaid.

PREPARING YOUR GYROCOPTERS PLAID E-SCOOTER

Please consider the following while preparing your Plaid e-scooter.



PINCH POINTS

 
Certain components of your Plaid E- scooter have the potential to cause injury if not handled properly. It's important to be aware of the following safety precautions:

Moving and folding parts have the potential to cut the skin. Exercise caution while handling these parts.

Be mindful of pinch points, particularly where clamps and pivoting parts, such as brake levers, are located. These areas can trap or pinch fingers if not handled with care.

When folding or unfolding your Plaid E- scooter, pay close attention to potential pinch points. Avoid placing your hand in these areas during the folding or unfolding process to prevent injury.

To ensure your safety, always exercise caution and be mindful of these potential hazards when interacting with your Plaid E- scooter.

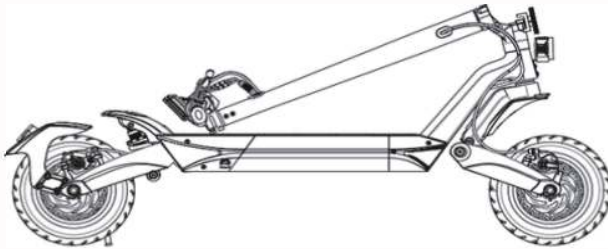

To ensure safety, the Gyrocopters Plaid E-Scooter has a feature that requires it to be moving at a minimum speed of 1.8 mph (3 km/h) before acceleration is enabled. To initiate the scooter's movement, you need to kick off the ground and then activate the throttle. This sequence ensures that the scooter is in motion before allowing acceleration, promoting a safe and controlled riding experience.

GYROCOPTERS PLAID E-SCOOTER APP



Scan to download the App for Android
(Google Play)



Scan to download the App for iOS
(App Store)

Go to the Google Play Store (Android) or the Apple APP Store (iOS) and search for " MiniRobot " to download and install the APP.

LOCKING MECHANISM

Properly securing the locking mechanism is of utmost importance for the safe operation of your Gyrocopters Plaid E-Scooter. To do so, follow these steps:

Insert the handlebars into the designated tube.

Align the handlebars with the desired position and ensure they are inserted fully.

Secure the handlebars by using the provided screws. Make sure to tighten all four screws securely.

 
Double-check the tightness of the screws to ensure a firm and stable connection.

By following these steps and ensuring the handlebars are securely locked in place, you can ride your Gyrocopters Plaid E-Scooter with confidence, knowing that the handlebars are properly attached.



FOLDING & UNFOLDING

Turn the fold connector knob counter-clockwise until the fold connector buckle no longer holds the connector. Fold the handlebars and tubes to the rear fender.

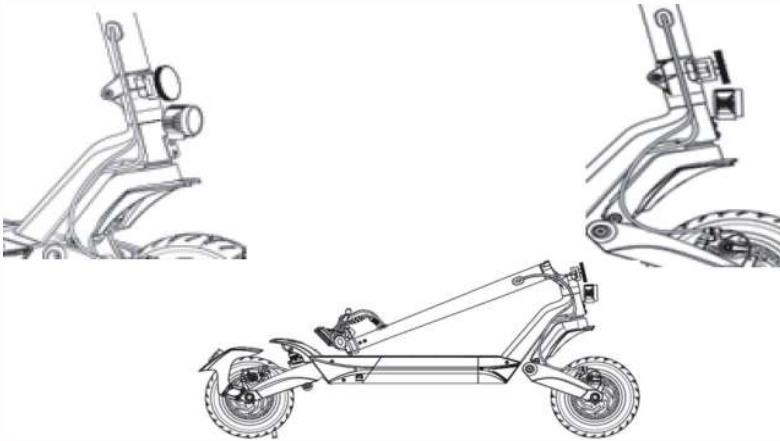

BEFORE RIDING

Prior to every use, it is essential for the Plaid E-Scooter operator to conduct pre-operation checks as outlined below:

- Ensure that the operating area is safe and appropriate for the E-Scooter's operation.
- Verify that the braking system is in proper working order.
- Confirm that all safety labels are present and clearly understood by the operator.
- Inspect and ensure that any provided axle guards, chain guards, or other covers and guards from the manufacturer are correctly installed and in good working condition.
- Check the tires for signs of damage, ensure they are adequately inflated, and have sufficient tread depth remaining.
- By diligently performing these pre-operation checks, you can enhance the safety and reliability of your E-Scooter during each use.
- Before using your E-Scooter, it is essential to wear the necessary safety gear.
- Ensure that you are dressed in comfortable clothing and wearing flat, closed-toe shoes when operating your Gyrocopters E-Scooter.



WARNING

Any E-Scooter that does not work properly can cause you to lose control and fall. Do not ride an E-Scooter with a part that is damaged. Replace the damaged part before riding.

RIDING YOUR PLAID E-SCOOTER

FAILURE TO COMPLY WITH ANY OF THE FOLLOWING SAFETY PRECAUTIONS MAY RESULT IN DEVICE DAMAGE, PROPERTY DAMAGE, VOIDING OF YOUR MANUFACTURER WARRANTY, AND SERIOUS BODILY HARM OR DEATH.

OPERATING YOUR DEVICE:

Ensure that your device is fully charged before the initial use. Familiarize yourself with the Gyrocopters Plaid E-Scooter by riding it as a regular kick scooter before engaging the motor.

Press the power switch to activate the vehicle's power supply. Verify that the power level is sufficient before riding.

Stand on the deck with one foot and gain momentum by pushing off with your foot. Once the scooter is moving, place your other foot on the deck.

 
To accelerate, press the acceleration switch on the handle. Release the switch to decelerate.

In case of an emergency, apply both the rear and front brakes simultaneously. Using only the front brake can lead to accidents.

When making turns, reduce your speed and gradually steer the handlebars.

As you become more comfortable with your Gyrocopters Plaid E-Scooter, you will find it easier to maneuver. Remember to shift your weight while making turns at higher speeds to maintain stability.

Be prepared to brace yourself when encountering bumps or uneven surfaces. If necessary, dismount your Plaid and carry it to a safe operating surface.

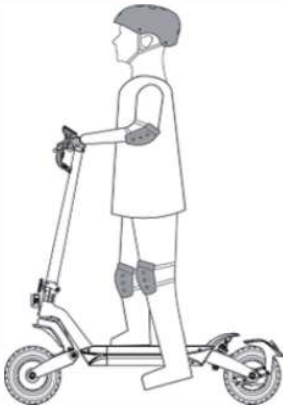

SPEED AND WEIGHT LIMITATIONS

Speed and weight limits are set for your own safety. Please abide by the limits listed here in the manual.

- Maximum Supported Weight: 264 lbs
- Minimum Supported Weight: 44 lbs



WARNING

Riding the Plaid while exceeding the weight limit may increase the possibility of injury or product damage.

OPERATING RANGE

The Gyrocopters Plaid E-Scooter can travel up to 18 miles on a fully charged battery under ideal riding conditions. The following are some of the major factors that will affect the operating range of your device:

- **Terrain:** The highest operating range is achieved when riding on smooth, flat surfaces. Riding uphill or on rough terrain will significantly reduce the operating range.
- **Weight:** Users with lighter weight will experience a higher operating range compared to heavier users.
- **Ambient Temperature:** It is important to ride and store the E-Scooter within the recommended temperature range. This will optimize the operating range, battery life, and overall performance of your device.
- **Speed and Riding Style:** Maintaining a moderate and consistent speed while riding will maximize the operating range. Traveling at high speeds for prolonged periods, frequent starts and stops, and idling will decrease the operating range.



WARNING

To ensure safe and effective stopping, it is essential to use the brake properly. To prevent misuse and potential injury, avoid applying sudden or excessive force to the brake. Instead, gradually engage the brake and allow yourself ample space to come to a complete stop safely.

SAFETY ALERTS

In the event of a system error or improper operation during your ride on the Gyrocopters Plaid E-Scooter, the device will promptly notify the user through various means. It is important to pay attention to these safety alerts as they indicate potential issues. Ignoring these notices can lead to further problems, so it is crucial to take appropriate action to rectify any improper operation, failures, or errors.

- Riding surfaces that are prohibited (uneven, excessively steep, unsafe, etc.)
- Low battery voltage detected.
- E-Scooter is currently being charged.
- Overheating of the E-Scooter or high motor temperature.
- Flashing battery icon indicating low battery power.
- Device will stop after 10 seconds if either or both tires are blocked.
- Motor will power off after 15 seconds when battery level enters protection mode due to low depletion.
- Motor will shut off after 15 seconds if a high discharge current is detected during use (e.g., riding up a steep slope for an extended period).

WARRANTY

The customer is entitled to a limited manufacturer warranty of 90 days from the date of purchase. It is important to note that the manufacturer warranty does not cover any physical or accidental damage resulting from improper usage.

Additionally, normal wear and tear, damage to wheels, fenders, or any other physical damage, as well as water/liquid damage to parts and the unit, are not covered by the warranty.

For more information about the warranty, please visit our website at www.imgadgets.com or contact us via email at customer@gyrocopters.ca.



@Imgadgets



@imgadgets.ca



www.imgadgets.com



**Gyrocopters |
IMGadgets**



@imgadgets