 




**OWNERS INSTRUCTION** specialized  
for the

**EMPIRE PUNISHER  
CRANK COCKING DEVICE**

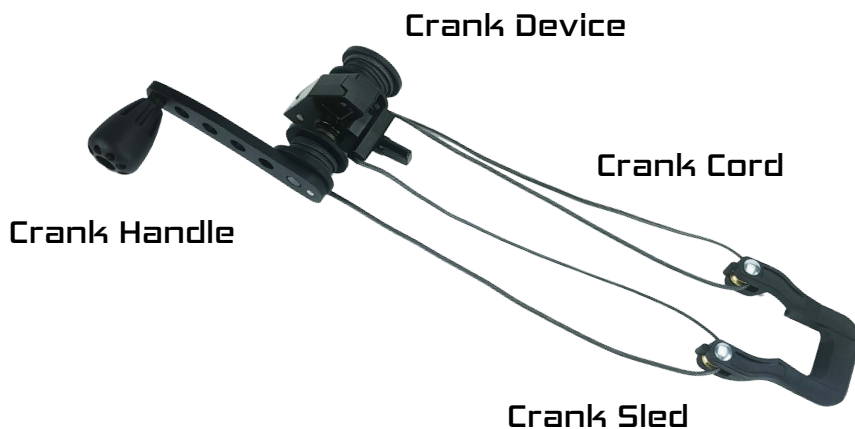

**DO NOT ATTEMPT TO DE-COCK YOUR CROSSBOW OR  
LET THE STRING DOWN WITH THIS DEVICE. DAMAGE  
AND POSSIBLE INJURY MAY OCCUR AND IS NOT  
COVERED UNDER WARRANTY.**



## COMPATIBLE CROSSBOWS FOR USE WITH THE EMPIRE PUNISHER CRANK COCKING DEVICE:

- EMPIRE PUNISHER
- EMPIRE AGGRESSOR
- EMPIRE KRYPTEK AGGRESSOR
- EMPIRE BEAST

IF YOUR CROSSBOW IS NOT LISTED HERE THEN THIS DEVICE IS NOT COMPATIBLE AND YOU **SHOULD NOT** ATTEMPT TO ALTER YOUR CROSSBOW OR THIS DEVICE IN ORDER TO USE IT. Pictures below show the crank port on the bow:




Empire Punisher  
Empire Aggressor Empire  
Kryptek Aggressor Empire  
Beast Port



*The adjustable rear stock on the Punisher, Aggressor models & Beast must be in the first positive click position to use the crank. The stock cannot be blocking the port in any manner.*




## PROPER USE OF THE CRANK COCKING DEVICE

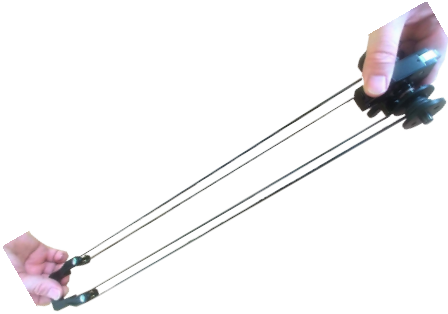

1. Grasp the sled with one hand, and the crank device in the other.
2. Depress the silver lever on the back of the crank device and pull the sled out completely as far as it will go. Please be sure that the cords are untangled and free from kinks, knots, loops, etc.



3. Place the Post on the crank device into the receiving port hole on the stock. The post is angled and must be positioned with the post toward the trigger assembly/scope/front of bow. The hole (pictured at left) is located just behind the trigger assembly and scope eye piece. Be sure your adjustable rear stock is in the first positive click position so that the hole is free from obstruction. **USE VELCRO IF REQUIRED - SEE PICS PG 5**

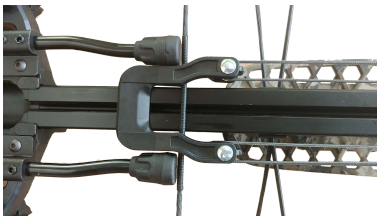

4. Hook the sled to the bow string. Hooks are located on the bottom of the sled near the center of the U shaped bracket.



5. Install the crank handle on either side of the crank device. The crank device is ambidextrous (can be mounted for left hand or right hand use) for your convenience. The picture shown here is set up for right handed use.



6. Apply downward pressure with your free hand to the device to prevent accidentally pulling the device from the port (if necessary use a length of velcro if attempting to use one handed).

**See pictures next page.**


Crank the string up until it is latched. When you hear the trigger sear click and catch and the string will not go any further back **-STOP CRANKING.**

*\*Aggressor Bow shown in this picture but same for Punisher*

**DO NOT OVER CRANK THE DEVICE. YOU WILL BREAK THE CORDS AND/OR CRANK POST.**



7. Once the bow is cocked you will need to unhook and remove the sled. Apply a small amount of pressure to the crank handle (only enough pressure to be able to depress and release the silver lever) Hold down the silver lever and pull the cords enough to clear the scope while take the sled off the bow.

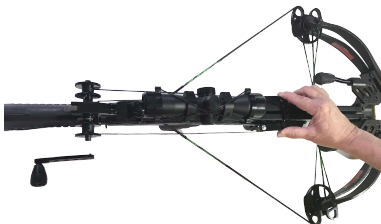

8. Now that the cord has enough slack, lift the bracket over the scope, wind up the cord, and store the handle and crank device for the next use.

*\*Aggressor Bow shown in this picture but same for Punisher*



***Note: If you are unable to hold the crank device down in place while cranking to avoid pulling the crank device out of the port and damaging the stem (Not Warranty) then you will need to use a piece of Velcro(tm) or hook and loop strip as shown in order to secure it in place while cranking. Make sure it is tight and secure so that your cranking motion does not pull the device from the crossbow.***



## IMPORTANT GENERAL SAFETY

EXTREME CAUTION SHOULD BE USED AT ALL TIMES WHEN HANDLING A CROSSBOW. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

- Always point the crossbow in a safe direction.
- Always keep your fingers below the flight track and out of the path of cables and strings when firing the crossbow.
- Never dry-fire the crossbow (shooting without an arrow or too light of an arrow).  
Dry firing will void the warranty and can result in damage to the limb assembly and possibly cause personal injury.
- Never fire the crossbow until you are sure of your target.
- Always use an adequate target and backstop when target shooting. (HAY BALES, CARDBOARD, BOXES OF RAGS, ETC. ARE TOTALLY UNACCEPTABLE)
- Always use suitable crossbow arrows with half-moon nocks.
- Always inspect the crossbow and arrows before firing. Bent or damaged arrows are not safe to fire and should be discarded.
- Apply RAIL LUBE to the flight track where the string comes in contact with it about every 5-10 shots. NEVER USE BEESWAX, BOWWAX, OR ANY OTHER WAX it WILL ruin your string.



## WARRANTY

SA SPORTS, LLC

ONE YEAR LIMITED WARRANTY

#623 Crank Device

SA Sports, LLC warrants its products to be free from defects in both material and workmanship under normal use and service for one (1) year from date of purchase. Not included are damages from improper use, abuse, unauthorized repairs or modifications or alteration. Specifically EXCLUDED are cords, overcranking, or other moving parts that are considered to be replaceable parts requiring periodic servicing. Damage resulting from firing with the sled attached, whether intentional or accidental is not covered under warranty and repair costs will be certain.

To obtain warranty service, the unit should be packaged securely to avoid damage in transit, it should include a description of the nature of the repair request, a copy of the original sales receipt, and it should be returned postage paid to SA Sports, LLC. At our sole discretion we will repair or replace the unit that is deemed to be under warranty upon inspection, and ship the product back to the customer at no additional cost using standard delivery service of our choice. Any product received into our facility that is deemed to have been misused, abused, altered, modified or otherwise ineligible for coverage will be issued an estimate for repair prior to work being completed. International customers will be responsible for transit costs both inbound and outbound and should therefore call for a return authorization prior to shipping the product.



## WARRANTY

Please feel free to contact us regarding any product issue, assembly help, or additional assembly direction. We will help in any way we can to ensure your best experience with the product.

Direct all of your inquiries to:

SA Sports, LLC

325 S 5th Street - Unit 3

Emmaus, PA 18049

Tel (610) 841-2929

Email: [sales@sa-sports.com](mailto:sales@sa-sports.com)

[www.sa-sports.com](http://www.sa-sports.com)

Please retain your original purchase receipt in the event that you need service, include a copy of the receipt from date of purchase.

ONCE AGAIN, WE THANK YOU FOR  
CHOOSING AN SA SPORTS OUTDOORS PRODUCT!  
ENJOY YOUR ADVENTURE!

