




MY SAFETY IS JAMMED

Your crossbow is equipped with an automatic safety, which means that prior to cocking the crossbow the safety switch should be resting in the fire position until the bow is cocked. It will automatically go onto the SAFE position once cocked. (Uncocked Left Pic / Cocked Right Pic)



Many of our bows also include a preventative measure that will not allow the safety to be switched to the FIRE position unless an arrow is present—ANTI DRY-FIRE. In the event that your safety switch has become switched to the SAFE position while the bow is uncocked (whether by switching the switch yourself manually, or through incidental contact during shipping, etc). If your bow is in this state as shown in the picture below (safety stuck on the SAFE position) you will not be able to cock the crossbow until you perform the following steps.

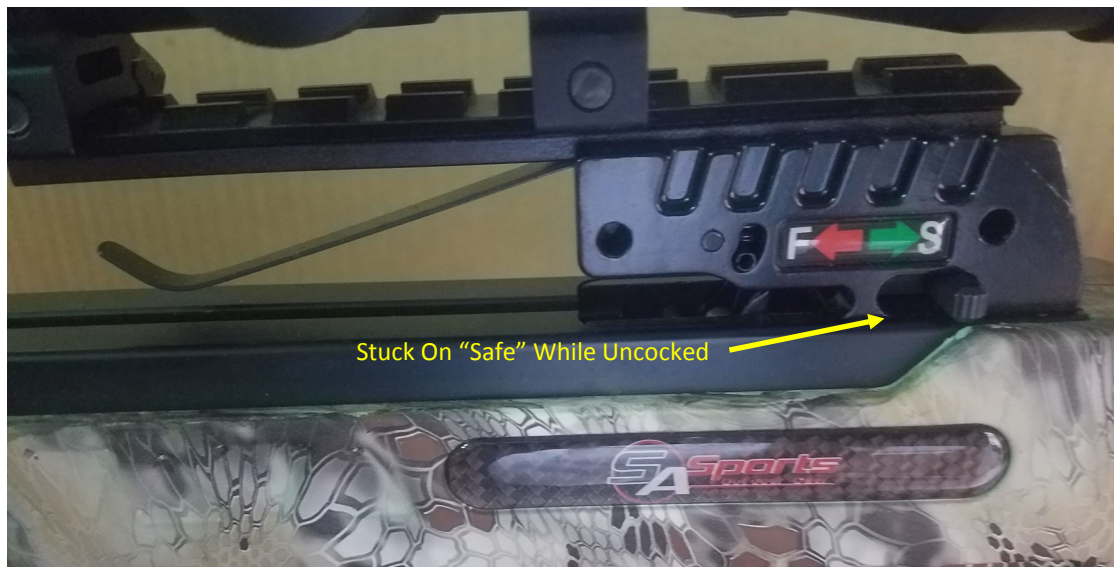


Insert an arrow into the trigger mechanism sliding it all the way back ,while the bow is uncocked as shown below. This will engage the anti dry-fire mechanism.



Slide an arrow all the way back into trigger mechanism

You will now be able to switch the safety to the fire position. Push the safety switch to the FIRE position and LEAVE IT ALONE in the Fire position. The safety will engage when you cock the bow. Simply remove the arrow and your bow will be ready to cock.

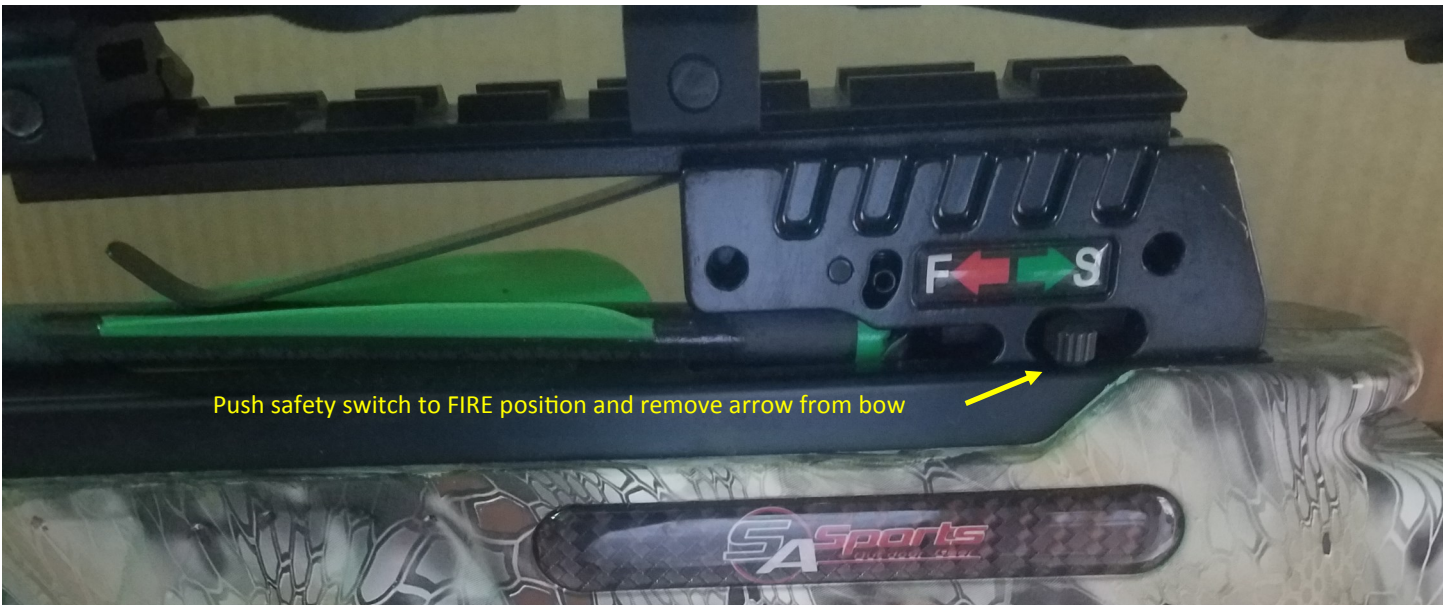

Push safety switch to FIRE position and remove arrow from bow

DO NOT COCK THE BOW UNTIL YOU ARE READY TO FIRE INTO AN ADEQUATE TARGET IN SAFE SURROUNDINGS. DO NOT USE DECKING ARROWS—NOT RECOMMENDED. SHOOT THE BOW WITH APPROPRIATE ARROWS TO DISCHARGE.

Thank you.