


I cannot get the scope on my crossbow to sight in.

The most common issue like this is caused by the rings not being aligned properly to allow the scope to sit flat and true.



Continue Next Page

The steps below will help to ensure the scope is in the proper position and allow it to be sighted in.

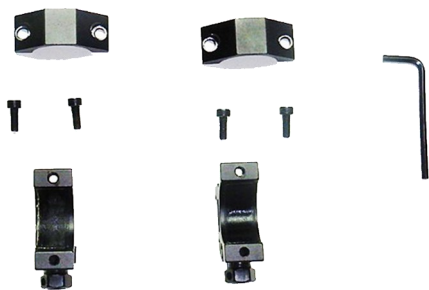

- **Remove the scope from the crossbow.**
- **Remove the rings from the scope.**
- **Disassemble the rings as shown.**



- **Mount the lower rings/clamps on the scope rail in the position you want. The crossbar MUST be fully seated in the slot.**



- **Place the scope in the lower rings and replace the upper rings.**

CONTINUE NEXT PAGE



- **Realign the crosshairs or reticules to vertical tighten the upper rings.**

IMPORTANT

- **Before sighting the scope:**
 - **You will need to undo any adjustments you made to the elevation and windage adjusters.**
 - **DO NOT OVER TIGHTEN as this can damage the scope. You want the rings tight enough to hold the scope in place without moving, but not tight enough to crush the tube of the scope or strip the aluminum rings.**

