

Vulcan DX

Draw Length Adjustment

Determine the correct draw length using your preferred method.

Referring to the drawings to the right, locate the locking screw that holds the adjustment cam in place (This screw uses a 3/32" hex key.) and remove the screw. *You will need to remember where the screw was removed from, this is going to be where it goes back in.*

Loosen, (do not remove) the screw that is partially hidden under the limb.

Starting on the outer ring, count backwards from 27 by 1 (refer to the corresponding diagram to the left) until you reach the desired draw length (for 1/2" marks go to the next number lower and then turn the adjuster cam back 1/2 space on the inner ring) and reinstall the set screw in the corresponding screw hole.

Then tighten the screw that is partially under the limb.
*Do not overtighten these screws.

Repeat for the other adjustment cam.



**TOP CAM AND
DRAW LENGTH ADJUSTMENT
MODULE 21"-27"**



**BOTTOM CAM AND
DRAW LENGTH ADJUSTMENT
MODULE 21"-27"**