

FT-330 Antique Quan Yin Buddha Fountain

Two people are recommended for the installation of this fountain!



FOUNTAIN INFORMATION:

This fountain holds approximately 25 gallons of water.

**This fountain uses an extra-large fountain cover.
(FTNCOV-XLG)**

**Compatible with Refill Device and LED Kits
(A different style stopper is not required for this fountain.)**

Pump Kit Parts List

PK500 Pump (1)
#7 Drain stopper (1)
15" length of 1/2" Black Non-Kink tubing (1) **
2" length of 5/8" clear vinyl tubing (1) **
2" length of 1/2" PVC pipe (1) **
2.8 oz tube of silicone (1)
Copper Spiller
Wedges (3)
Hose clamps (1) *

* Hose clamps may be used as flow restrictors

**Black non-kink tubing and clear vinyl tubing have been preassembled

TOOLS REQUIRED:

Bubble Level



PUMP INFORMATION:

**OEMPF525 - 525 GPH Pump
16 FT cord length**

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

Check out YouTube for a "How to" video.
For more Campania product information visit www.campaniainternational.com


All of our cast stone is proudly




FT-330 Antique Quan Yin Buddha Fountain

Two people are recommended for the installation of this fountain!

Assemble your fountain on a level surface capable of holding a minimum of 760 pounds with an approximate 6 square foot footprint.

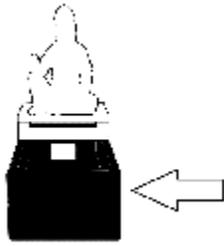


FT-329D (412 lbs)
25"L x 36"W x 16.25"H

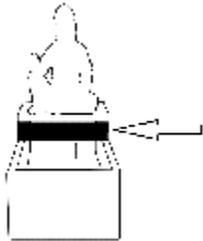


FT-330B (84 lbs)
25"L x 13.5"W x 5.5"H




FT-330C (10 lbs)
20"L x 8.25"W x 0.75"H

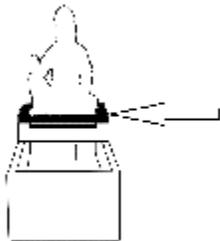

FT-330A (57 lbs)
25"L x 13.5"W x 2"H

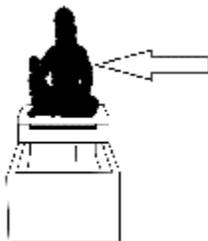

OR-165 (182 lbs)
19.5"L x 15.5"W x 30.75"H

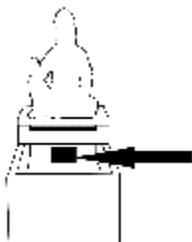

FT-330D (15 lbs)

1. Position the basin (FT-329D) where the fountain is to be installed, ensuring that it is level.
2. Assemble the fountain plumbing
 - a. **NOTE: All pumps come with 2 adapters.**
 - i. **This fountain uses the medium adapter provided.**
3. Attach the non-kink end of the tubing assembly to the pump outlet.
4. Lay the pump cord over the notched edge at the back of the basin.
5. Insert the CPVC end of the tubing assembly into the coupling protruding from the bottom of the square bowl (FT-330B).
6. Carefully center the square bowl (FT-330B) on the top back and side edges.
7. Using the silicone provided, secure the copper spiller to the top lip of the water feature.
8. Place the spiller stop (FT-330C) into the square bowl (FT-330B).
9. Place the statue base (FT-330A) onto the square bowl (FT-330B).
10. Place the Antique Quan Yin Buddha (OR-165) on the statue base (FT-330A).
11. Place the pump cover (FT-330D) over the pump.
 - a. Be sure that the pump cover is pushed back as far as possible toward the back wall of the basin.
12. Let the fountain sit at least 24 hours before filling with water.