


## Detachment

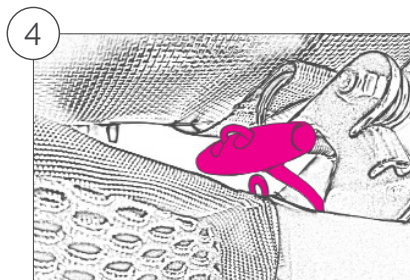

4. Lead the duffel coat button on the elastic band out of the elastic loop, so it is no longer attached around the plastic hinge.

## Technical specifications

Material: Polyester  
Width: 370 mm  
Depth: 120 mm  
Height: 300 mm  
Weight: 310 g  
Load capacity: 5 kg

## Maintenance

Can be wiped clean with a wet cloth. If necessary, it can also be washed by hand by max 30 degrees celsius.

We recommend impregnating your new bag before use and then 2-3 times a year depending on weather conditions and general use. If you are often out in rainy weather, we recommend every third month. You can use regular impregnation for leather or textile or nano impregnation.

NB: Be aware that impregnation can result in a darker tone of the textile. Shake the impregnation spray well before use and spray approx. 20 cm from the textile. Multiple thin layers are better than one thick layer to avoid stripes or discoloration

by **ACRE**

Designed in Denmark. Handcrafted in China,  
byACRE ApS, I.C Modewegsvej 1, 2800 Lyngby

# Grocery bag

SPACIOUS BAG FOR YOUR SHOPPING AND GROCERIES

CARBON ULTRALIGHT ACCESSORY



Congratulations on your new grocery bag!  
We have made this user manual for you, so you can quickly  
enjoy the spacious bag on your shopping trip.

ENGLISH


by **ACRE**

# Use of the grocery bag


The grocery bag gives you easy access to your shopping and groceries. The groceries can easily be put in the bag during shopping – and with a tote bag or plastic bag inside you can take the groceries out without any hassle when you get home. Press down on the cord lock and pull it away from the bag when you want to access the bag – and push it towards the bag when you want to close it.

- ⚠️ Avoid overloading the grocery bag with more than it can be closed
- ⚠️ Avoid overloading the grocery bag with heavy objects (+5 kg)


## Attachment

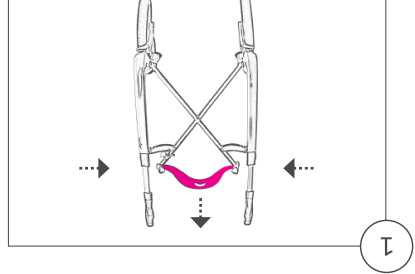

1. Pull the seat upwards to collapse the roller a bit (approx. 10 cm).

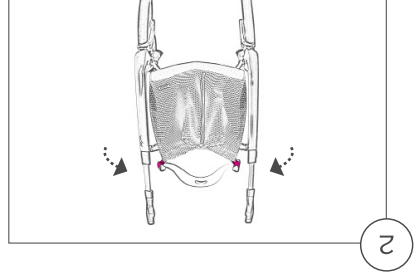


2. Place the two flat straps in the corners of the grocery bag onto the end pieces of the seat bars. Ensure that the side with the mesh is facing towards you.

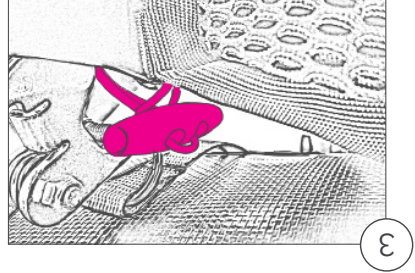


3. Lead the elastic band around the aluminum tube above the metal lock, and on the right-hand side above the plastic hinge. Lead the duffel coat button on the elastic band through the elastic loop NB: Be aware that the elastic band is not in the way of the locking mechanism.


## Detachment

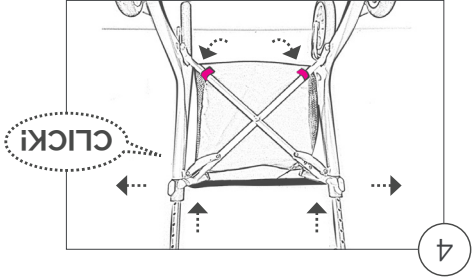


4. Unfold the roller. Open the velcro band on the grocery bag and put each end around the aluminium tubes on the roller. Close the velcro band and ensure that it is fastened around the tubes. NB: Make sure that you hear a 'click' when you unfold the roller, to make sure there is nothing in the way of the locking mechanism.

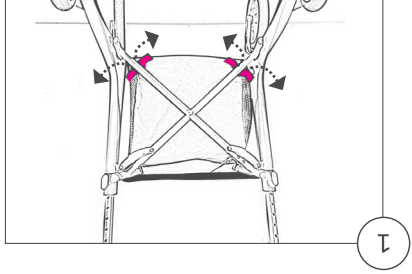

1. Open the velcro band and detach it from the aluminium tubes.

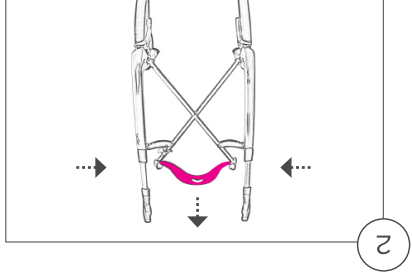

2. Pull the seat upwards to collapse the roller a bit (approx. 10 cm).

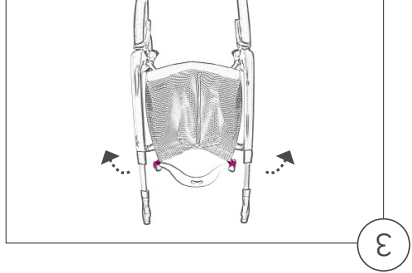

3. Detach the two flat straps of the grocery bag from the end pieces of the seat.