

## HOW TO USE

With seconds, the heating plates will reach maximum temperature. The iron is now ready for use.

 
\* Use of hair styling products before ironing is not recommended.

\* If hair condition is questionable, please perform a strand test before flat ironing the hair.

Section off hair accordingly. Keep the flat iron an inch and a half away from the scalp.

Work with hair in manageable sections and use guided temperature settings recommended necessary to straighten hair. (Evaporation of excess moisture does not indicate damage to the hair).

\* Use a comb to separate and section hair while using flat iron is recommended.



### POWER ON / OFF

Power is turned on or off by pressing down ON/OFF (⏻) button.

### TEMPERATURE CONTROL

You can select the temperature by touching the HIGH [+] / LOW [-] control button. The temperature will show on the FND temperature display as you press the button. To change the temperature, continuously press and hold the HIGH/LOW button.

### To Change the Temperature Setting from CELSIUS [230°] to FAHRENHEIT [450°]


If [230] appears on the display screen, then the temperature is set to Celsius. To change back to Fahrenheit:

1. Turn off your flat iron and unplug from electrical socket.
2. Then plug the iron back into the electrical socket.
3. While Pressing down the [+] button, press ON/OFF button.

An "F" will appear on the screen. Your device is now in Fahrenheit mode.

**IMPORTANT!** After 30 minutes of inactivity, the flat iron is automatically shut off for safety and conservation of energy. By pressing the ON/OFF button, the temperature selected is reached again within seconds.

## NAME OF PARTS

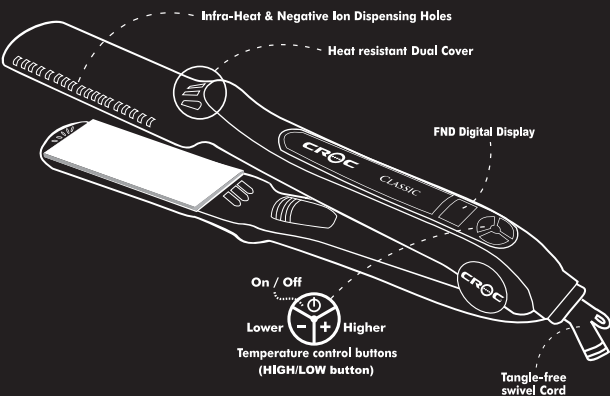

## FEATURES

- The professional #1 CHOICE FOR ALL KERATIN TREATMENTS.
- Smooth PLATES allowing effortless glide.
- Ceramic heaters provide INSTANT HEAT RECOVERY.
- FULLY DIGITAL 18 custom temperature setting from 280°F(135°C) to 450°F(230°C).
- Creates balanced, humidity free styles.
- 30 minute AUTO SHUT OFF safety feature.
- Available in 1 1/2 or 1 inch, regular, or wet & dry plates.
- 9 ft long 360 degree Swivel cord.
- DUAL VOLTAGE : 110V ~ 240V

## STYLING TIPS



**Straight:** Place the combed section of hair between the iron plates. Close the iron with a light grip. Glide the iron away from the scalp.



**Loose Curls:** Place the combed section of hair between the iron plates. Close the iron with a light grip then wind the hair around plates. Pull the iron away from the scalp and let the hair slide through the plates.



**Flip Out:** Place the combed section of hair between the two plates. Rotate 1 turn and gently glide the iron away from the head. Close the iron with a light grip. Pull the iron away from the scalp and let the hair slide through the plates & slightly flip out the ends.



**Flip In:** Place the combed section of hair between the iron plates. Close the iron with a light grip. Pull the iron away from the scalp and let the hair slide through the plates & slightly flip in the ends under.

## TEMPERATURE GUIDE

IRON TEMPERATURE	HAIR TYPE
280°F ~ 330°F(135°C ~ 165°C)	For fine or chemically treated hair
310°F ~ 390°F(155°C ~ 200°C)	For wavy to medium textured hair
390°F ~ 450°F(200°C ~ 230°C)	For thick, coarse hair

## CARE & MAINTENANCE

Your flat iron is virtually maintenance free. No lubrication is needed. Please keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, be sure to unplug the appliance and allow it to cool. Use a soft cloth to wipe until clean. It is normal for any iron to accumulate dirt over time.

1. Unplug the flat iron.
2. Wait until it cools to room temperature.
3. Put a teaspoon of ordinary rubbing alcohol on a soft cloth.
4. Wipe the plates GENTLY to remove dirt.
5. DO NOT SCRUB.

Is your CROC iron stuck on 230 degrees? It's easy to reset to 450!

1. Unplug the iron.
2. Plug it in again.
3. Hold down the right (up) arrow button.
4. At the same time, hold down the power button.
5. An "F" will appear in the digital readout.
6. You're all set!

## SAVE THESE INSTRUCTIONS

**OPERATING INSTRUCTIONS** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**USER-MAINTENANCE INSTRUCTIONS** Your flat iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer. CAUTION NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently. STORAGE When not in use, your appliance is easy to store. Allow appliance to cool, then store in a safe, dry location, out of reach of children. Do not jerk or strain cord at plug connections.

## TURBO ION, INC.

6800 8th Street, Buena Park, CA 90620 ■ TEL: 714.521.2255 / 844.888.CROC(2762)

■ FAX: 714.521.0106 ■ www.TURBOION.com / www.CROC USA.com ■ info@turboion.com

**IMPORTANT SAFETY INSTRUCTION** When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following: READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER

**DANGER** - As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock: ■ Always "unplug" this appliance immediately after use. ■ Do not use it while bathing. ■ Do not place or store appliance where it can fall or be pulled into a tub or sink ■ Do not place in or drop into water or other liquid. ■ Do not reach for an appliance that has fallen into water - unplug the cord first. ■ Do not use this appliance near bathtubs, showers, basins or other vessels containing water

**WARNING** To reduce the risk of burns, electrocution, fire, or injury to person: ■ An appliance should never be left unattended when plugged in. ■ Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities. ■ Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. ■ Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. ■ Keep the cord away from heated surfaces. Do not wrap the cord around the appliance. ■ Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like. ■ Never use while sleeping. ■ Never drop or insert any object into any opening or hose. ■ Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered. ■ Do not use extension cord with this appliance. ■ Attachments may be hot during use. Allow them to cool before handling. ■ Do not place appliance on any surface while it is operating. ■ The crimper and attachments are hot when in use. Do not let eyes and bare skin touch heated surfaces. ■ Store the iron after it is completely cooled down. ■ Insert the plug to the AC outlet fully for normal operation, failure to insert plug fully may result in overheating and fire. ■ Touching any part of the heating plate during operation may result in burning. ■ If the number of digital temperature display flickers, the iron may be malfunctioning, turn off the iron immediately and disconnect the plug from the outlet. ■ While the plate is hot during or soon after the operation, the heat of the iron should be kept away from the article susceptible to change by heat. ■ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a responsible person for their safety. Children should be supervised to ensure that they do not play with the appliance.

**PRECAUTION** ■ Strictly observe all of the instructions: WARNING, PRECAUTION when using the iron. ■ After each use cooling down, gently clean the iron with damp cloth. Do not use chemical cleaners or an abrasive material. ■ Do not wash the iron with water. ■ Do not open the iron or attempt to fix it when malfunctioning. ■ Do not touch the temperature control buttons with wet hand. ■ Do not puncture the cord in the iron's plates, the iron for any other purpose other than hair treatment. ■ Do not apply the iron if client's scalp is sensitive or has scores or abrasions. ■ Do not apply the iron if client has ever had an allergic reaction to a straightening solution or any cosmetic products. ■ Always examine client's hair for texture, breakage or discoloration to be certain that it is in good condition for processing with the iron. ■ Do not apply the iron on the damaged or damaging hair. ■ Do not apply the iron within 5-6 weeks after perming or tinting. ■ If any abnormal symptoms visible on client's scalp or hair while or after using the iron, stop using it immediately and consult with a doctor. ■ Special attention should be paid to the result of the blow drying process. If the blow drying is insufficient, the heat of the iron will generate steam around the hair possibly resulting in burns to the client's scalp or skin. If the blow drying is excessive, hair damage may result. ■ Pay an extra attention when operating the iron at a high temperature (380°F/195°C - 450°F/230°C). ■ Do not operate the iron where aerosol (hair spray) products are being used. ■ Do not disseminate the iron for any purpose. ■ Do not damage the electric cord. It may result in electrical shock, short-circuit, or fire. ■ Unplug the iron by pulling the plug not the cord. ■ Do not place any heavy object on the cord or twist or bend the cord. ■ Do not alter or modify the cord in any way ■ Do not scratch the surface of the heating plates.

**FOLLOWING EXCLUSIONS ARE NOT COVERED UNDER WARRANTY** ■ Removal or tampering of any labeling, sticker or serial numbering from the unit ■ Physical or internal damage caused by misuse, mishandling, or accidental damage (such as, but not limited to, dropping a unit) ■ Normal wear and tear ■ Improper voltage usage outside of the United States ■ Cord malfunction caused by improper use of cord ■ Tampering, modifications, or repair attempts by another party other than a technician employed by CROC/Turbo Ion, Inc. ■ Purchase from an unauthorized vendor

 THIS MARKING INDICATES THAT THIS PRODUCT IS NOT TO BE DISPOSED OF WITH OTHER HOUSEHOLD WASTES. TO PREVENT POSSIBLE HARM TO THE ENVIRONMENT OR HUMAN HEALTH FROM UNCONTROLLED WASTE SUSTAINABLE REUSE OF MATERIAL RESOURCES.



**!** Register your product within 30 days of purchase to activate its 5 year warranty (= 1 year full warranty & 4 year limited warranty) For more information on warranty coverage, please visit [www.croc.usa.com](http://www.croc.usa.com)  
**WARRANTY ONLY VALID WHEN THIS CARD IS COMPLETED AND RETURNED WITHIN 30 DAYS OF PURCHASE**

YOU MUST SUBMIT TO REGISTER:

1. Completed Warranty Card
2. Photocopy or cut out of UPC code from packaging
3. Photocopy of valid receipt from an authorized vendor (Proof of Purchase)

TO FILE A WARRANTY CLAIM OR RETURN:

Visit [www.CROCUSA.com/warranty/](http://www.CROCUSA.com/warranty/)  
 Follow directions in returns/replacement process

Item: CROC CLASSIC Straightening Iron

Salon / Customer's Name:

Address:

Tel:

Email:

Date of Purchase:

/ /

Store / Distributor Name:

City:

State:

**PLEASE MAIL TO: CUSTOMER SERVICE CENTER  
 6800 8th Street, Buena Park, CA 90620**

WARRANTY VALID WHEN PURCHASED FROM A PROFESSIONAL SALON OR DISTRIBUTOR. WARRANTIES WILL BE VOID IF PURCHASED FROM AN ONLINE RETAILER OR AUCTION SITE. FOR MORE INFORMATION VISIT OUR WEB SITE AT [WWW.CROCUSA.COM](http://WWW.CROCUSA.COM) OR CONTACT OUR CUSTOMER SERVICE DEPARTMENT: 714.521.2255 / 844.888.CROC(2762) IF YOU LOSE YOUR CROC INSTRUCTION MANUAL, PLEASE VISIT [WWW.CROCUSA.COM](http://WWW.CROCUSA.COM) TO PRINT OR DOWNLOAD MANUAL DIRECTLY FROM YOUR CROC PRODUCT'S PAGE.

*\*Should repair or replacements be necessary, charges may apply. Shipping and handling charges will apply to all national and international warranty claims.*



Professional use only



**CROC** CLASSIC

**WARNING DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER.**

