

HOW TO USE

Plug unit into properly grounded power outlet

Power unit on by pressing the top ON/OFF button



POWER - Press ON/OFF button once.

To change the temperature setting, press the HEAT button.




To change the air pressure setting, press the AIR button.



Begin to dry the hair by rotating the dryer over the head, keeping the dryer a safe distance from scalp to avoid excessive heat exposure or discomfort.

When style is complete, power off the appliance by pressing the ON/OFF button.

To ensure proper storage, allow appliance to cool down prior to storing.

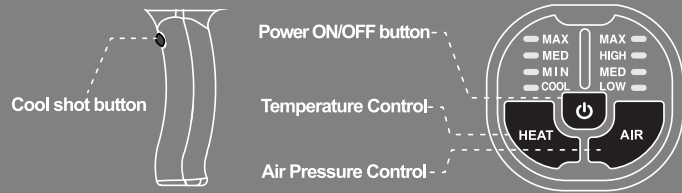

If dryer should overheat, all eight LED button will simultaneously flash. To reset, follow directions below:

- Step1. Unplug dryer
- Step2. Clean dust filter
- Step3. Wait 2-3minutes before turning dryer back on.



WHEN USING NOZZLES OR ANY DRYER ATTACHMENTS, ENSURE THAT THE AIR FLOW IS NOT OBSTRUCTED/BLOCKED. OBSTRUCTION OF AIRFLOW CAN RESULT IN INTERNAL AND EXTERNAL DAMAGE TO YOUR DRYER, SUCH AS MELTING.

PRODUCT FEATURES

BENEFITS OF DIGITAL CONTROL:

- Accurate temperature control reduces heat damage
- Accurate digital control provides effective motor performance & longevity
- Energy efficient at 1500W, but feels like 2000W

SPECIFICATION	CROC PREMIUM DRYER	OTHER DC DRYERS AVERAGE
MOTOR	DC-48V/ 18000 RPM ★★★★★	DC-24V ~ 36V/ 12,000 ~ 15,000 RPM ★★★
MAX POWER CONSUMPTION	1500W (DC motor) ★★★★★	1000W ~ 1350W (DC motor) ★★★
WEIGHT	13 oz (370g) ★★★★★	17 ~ 20 oz (482 ~ 623 g) ★★★★↓
AIR FLOW	17 m/sec ★★★★★	13 ~ 14 m/sec ★★★★↓
NOISE LEVEL	59 db ★★★★★	70 ~ 90 db ★★★
CORD	12 ft ★★★★★	9 ft ★★★★↓
SETTINGS	16 settings (4 speed 4 heat) ★★★★★	6 settings (2 speed 3 heat) ★★★★↓
IONIC	12,000/cc (from Ceramic & Tourmaline) ★★★★★	3,000 ~ 5,000/cc ★★★
MAX TEMPERATURE	340 °F (170 °C) ★★★★★	250°F (125°C) ★★★★↓

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER:

ANY APPLIANCE PLUGGED INTO AN OUTLET IS ELECTRICALLY LIVE EVEN WHEN THE SWITCH IS OFF. TO REDUCE THE RISK OF DEATH OR INJURY BY ELECTRIC SHOCK:

1. ALWAYS UNPLUG APPLIANCE IMMEDIATELY AFTER USING.
2. DO NOT USE WHILE BATHING OR IN THE SHOWER.
3. DO NOT PLACE OR STORE APPLIANCE WHERE IT CAN FALL OR BE PULLED INTO A TUB OR SINK.
4. DO NOT USE NEAR, PLACE IN OR DROP INTO WATER OR OTHER LIQUID.
5. IF AN APPLIANCE FALLS INTO WATER, UNPLUG IT IMMEDIATELY. DO NOT REACH INTO THE WATER.

SAVE THESE INSTRUCTIONS


OPERATING INSTRUCTIONS:

This hair dryer is equipped with an Appliance Leakage Circuit Interrupter (ALCI) built into the plug. This safety feature will make the appliance inoperable under some abnormal conditions, such as immersion in water. The ALCI safety device is equipped with a test feature so that its operation can be checked.

NOTE: Check the ALCI safety feature every time you use your hair dryer.

To ensure the ALCI safety device is functioning properly, perform the following test:

1. Press the RESET button located on the ALCI plug. This will ensure the hair dryer is in the operable position.
2. Plug the hair dryer into the electrical outlet.
3. Press the Test button located on the plug. If the ALCI is functioning properly, the RESET button will pop out and the hair dryer will be inoperable.
4. Press the RESET button to reactivate the ALCI safety device and to use your hair dryer.
5. Do not use the unit if the RESET button does not pop out. Return it immediately for service.

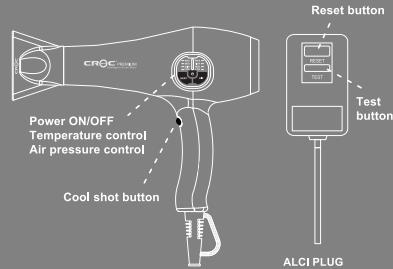

At any time, when this hair dryer encounters an electrical shock hazard, it will immediately shut off. To restore power, the RESET button on the ALCI safety device must be pressed to reactivate the circuit.

IF THIS APPLIANCE IS IMMersed IN WATER, DO NOT ATTEMPT TO RESET THE ALCI SAFETY DEVICE. PLEASE TAKE THE UNIT TO THE NEAREST SERVICE FACILITY FOR EXAMINATION.

TURBOION
ADVANCED TECHNOLOGY

6800 8th Street, Buena Park, CA 90620

■ TEL: 714.521.2255 / 844.888.CROC(2762) ■ FAX: 714.521.0106

■ www.TURBOION.com / www.CROC USA.com ■ info@turboion.com

WARNING TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS: ■ Always unplug it immediately after using. ■ Do not place or store appliance where it can fall or be pulled into a bath tub or sink. ■ Do not use it while bathing. ■ Do not place in or drop into water or other liquid. If an appliance falls into water, unplug it immediately. Do not reach into the water. ■ An appliance should never be left unattended when plugged in. Close supervision is necessary when this appliance is used by, on, or near children or individuals. ■ Use this appliance only for its intended use as described in this manual. ■ **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.** ■ Keep the cord away from heated surfaces. Do not pull, twist, or wrap the cord around the appliance. ■ Never block the air openings of the appliance or place it on soft surface, such as a bed or couch, where the air openings may be blocked. ■ Insert the plug to the AC outlet fully for normal operation, failure to insert plug fully may result in overheating and fire ■ Never use while sleeping. ■ Never drop or insert any objects into any opening or hose. ■ Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered. ■ Do not use an extension cord with this appliance. ■ Air outlet grill and attachments may be very hot during use. Allow them to cool before handling. ■ Do not place the appliance directly on any surface while operating. ■ While using the appliance, keep your hair out of it. Keep your hair away from the air inlets. ■ To prolong the life of the dryer, keep filters clean of hair and dust. ■ Do not use with voltage converter. ■ Do not direct hot air toward eyes or other heat sensitive areas. ■ For an appliance required to have a polarized plug, the following instructions shall be provided: "This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature." ■ The appliance is not to be used by persons (including children aged from 8 years) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. ■ Children being supervised not to play with the appliance ■ Cleaning and user maintenance shall not be made by children without supervision ■ When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off. ■ When using nozzles or any dryer attachments, ensure that the air flow is not obstructed/blocked. Obstruction of airflow can result in internal and external damage to your dryer, such as melting.

PRECAUTION ■ Strictly observe all of the instructions: WARNING, PRECAUTION when using the appliance. ■ Never allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. ■ Do not place any heavy object on the cord. ■ Do not damage the electrical cord. It may result in electrical shock, short-circuit, or fire ■ Inspect the cord frequently for damage. **Stop using the dryer immediately if damage is visible or unit stops or operates intermittently.** ■ Do not wash the dryer with water. ■ Do not open the dryer or attempt to fix it when malfunctioning. ■ Do not disassemble the dryer for any purpose. ■ Unplug the appliance by pulling the plug not the cord. ■ Do not alter or modify the cord in any way. ■ When not in use, your dryer should be disconnected, allowed to cool, and stored in a safe, dry location, out of reach of children.

FOLLOWING EXCLUSIONS ARE NOT COVERED UNDER WARRANTY ■ Removal or tampering of any labeling, sticking or serial numbering from the unit ■ Physical or internal damage caused by misuse, mishandling, or accidental damage (such as, but not limited to, dropping a unit) ■ Normal wear and tear ■ Improper voltage usage outside of the United States ■ Cord malfunction caused by improper use of cord ■ Tampering, modifications, or repair attempts by another party other than a technician employed by CROC/Turbo Ion, Inc. ■ Purchase from an unauthorized vendor



Register your product within 30 days of purchase to activate its 5 year warranty (= 1 year full warranty & 4 year limited warranty) For more information on warranty coverage, please visit www.croc.usa.com
WARRANTY ONLY VALID WHEN THIS CARD IS COMPLETED AND RETURNED WITHIN 30 DAYS OF PURCHASE

YOU MUST SUBMIT TO REGISTER:

1. Completed Warranty Card
2. Photocopy or cut out of UPC code from packaging
3. Photocopy of valid receipt from an authorized vendor(Proof of Purchase)

TO FILE A WARRANTY CLAIM OR RETURN:

Visit www.CROCUSA.com/warranty/
 Follow directions listed in the Returns/Replacements Process

WARRANTY DOES NOT APPLY FOR THE FOLLOWING CASES:

- Expired warranty (1 year).
- No proof of purchase.
- Tampering with product.
- Normal wear and tear.
- Damage caused by misuse and mishandling.

For more warranty coverage information, please visit the Warranty page on www.CROC USA.com

Item	CROC PREMIUM IC DRYER
Salon or Customer's Name	
Address	
Tel.	
E-mail	
Date of Purchase	/ /
Distributor's Name, Address, & Tel.	

**PLEASE MAIL TO: CUSTOMER SERVICE CENTER
 6800 8th Street, Buena Park, CA 90620**

WARRANTY VALID WHEN PURCHASED FROM A PROFESSIONAL SALON OR DISTRIBUTOR. WARRANTY WILL BE VOID IF PURCHASED FROM AN ONLINE RETAILER OR AUCTION SITE. FOR MORE INFORMATION VISIT OUR WEB SITE AT WWW.CROC USA.COM OR CONTACT OUR CUSTOMER SERVICE DEPARTMENT: 714.521.2255 / 844.888.CROC(2762) IF YOU LOSE YOUR CROC INSTRUCTION MANUAL, PLEASE VISIT WWW.CROC USA.COM TO PRINT OR DOWNLOAD MANUAL DIRECTLY FROM YOUR CROC PRODUCT'S PAGE. **Should repair or replacements be necessary, charges may apply. Shipping and handling charges will apply to all national and international warranty claims.*



WARNING DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER.

MADE IN KOREA