 
 


REPUBLIC of CROC

CRYSTALLINE
CURLING IRON
PRODUCT MANUAL

NAME OF PARTS

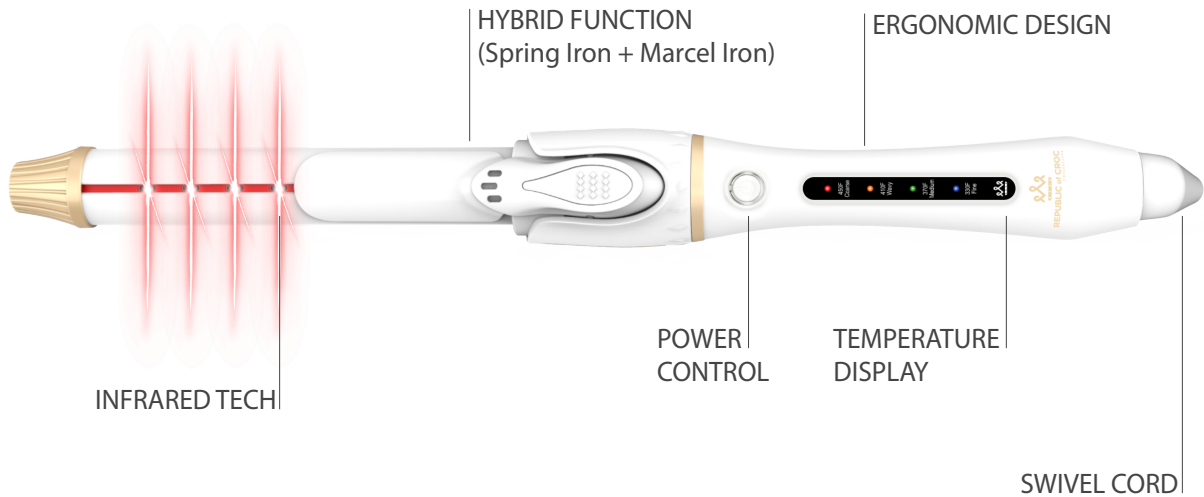

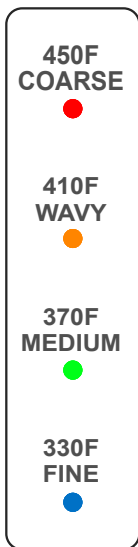

- * Use of hair styling products before ironing is not recommended.
- * If hair condition is questionable, please perform a strand test before curling ironing the hair.


Section off hair accordingly. Keep the curling iron an inch and a half away from the scalp.

Work with hair in manageable sections and use guided temperature settings recommended necessary to curl hair. (Evaporation of excess moisture does not indicate damage to the hair).



* Use a comb to separate and section hair while using curling iron is recommended.

POWER ON/ OFF

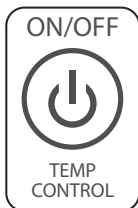Power is turned on or off by pressing down ON/OFF [] button.



TEMPERATURE CONTROL

You can select the temperature by pressing the [] control button. The temperature will indicate by LED light as you press the button. To change the temperature, continuously press the [] button.

IMPORTANT! After 50 minutes of inactivity, the curling iron will automatically shut off for safety and conservation of energy. By pressing the ON/OFF button, the temperature selected is reached again

STYLING TIPS



For Tight Curls or Hard to Curl Hair: Hold curling iron in place for up to 20 seconds.



For Loose Curls or Waves: Hold curling iron in place for less than 20 seconds.

STYLING DIRECTIONS

1. Place glove on the hand in which you hold the hair. 2. Select a small even strand of hair to place in a curl. 3. Place base of the handle near the scalp of your head with tip facing down. 4. Wrap hair from the base of the curling iron to the tip in a downward direction. 5. Hold for 2 to 5 seconds. 6. Without pulling curling iron down, release lock on barrel allowing hair to slide out. 7. Slide curling iron out of the hair. DO NOT pull it down; it will make the curl tangle.

TEMPERATURE GUIDE

IRON TEMPERATURE	HAIR TYPE
370°F(185°C)	For fine or chemically treated hair
400°F(205°C)	For medium textured hair
430°F(220°C)	For thick, coarse hair

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER- As with most electrical appliances, electrical parts are electrically live even when the switch is off:

To reduce the risk of death by electric shock:

- Always unplug this appliance immediately after using.
- Do not use while bathing.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals, with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachment not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered

CONTINOUED....

- Do not use an extension cord with this appliance.
- This curler iron is hot when in use. Do not let eyes and bare skin touch heated surface
- Do not place the heated curling iron directly on any surface while it is hot or plugged in. Use the stand provided
- Do not touch the posts that hold the curlers. They are hot.
- This curling iron and clip are hot when in use. Do not let eyes and bare skin touch heated surface.
- **WARNING** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- If the supply cord is damaged. It must be replaced by the manufacturer. Its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNNING:** Don not touch the top cover during normal use.
- **WARNNING:** For household use only!
- This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS

SERVICING OF DOUBLE-INSULATED APPLIANCE

In a double –insulated appliance , two systems of insulation are provided instead of grounding . No grounding means provided on a double-insulated appliance, nor should a means for grounding be added to appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement part for a double-insulated appliance must be identical to the part they replace. A double-insulated appliance is marked with word “DOUBLE INSULATION” or “DOUBLE INSULATED”. The symbol (square within square) may be marked on the appliance.

Please revise the instructions according to our curler and add to manual.

OPERATING INSTRUCTIONS

1. Switch it on by click "ON/OFF" button and LED indicator is lit without flashing

- The hair curler --- Insert a 2 inch section of hair between the barrel, then squeeze the handle together and twine slowly through hair from the roots to the end. Hold hair on curler for 5-15 seconds. Release the end of hair and pull the curler straight out.
- To use, please put DRY hair on the barrel, and then twine it from the roots to the end of the hair.
- Shut off the product by click the "OFF/ON" button , unplug the hair curling iron brush, and leave it to cool down completely before storing it away

USER-MAINTENANCE INSTRUCTIONS

- Before carrying out any cleaning or maintenance, please make sure the appliance is unplugged and has cooled down.
- If the appliance isn't working properly, please firstly check the plug and then check that the main electric supply is switched on. Do not tamper with it. For any repairs, please contact the technical service centre authorized by the manufacturer or its agent.
- Never wrap the power cord around the curler iron when it is unplugged.
- If the cord of a hand-supported appliance is twisted, to untwist the cord before use.
- The appliance has no user serviceable parts.

CLEANING

- Before cleaning, please make sure the appliance is unplugged and has cooled down.
 - Don't immerse the appliance into liquid for cleaning.
- After cooling down, use cloth to clean the working surface or other part.