

## TEMPERATURE MODE SWITCH | **DUAL ZONE** REFRIGERATOR

1. Press the **UP** and **DOWN** buttons at the same time for about **3 seconds** to enter the **SETTING** mode. Automatically exit the SETTING mode if operation stops for about 10 seconds.

2. On the **SETTING** mode, the left digital tube displays the setting parameter, which can be changed by pressing the SET button. They are in order:

- MO** (temperature setting ranges switch);
- HF** (quick cooling selection);
- UD** (upper temperature difference setting);
- DD** (lower temperature difference setting);
- BR** (display brightness setting).

3. On the **MO** mode, the right digital tube displays 1 or 2. Press the UP or DOWN key to select the value 1 or 2.

Mode 1: the temperature setting range is

- **UPPER** zone: 4~15°C or 39~60°F;
- **LOWER** zone: 7~18°C or 45~64°F;

Mode 2: the temperature setting range is

- **UPPER** zone: 1~15°C or 34~60°F;
- **LOWER** zone: 4~18°C or 39~64°F;

4. In the **HF** mode, the right digital tube displays ON or OFF. Press the UP or DOWN key to select ON or OFF.

- **ON**: QUICK cooling is selected.
- **OFF**: exit QUICK cooling.

Note: QUICK cooling cannot be selected when the refrigerator is not in cooling cycle.

5. In the **UD** mode, the right digital tube displays the upper temperature difference value. It can be set by pressing the UP and DOWN keys, and the range is between 1 and 14°F.

6. In the **DD** mode, the right digital tube displays the temperature difference value. Press UP or DOWN key to set, the range is between 0~-5°F.

7. In the **BR** mode, the right digital tube displays the brightness of the display screen. Press UP, or DOWN key to set, the range is between 0~5. The default value is 3.

## TEMPERATURE MODE SWITCH | **SINGE ZONE** REFRIGERATOR

1. Press the **UP** and **DOWN** buttons at the same time for about **3 seconds** to enter the **SETTING** mode. Automatically exit the SETTING mode if operation stops for about 10 seconds.

2. On the **SETTING** mode, the left digital tube displays the setting parameter, which can be changed by pressing the SET button. They are in order:

- MO** (temperature setting ranges switch);
- HF** (quick cooling selection);
- BR** (display brightness setting).

3. On the **MO** mode, the right digital tube displays 1 or 2. Press the UP or DOWN key to select the value 1 or 2.

Value 1: the temperature setting range is 4~18°C or 39~64°F.

Value 2: the temperature setting range is 1-18°C or 34-64°F.

4. In the **HF** mode, the right digital tube displays ON or OFF. Press the UP or DOWN key to select ON or OFF.

- ON**: QUICK cooling is selected.
- OFF**: exit QUICK cooling.

Note: QUICK cooling cannot be selected when the refrigerator is not in cooling cycle.

5. In the **BR** mode, the right digital tube displays the brightness of the display screen. Press UP or DOWN key to set, the range is between 0~5. The default value is 3.