Installation Instructions

Important!

Before installation please read Product Liability Disclaimer attached

Polaris Finger Throttle

Removal



(1) Take off the side panels of your machine by undoing the latches and pulling the panels off. Using a small flat head screwdriver release the two rivet tabs on either side of the hood by prying the centers out.



(2) Undo the two bolts around the steering column holding the hood on and slide the hood forward to release it. Undo all wire harness plugs connected to the hood to properly remove the hood from the machine.



(3) Pull out the black cloth cover that contains the wiring harness tucked in front of the steering column. Undo the Velcro to expose the harness plugs.



(4) Cut zip ties holding the wires running from the throttle block to the handlebars.



(5) Using a Philips screwdriver, undo the four screws to remove the backing plate on your thumb throttle block.



(6) With the backing plate off, undo the bolt on the clamping plate of the thumb throttle and slide it away from your grip to remove it.



(7) Remove the pivot pin from the thumb lever by removing the Eclip and sliding the pin out. Slide the throttle cable end out of the thumb lever to detach the thumb lever from the assembly.



(8) Use a pick tool to remove the C-clip holding the throttle cable housing in. Pull the cable housing out and slide the cable through the slot to detach the housing.



(9) Remove the throttle position switch from the throttle block and remove the throttle block from the handle bar.



(10) Follow the wires from the throttle position switch to the harness plug. Using your thumb, press down the lock tab to disconnect the plug connector.



(11) Follow the wires from your thumb heater to the harness plug and disconnect the plug by prying up the locking tab with a screwdriver.

Installation



(12) Plug your new finger throttle into the plug you disconnected the thumb heater from.



(13) Plug the white jumper connector provided with your finger throttle into the plug the throttle position switch was disconnected from.

WARNING!!!


This jumper connector bypasses your throttle safety switch and in doing so your machine will not sense your finger on the throttle. If for some reason your throttle is stuck open due to ice/snow build up or poor throttle adjustment, your machine will continue to accelerate weather or not your finger is on the throttle. Please read step 8 (Throttle adjustment) carefully. Refer to Liability Disclaimer for more information.



(14) Undo the two clamp bolts on your new finger throttle using an Alan key. Route the wires from the heated grip through the slot in the throttle block. Clamp the finger throttle assembly to the handle bar and snug up the clamp bolts being sure not to pinch the wires.



(15) After routing the throttle cable in front of the handlebars, insert the throttle cable end into the finger lever slot.

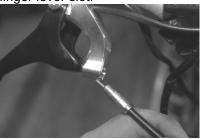

(16) Pull on the cable housing. Slide the cable through the slot in the aluminum block and release the housing into place.



(17) Using the C-clip provided with your finger throttle, install it onto the end of the cable housing.



(18) Pull the rubber boot to expose the throttle cable adjuster in front of the handlebars and undo the plastic locking nut with your fingers.



(19) With the throttle lever in the full throttle position, tighten the cable

tension by unscrewing the plastic adjuster until you feel the finger lever start to pull away from the bar. Screw the adjuster back in one full turn. The finger lever should contact against the grip firmly with no excess tension on the cable.

IMPORTANT:

When the throttle is released make sure there is at least 1/8" of free play in the cable between the lever and the throttle cable housing. If the gap between the lever and the housing is too tight or touching, loosen off the cable adjuster to allow for proper clearance. IMPROPER CABLE ADJUSTMENT CAN LEAD TO MACHINE DAMAGE, INJURY, OR DEATH! Tighten locking nut and slide rubber boot back over the cable adjuster. Check again for proper clearance.



(20) Cover up the harness plugs with the cloth boot and tuck them back into the machine. Put the hood back on making sure to connect all the harness plugs that were disconnected earlier. Fasten hood bolts and rivets. Install side panels.



(21) Using zip ties, fasten loose wires to your handlebars.



(22) Adjust finger throttle for rider preference. Tighten clamp bolts, and you're done!

PRODUCT LIABILITY DISCLAIMER

TERMS OF USE, WARRANTY & LIABILITY WAIVER

Munster Innovations Inc. offers its products with the terms, conditions and notices as follows. The following terms and conditions apply to all sales and uses. Please review carefully. These terms and conditions include limited warranties and disclaimers of liabilities. Keeping, using or allowing use of Munster Innovations Inc.'s products indicates your agreement to these terms. If you do not wish to agree to these terms, you have 14 days from the date of purchase to return the unused product.

Terms of use

This product is offered to you conditioned upon your acceptance without modification of the terms, conditions, and notices contained herein.

Exclusive Obligation

This product has been designed for a variety of uses, but was neither designed nor manufactured as a product for lethal purposes. This product may not be used for unlawful purposes and that use is expressly prohibited under the terms and conditions of its use.

Use limitation

You may not modify, copy, distribute, transmit, display, perform, reproduce, publish, license, create derivative works from, transfer, or sell, any information, software, products or services obtained, from Munster Innovations Inc.'s website or its products.

Limited Replacement Warranty

This product is warranted against any manufactured defect for a period of twelve months from date of purchase.

High Risk Activity

Products sold by Munster Innovations Inc. include equipment used in extreme sporting activity such as snowmobiling. Participation in this activity is associated with a high level of risk. Risks include but are not limited to serious physical injury, disability and/or death. You participate in this activity at your own risk.

Assumption of Risk

By buying, using, or allowing the use of Munster Innovations Inc.'s products, you understand and agree that extreme sporting activities including snowmobiling are high risk activities and, to the extent permitted by law, YOU EXPRESSLY AND VOLUNTARILY ASSUME THE RISK OF DEATH OR OTHER PERSONAL INJURY SUSTAINED WHILE PARTICIPATING IN SUCH ACTIVITIES WHETHER OR NOT CAUSED BY THE NEGLIGENCE OR OTHER FAULT OF Munster Innovations Inc. including but not limited to equipment malfunction from whatever cause, or any other fault of Munster Innovations Inc. Additionally, you agree to indemnify, defend, and hold Munster Innovations Inc. harmless rom any third party claims arising from such High Risk Activities or any other Munster Innovations Inc.

Vehicle Modification

Modification of vehicles, such as snowmobiles, through the use or misuse of Munster Innovations Inc. products can lead to vehicle malfunction causing serious risk. Risks include but are not limited to vehicle damage, serious physical injury, disability and/or death. You are responsible for any modifications you perform on your or anyone else's vehicle using Munster Innovations Inc. products. Munster Innovations Inc. is not responsible and will not be held liable for any modifications done to vehicles, such as snowmobiles, through the use or misuse of its product, even if the modifications include but are not limited to, bypassing or eliminating vehicle safety features, installing parts that go against the vehicle manufacturer safety regulation and standards, and/or improper installation and adjustment of Munster Innovations Inc. products.

Limitation Of Liability

As set forth above under the limited warranty provisions, Munster Innovations Inc. liability is limited to repair or replacement of its products which are returned to it in the specified period of time. In no event shall Munster Innovations Inc. liability exceed the value of the product(s) sold. In no event shall Munster Innovations Inc. be liable for any direct, indirect, punitive, incidental, special or consequential damages whatsoever arising out of or connected with the use or misuse of any of its products.

Warning

Use and misuse of products sold by Munster Innovations Inc. involves serious risks including injury, disability and death. Purchasers assume all risks.

Inspect Before Each Use

This product must be inspected for use to ensure it has not been damaged in shipment. If damaged, do not use and immediately return the product to Munster Innovations Inc. for a replacement.

Entire Obligation

The PRODUCT LIABILITY DISCLAIMER document states the entire obligation of Munster Innovations Inc. with respect to the products. If any part of this disclaimer is determined to be void, invalid, unenforceable or illegal, including, but not limited to the warranty disclaimers and liability disclaimers and liability limitations set forth above, then the invalid or unenforceable provision will be deemed superseded by a valid, enforceable provision that most closely matches the intent of the original provision and the remainder of the agreement shall remain in full force and effect.

Applicable Law

Your order from Munster Innovations Inc., and this disclaimer statement are governed by the laws of the province of British Columbia, Canada. You hereby consent to the exclusive jurisdiction and venue of the Supreme Court of Canada, in all disputes arising out of or relating to the use of this product. Use of this product is unauthorized in any jurisdiction that does not give effect to all provisions of these terms and conditions, including without limitation this paragraph.

Modification of Terms and Conditions

Munster Innovations Inc. reserves the right to change the terms, conditions, and notices under which it's products are offered.