

How to Set Up a BlackWolf Grasshopper 3 UL Tent

1. Find a flat piece of earth, clear away any sticks or rocks that might damage the bottom of the tent. Keep your tent away from flames and fire.
2. Layout the inner tent and peg it out at the corners. The edges should be taught but not stretched tight.
3. Assemble the poles, making sure each section locks together.
4. The poles are colour coded to match the straps on the tent. The long pole goes from one corner to the other. The 2 short poles go over the long pole from the corner to the eyelets above the tent doors. The last step is to attach the plastic clips to the tent poles and the inner tent is pitched.
5. Unroll the fly and lay it over the tent. Line up the doors and attach the eyelet at the top of each door. The strap colours should match up at the corners, buckle them in and tighten them up.
6. Securely, peg out the fly, including the guy lines. This is important especially if the weather gets a bit rough.



How to Take Down a BlackWolf 3 UL Tent

1. Remove all pegs, clean, dry, and store in the tent peg bag
2. Unhook & unbuckle fly from the inner tent.
3. Remove poles, break down, and put away in the tent pole bag
4. Flip the inner tent over and allow the bottom to dry.
5. Once all pieces are dry, flip the inner tent right side up. Fold the tent in half, and in half again lengthwise, until the width is approximately the size of the tent carry bag.
6. Repeat this step with the fly.
7. Place the fly on top of the tent and roll them up with poles and pegs.
8. Your tent should fit nicely inside the storage bag.
9. Running home after getting caught in a storm? Don't store your tent damp, make sure to dry it out once you get home to avoid mildew damage.