



## STAND UP LEAF TRIMMER ASSEMBLY INSTRUCTIONS

### INCLUDED IN THE BOX:

- Trimmer
- 4 Legs
- Catch Bag
- 110V Power Cord
- 6 Replacement Blades

### ASSEMBLY INSTRUCTIONS:

1. Insert legs into trimmer unit and tighten leg knobs.
2. Install Catch Bag onto underside of trimmer using the attached straps. Tighten the straps to ensure a secure fit.
3. Plug included 110V Power Cord into trimmer and then connect to power source.



Please Note: Unit comes with blades pre-installed.

### BEFORE FIRST USE:

Note: The height of the blade is adjustable for this trimmer model. For shipping purposes the blade will be in the highest position (closest to the grill) when first opened. For proper usage, the height must be lowered or the blade may scrape against the grill.

### TO ADJUST BLADE HEIGHT:

1. Ensure the trimmer is turned off and unplugged.
2. Open the grill lid.
3. Loosen the Adjustment Screw.
4. Lower the blade unit to the desired height.
5. Re-tighten the Adjustment Screw.

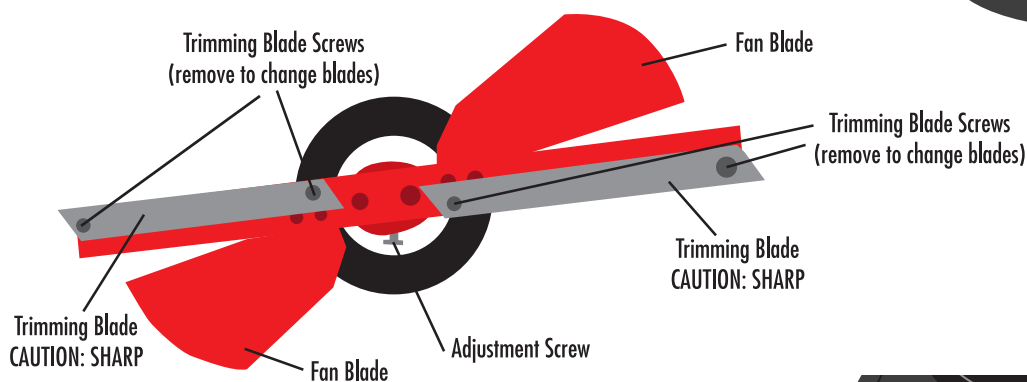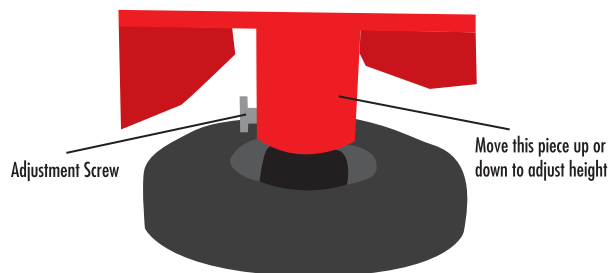

### FUNCTIONS/FEATURES:

- Lid Locking Clips (2)
- Fan Speed Knob (Low, Med, High)
- Power Switch
- Power Cord Plug (cord included)
- Safety Switch (unit will not run unless lid is closed, depressing the switch)
- Adjustment Screw (to adjust height of blades)

