



Introduction

Echo Square is a compact delay pedal for guitar and bass. This multi-mode delay stompbox reproduces 7 different types of classic delay sounds.

Precautions

READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a convenient place for future reference.

Power Supply

Always use a DC 9V center negative AC adapter. Use of an adapter other than that specified could damage the unit or cause malfunction and pose a safety hazard.

Always connect the AC adapter to an AC outlet that supplies the rated voltage required by the adapter.

Disconnect the AC adapter from the AC outlet when during lightning storms or not using the unit for an extended period.

Connections

Always turn off the power before connecting or disconnecting. Make sure to disconnect all cables and AC adapter before moving the unit. This will help prevent malfunction and damages.

Environment Considerations

Avoid using the unit in any of the following conditions that could cause malfunction:

- Extremely hot or cold places
- Under direct sunlight
- Magnetic fields
- Near heaters and other heat sources
- Sandy or dusty places
- Places that are extremely humid or exposed to splashing water
- Places with lots of vibrations

Electrical Interference

Devices that are very susceptible to interference or that emits powerful electromagnetic waves (e.g. radios and TVs) should not be placed near this unit, as interference could occur.

Electromagnetic interference could cause malfunction and could corrupt or destroy data.

Always operate this unit at a suitable distance from these devices.

Handling

Do not apply excessive force to the switches and other controls, exposing the unit to strong impacts, which could cause it to break.

Do not put foreign objects or liquids into the unit.

Never open the case or attempt to modify the product in any way since this can result in damage to the unit.

Clean only with a soft, dry cloth.

Overview

● Multiple echo styles

With 7 delay modes including digital, analog, tape, mod, sweep, lo-fi, and reverse, Echo Square gives you tons of options to experiment and create ambient tones.

● Easy, flexible controls


After choosing from one of the 7 delay types, continue to craft your delay with three wide-range delay parameters.

● Carefully selected components

The Echo Square pedal was designed and manufactured with quality components to ensure exceptional sound and sturdy performance. The aluminum alloy casing ensures touring reliability, and the all metal footswitch is ready for heavy duty applications.

折起朝外

Connections & Controls

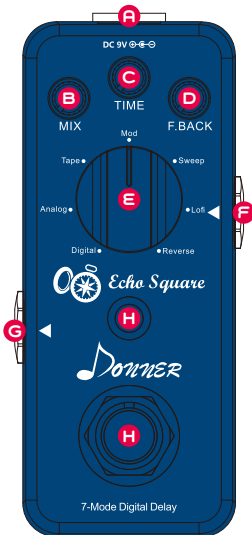

A DC 9V Jack:

For power supply, use a 9-volt DC regulated by AC adapter, 500mA (plug polarity is positive on the barrel and negative in the center).

E MIX Knob:

Adjusts dry/effect signal ratio.

C TIME Knob:

Adjusts the delay time.

D F.BACK Knob:

Adjusts the amount of feedback (number of repeats).

E Mode Selector:

Selects type of delay.

Digital: Pure, clear delay sound.

Analog: Warm, vintage delay sound.

Tape: Simulates a vintage tape echo sound.

Mod: Delay with modulation.

Sweep: Delay with a sweeping filter.

Lofi: Delay with a sample reducing feedback.

Reverse: Delay with reversed feedback.

F Input Jack:

1/4" mono audio jack, for connecting guitar.

G Output Jack:

1/4" mono audio jack, for connecting to an amplifier.

H Footswitch and LED:

Tap to switch the unit on/off. The LED will lit up when the effect is on.

Features

- Convenient compact size
- 7 mode delay effects in one stompbox
- Wide threshold range suitable for every music style
- True Bypass
- Digital circuit design
- Reliable aluminum alloy casing and all metal footswitch

Specifications

Power Requirement: 9V DC center negative
Current Consumption: 140mA
Dimensions: 42x93.5x52mm
Weight: 230g



www.donnerdeal.com

折起朝外

技术要求:

120g书纸, 138*100mm, 四色印刷 (折起单面46*100mm)