


# ACOUSTIC AMPLIFIER

## DGA-1

### Operation Manual



www.idonner.com  
www.donnerdeal.com

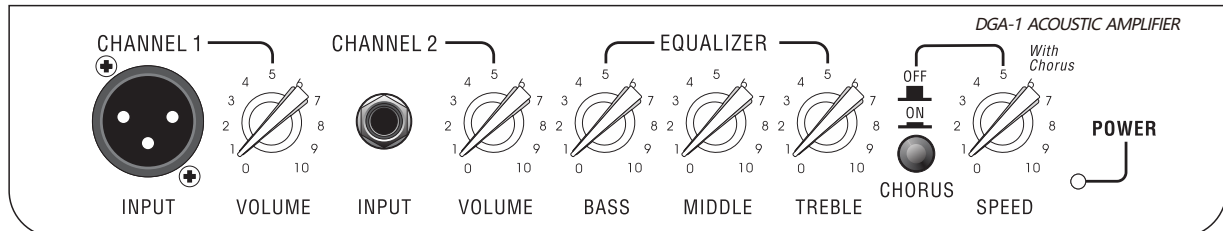

### CONTROL FUNCTIONS

#### CHANNEL 1

**INPUT JACK** ----RCA jack for instrument input.

**VOLUME** -----Adjusts the overall level or volume of the amplifiers.

#### CHANNEL 2

**INPUT JACK**---1/4" jack for instrument input.

**VOLUME**-----Adjusts the overall level or volume of the amplifiers.

**BASS**-----Controls the boost and cut of the low frequency range.


**MIDDLE**-----Controls the boost and cut of the mid-range frequencies.

**TREBLE**-----Controls the boost and cut of the upper frequencies.

**CHORUS**-----This turns the chorus effect on or off.

**SPEED**-----This controls the ripple speed of the chorus effect.

**POWER INDICATOR**----Indicates when the unit is on.

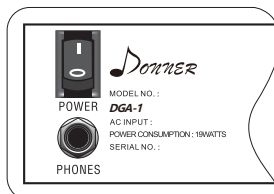

**ON/OFF SWITCH**----Turns the AC power on and off.

**HEADPHONE JACK**----For connecting headphones with a 1/4" stereo plug. When using the headphone jack, the speaker is disconnected.

### SPECIFICATIONS

**OUTPUT POWER**

**15WATTS (MAX)**

**SPEAKER**

**6.5(Inch), 8(Ohm)**

**DIMENSIONS**

**340(W) \* 265(H) \* 185(D) mm**

**AC POWER**

| VOLTAGE                  |      |                          |      |                          |      |                          |      |
|--------------------------|------|--------------------------|------|--------------------------|------|--------------------------|------|
| <input type="checkbox"/> | 100V | <input type="checkbox"/> | 115V | <input type="checkbox"/> | 230V | <input type="checkbox"/> | 240V |

**POWER CONSUMPTION** 19 WATTS

#### WARNING-

**Amplifier fails to function, please contact your local distributor.**

**Under no circumstances remove the back panel of the amplifier while it is Connected to main supply.**