

# **Owner's Manual**

## Introduction

The Looper is a small and highly intuitive single footswitch loop station pedal providing you simple and fun looping. Unlimited overdubs and undo/redo function are very convenient for creating musical inspirations.

## Precautions

#### READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a convenient place for future reference.

#### **Power Supply**

Always use a DC 9V center negative AC adapter. Use of an adapter other than that specified could damage the unit or cause malfunction and pose a safety hazard. Always connect the AC adapter to an AC outlet that supplies the rated voltage required by the adapter. Disconnect the AC adapter from the AC outlet when during lightning storms or not using the unit for an extended period.

#### Connections

Always turn off the power before connecting or disconnecting. Make sure to disconnect all cables and AC adapter before moving the unit. This will help prevent malfunction and damages.

#### **Environment Considerations**

Avoid using the unit in any of the following conditions that could cause malfunction:

- Extremely hot or cold places
- Under direct sunlight
- Magnetic fields
- Near heaters and other heat sources
- Sandy or dusty places
- Places that are extremely humid or
- exposed to splashing water
- Places with lots of vibrations

#### **Electrical Interference**

Devices that are very susceptible to interference or that emits powerful electromagnetic waves (e.g. radios and TVs) should not be placed near this unit, as interference could occur.

Electromagnetic interference could cause malfunction and could corrupt or destroy data.

Always operate this unit at a suitable distance from these devices.

### Handling

Do not apply excessive force to the switches and other controls, exposing the unit to strong impacts, which could cause it to break.

Do not put foreign objects or liquids into the unit.

Never open the case or attempt to modify the product in any way since this can result in damage to the unit. Clean only with a soft, dry cloth.

## Overview

#### Easy Controls

The Looper provides you simple and intuitive user experience. Single footswitch provides you convenient looping operations, making your music creation more enjoyable.

### ●CD Quality Recording/Playback

The Looper offers you CD quality recording and playback that give you a pure, uncompressed, lossless sound.


### Undo/Redo And Overdubs

The Looper supports unlimited overdubs. You can undo/redo your last recording by holding the footswitch after overdubbing.

#### Carefully Selected Components

The Looper is designed and built with carefully selected components to ensure best sound quality and road performance. The solid Aluminum-alloy chassis ensures touring reliability.

## **Connections & Controls**

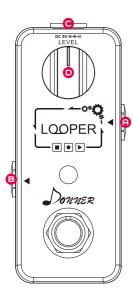

## Input Jack:

1/4" mono audio jack, for connecting instruments or other pedals.

## Output Jack:

1/4" mono audio jack, for connecting amps or other devices.

## OC 9V Jack:

For power supply, use a 9-volt DC regulated by ac adapter, 500mA (plug polarity is positive on the barrel and negative in the center).

## LEVEL Knob:

Controls the looper playback volume.

# Features

- Convenient compact size
- Easy-to-use looper
- CD quality recording and playback
- Infinite overdubs
- Supports undo/redo function
- Max. recording time: 10 minutes
- ●LED indicator shows working state

# Specifications

Max. Recording Time: 10 minutes Power Requirement: 9V DC center negative Current Consumption: 90mA Dimensions: 42x93.5x52mm Weight: 230g Material: Aluminum alloy

## **Operating Instruction**

Operation	Function/Status	LED
Power on (no loop)	Empty	None
Power on (with loop)	Stop	Green (flashes)
Tap footswitch (no loop)	Record	Red (solid)
Tap footswitch when recording/overdubbing	Play	Green (solid)
Tap footswitch when playing	Overdub	Red (solid)
Hold footswitch when playing	Undo/Redo (last recording)	Green (flashes fast)
Tap footswitch twice when playing/recording/overdubbing	Stop	Green (flashes)
Hold footswitch when stopped	Clear	Green (flashes fast)
Recording around 10 minutes	Storage nearly full	Red (flashes)



www.donnerdeal.com