



# Alpha Cruncher

## Introduction

The Mini Effect Chain series Alpha Cruncher is a compact effects pedal chain that combines a classic amp distortion with two go-to effects. It is a perfect fly gig solution for guitarists.

## Overview

### ●Three modules in one

The Alpha Cruncher starts with a wide-range British high gain amp distortion with volume, gain, and tone controls, perfect for classic rock styles. A dreamy chorus is next with extended mod controls. Third in line is an analog voiced delay, with rich echo feedback.

### ●Easy, flexible controls

Each module is fully adjustable with mini knob control. The knobs are fitted with grip-friendly rubber rings so you can tweak your tone on the fly.

### ●Carefully selected components

The Alpha Cruncher pedal was designed and manufactured with quality components for exceptional sound and sturdy performance. The aluminum alloy casing and all metal footswitches ensure road worthy reliability.

## Features

- Convenient compact size
- Three must-have modules in one stompbox chain
- Buffer Bypass
- Reliable aluminum alloy casing and all metal footswitches

## Specifications

Power Requirement: 9V DC center negative  
Current consumption: 70mA  
Dimensions: 196x64x452mm  
Weight: 320g  
Material: Aluminum alloy


## Owner's Manual

# Alpha Cruncher



## Connection & Controls

**OUT Jack:** 1/4" mono audio jack, for connecting to amplifier.

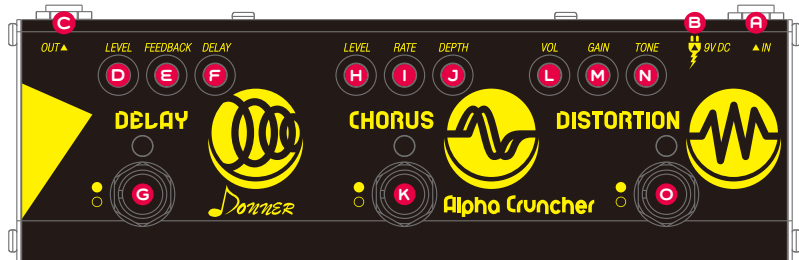

**IN Jack:** 1/4" mono audio jack, for connecting instrument.

**9V DC Jack:** Use 9V DC regulated with AC adapter (500mA barrel positive, center negative).

### DELAY

- LEVEL Knob:** Adjusts the delay volume.
- FEEDBACK Knob:** Adjusts the amount of feedback (number of repeats).
- DELAY Knob:** Adjusts the delay time (Max. 1000ms).
- Footswitch:** Turns the effect on/off.

### CHORUS

- LEVEL Knob:** Adjusts the chorus volume.
- RATE Knob:** Adjusts the chorus speed.
- DEPTH Knob:** Adjusts the chorus soun depth.
- Footswitch:** Turns the effect on/off.

### DISTORTION

- VOL Knob:** Adjusts the output level.
- GAIN Knob:** Adjusts the amount of distortion.
- TONE Knob:** Adjusts the effects tone.
- Footswitch:** Turns the effect on/off.

## Precautions

### READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a convenient place for future reference.

### Power Supply

Always use a DC 9V center negative AC adapter. Use of an adapter other than that specified could damage the unit or cause malfunction and pose a safety hazard.

Always connect the AC adapter to an AC outlet that supplies the rated voltage required by the adapter.

Disconnect the AC adapter from the AC outlet when during lightning storms or not using the unit for an extended period.

### Connections

Always turn off the power before connecting or disconnecting. Make sure to disconnect all cables and AC adapter before moving the unit. This will help prevent malfunction and damages.

### Environment Considerations

Avoid using the unit in any of the following conditions that could cause malfunction:

- Extremely hot or cold places
- Under direct sunlight
- Magnetic fields
- Near heaters and other heat sources
- Sandy or dusty places
- Places that are extremely humid or exposed to splashing water
- Places with lots of vibrations

### Electrical Interference

Devices that are very susceptible to interference or that emits powerful electromagnetic waves (e.g. radios and TVs) should not be placed near this unit, as interference could occur.

Electromagnetic interference could cause malfunction and could corrupt or destroy data.

Always operate this unit at a suitable distance from these devices.

### Handling

Do not apply excessive force to the switches and other controls, exposing the unit to strong impacts, which could cause it to break.

Do not put foreign objects or liquids into the unit.

Never open the case or attempt to modify the product in any way since this can result in damage to the unit.

Clean only with a soft, dry cloth.



www.donnerdeal.com