

# Bivocom<sup>®</sup>

## Industrial 5G/4G Mini IoT Router TR323 Series User Guide



Note: interfaces of hardware for different models (5G and 4G version, GNSS) will be different.

## Copyright

Copyright © XIAMEN BIVOCOM TECHNOLOGIES CO., LTD. All rights reserved.

## Trademark

BIVOCOM logo is a registered trademark of Xiamen Bivocom Technologies Co., Ltd. All other trademarks belong to their respective vendors or manufactures.

## Disclaimer

Product specifications and information in this document are subject to change without any notice, and BIVOCOM reserves the right to improve and change this user guide at any time. Users should take full responsibility for their application of products, and Xiamen Bivocom Technologies Co., Ltd. disclaims all warranties and liability for the accurateness, completeness of the information published.

## Global Technical & Sales Support

# Bivocom

**Xiamen Bivocom Technologies Co., Ltd.**

Addr: Unit 1402-2, No. 39, Xixi Shanwei Road, Software Park #3,  
Xiamen, China

Tel.: +86 158 8026 2905

Fax: +86 592 6211727

Email: [support@bivocom.com](mailto:support@bivocom.com)

[sales@bivocom.com](mailto:sales@bivocom.com)

[www.bivocom.com](http://www.bivocom.com)

## About This Guide

Thank you for choosing Bivocom Industrial 5G/4G LTE Mini IoT Router TR323 Series.

Please thoroughly read this user guide before you configure and install the device.

This manual is compatible with below models

Model	Description
TR323-NR	Industrial 5G Mini IoT Router
TR323-LF	Industrial 4G LTE Mini IoT Router

Note: please contact Bivocom team to choose the version of hardware you need for your IoT application, as different interfaces on hardware will have different part number, such as, WIFI, GPS/GNSS, etc.

# Table of Contents

Copyright .....	2
Trademark .....	2
Disclaimer.....	2
About This Guide.....	3
Table of Contents.....	4
1. Introduction .....	6
1.1 Overview .....	6
1.3 Dimensions(103.5x78.2x24.1mm) .....	7
1.4 Physical Characteristics.....	7
2. Getting Started .....	7
2.1 Package Checklist .....	7
2.2 Installation.....	8
2.2.1 Insert SIM Card.....	8
2.2.2 Interfaces connection.....	9
2.2.3 Power Supply .....	11
2.2.4 Cellular Antenna .....	11
2.2.5 WIFI Antenna (Option) .....	11
2.3 LED Indicators.....	12
3. Configuration and Management .....	12
3.1 View .....	13
3.1.1 System .....	13
3.1.2 Network.....	14
3.1.3 Routes.....	14
3.1.4 System Log.....	15
3.1.5 VPN Status .....	15
3.2 Setup .....	16
3.2.1 WAN .....	16
3.2.2 LAN.....	18
3.2.3 Wireless .....	20
3.2.4 Online Detection .....	21
3.2.5 Diagnostics.....	23
3.3 Secure .....	24
3.3.1 DMZ Host.....	25
3.2.2 Port Forwarding .....	25
3.3.3 Traffic Rules.....	26
3.3.4 Custom.....	28
3.4 VPN.....	28
3.4.1 PPTP .....	29
3.4.2 L2TP .....	31
3.4.3 IPSec.....	34

3.4.3 OpenVPN.....	36
3.5 Advanced .....	37
3.5.1 Static Routing.....	37
3.5.2 Net Flow .....	37
3.5.3 GPS Location(Option).....	38
3.5.4 DHCP and DNS .....	39
3.6 Data Collect .....	39
3.6.1 Basic Setting .....	39
3.6.2 Interface Setting.....	39
3.6.3 Modbus Rules Setting.....	40
3.6.4 Server Setting .....	41
3.7 Administrate .....	42
3.7.1 System .....	42
3.7.2 Password .....	43
3.7.3 Time Setting .....	44
3.7.4 Log Settings .....	45
3.7.5 Backup and Restore.....	46
3.7.6 Router Upgrade .....	47
3.7.7 Remote Configured .....	48
3.7.8 Manual Reboot.....	50
3.7.9 Schedule Reboot .....	50
3.8 Logout.....	50

# 1. Introduction

## 1.1 Overview

The TR323 is an industrial mini 5G NR IoT router designed for IoT, M2M, and eMBB applications requiring higher speed, lower latency data transmission. It provides OpenWRT based Linux OS embedded environment that allows IoT developers and engineers to program and install their own applications based on Python, C/C++ to the hardware.

The TR323 router has 2-Gigabit ethernet ports, 1-RS232(debug), 2-RS485, to connect to ethernet and serial controllers, sensors, transferring the data to the cloud server via 5G/4G LTE cellular network. It comes with industrial protocols, such as MQTT, Modbus RTU/TCP, JSON, TCP/UDP, OPC UA and VPN to provide you an efficient and secure IoT data connectivity between field devices and cloud server.

The TR323 router supports dual sim for failover, providing robust and reliable wireless and wired connectivity for your mission-critical industrial applications, and GNSS to track your remote assets, such as EV charging station, solar power, smart pole, smart cities, smart office, smart buildings, smart traffic light, digital signage advertising, vending machines, ATM, etc.

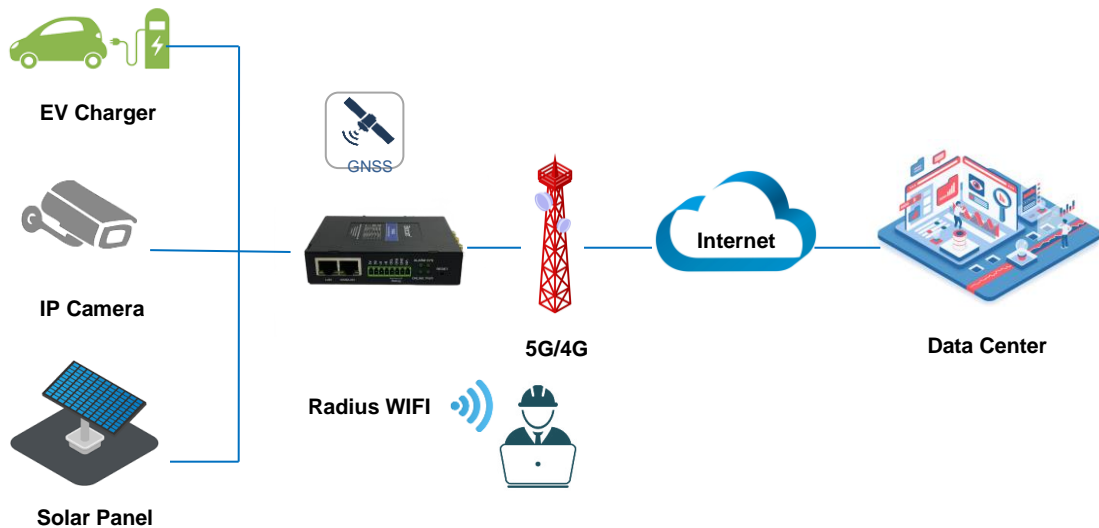


Image 1: Diagram of TR323 Applications

## 1.3 Dimensions(103.5x78.2x24.1mm)

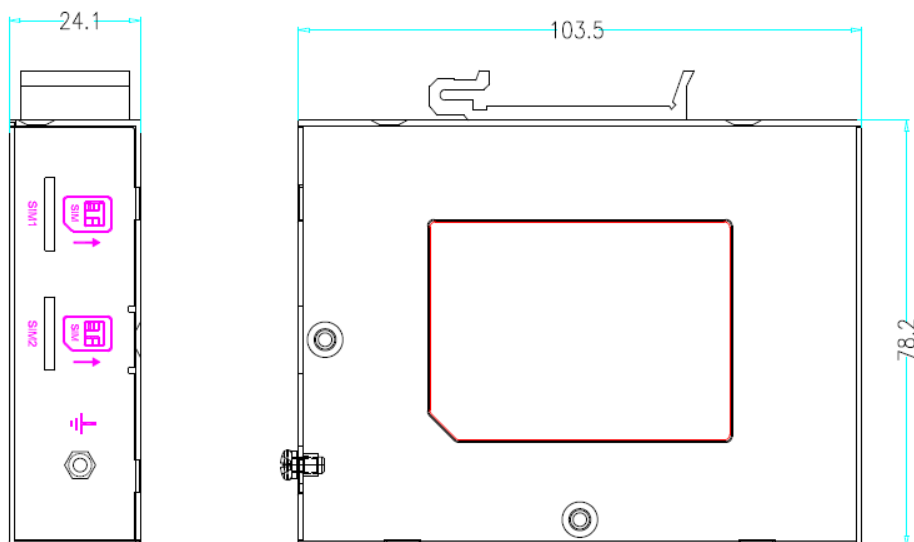


Image 2: dimensions of TR323 of different side views

## 1.4 Physical Characteristics

Physical Characteristics	
Housing	Metal, IP30
Dimensions	Metal, 268g(0.59lbs), without accessories
Weight	268g(0.59lbs), without accessories

## 2. Getting Started

### 2.1 Package Checklist

The following components are included in your standard TR323 package. Check the list before installation. If you find anything missing, please feel free to contact Bivocom.

1. TR323 Router 1PCS
2. Power Adapter 1PCS  
(DC 12V/1.5A, EU/US/UK/AU plug optional)
3. Cellular Antenna

- 5G version: 4PCS
- 4G version: 2PCS
- 4. RS232 Cable 1PCS  
(DB9 Female, 1 meter)
- 5. Ethernet Cable(1 meter) 1PCS
- 6. 8-Pin Terminal Block 1PCS
- 7. DIN-Rail Mount Kits 1PCS

## 2.2 Installation

### 2.2.1 Insert SIM Card

TR323 supports 2 micro SIM, so if you're using a Nano SIM card, you will have to use a Nano SIM to Micro SIM adapter, which normally comes with your SIM card package.

Before you insert the SIM card, make sure your router is powered off, insert the SIM with right direction(with chipset upside) as below, push untill it is locked to make sure it's tightly matched. If you want to remove the SIM card, push the SIM card till it's unlocked.



Image 3: SIM card installation

**Warning: DON NOT install and swap SIM/UIM card when router is powered on.**



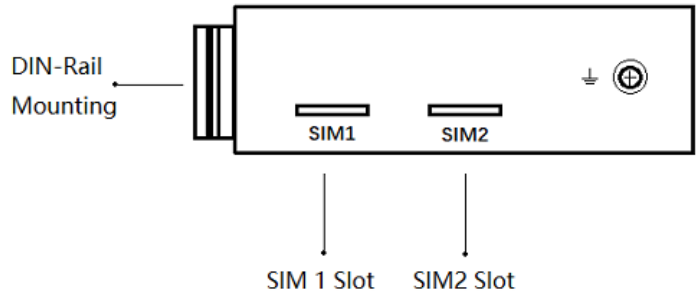


Image 4: Side view of TR323 with dual SIM

## 2.2.2 Interfaces connection

### Hardware Interfaces Instruction (standard TR323-NR and TR323-LF as an example)

Before we start to install and configure the TR323, let's have a quick view of the interfaces of it.(image 5-6 and table 1)

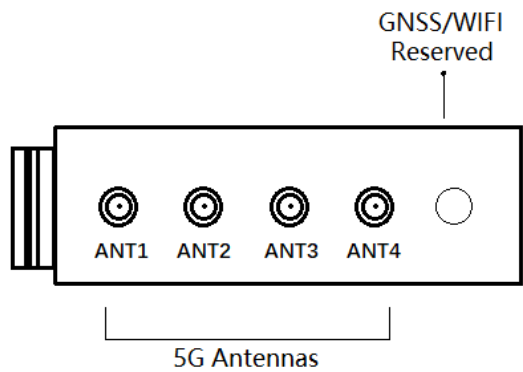


Image 5: TR323-NR 5G version Interfaces


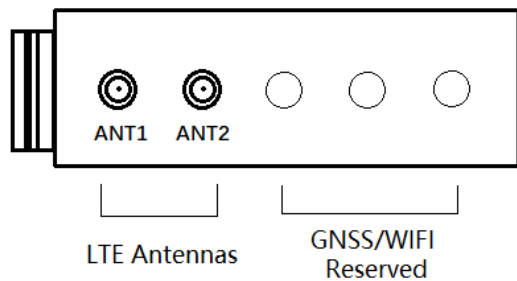


Image 6: TR323-LF 4G version Interfaces

1) Definition for I/O

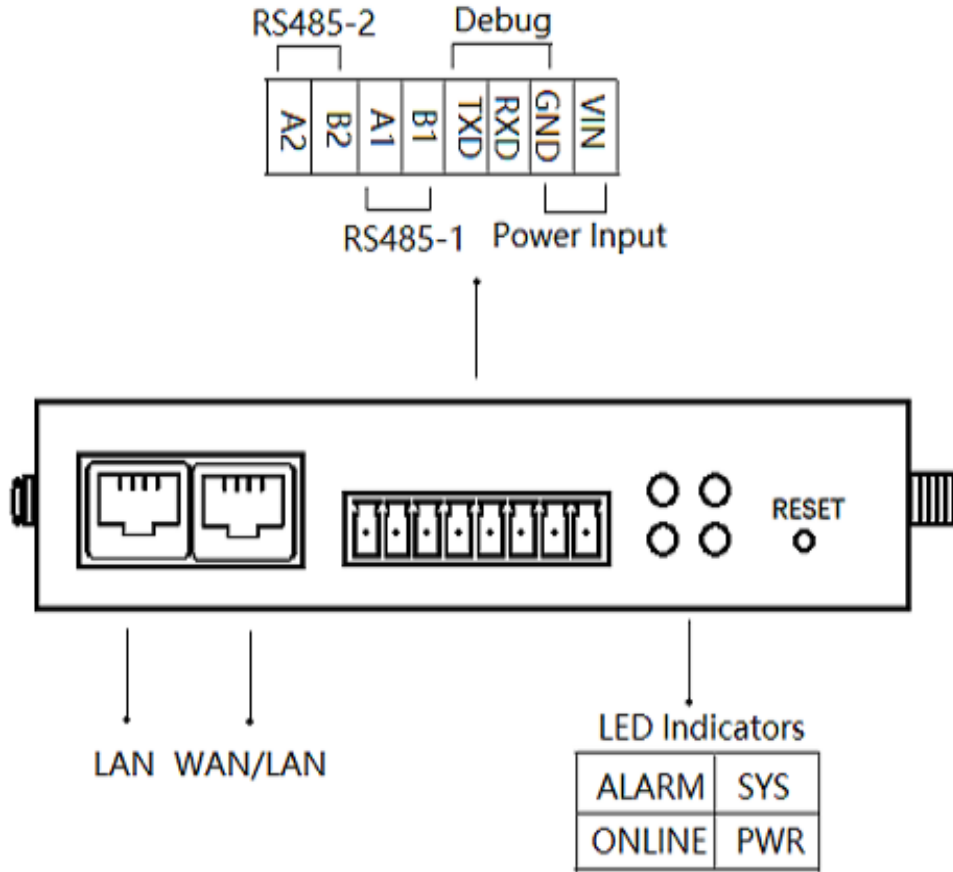

No.	Item	Description
1	A1	RS485 port, used for connecting to sensors, controllers
2	B1	
3	A2	RS485 port, used for connecting to sensors, controllers
4	B2	
5	TXD	RS232 port, used for debug only
6	RXD	
7	GND	
8	VIN	VIN+GND is for DC power input, to power the router

Table 1: I/O of TR323

TR323 supports 1x RS232(Debug only) and 2x RS485 serial ports, which can be used for IoT sensors/controllers, firmware upgrade, system log checking, debug, etc.

TR323 designed with industrial terminal block interface, and the RS232 cable in this package with ends of female connector and stripping cable, the signal of console cable is defined as below.(Table 2)

### RS232 Cable(with DB9 female connector and stripping cable)

Color of cable	Corresponding DB9-Female Pin No.	Corresponding Pin No. of Router (See I/O 1)
Blue	2 (RX)	3(TX)
Brown	3 (TX)	4(RX)
Black	5 (GND)	5(GND)

Table 2: definition of RS232 cable

### RS485 Cable (not included in package)

Color of cable	TR323 Router
Red	1(A)
Black	2(B)

Table 3: definition of RS485

## 2.2.3 Power Supply

We suggest you use Bivocom standard power adapter (1.5A/12VDC) from the standard package mentioned-above. If you have to use your own DC power supply, make sure the power range is 5-35VDC and it is stable enough(Ripple shall be less than 300mV, and Instantaneous voltage shall not larger than 35V), meanwhile, power shall over 4W.

## 2.2.4 Cellular Antenna

TR323 provides 4 cellular antennas(TR323-NR, 5G version) or 2 cellular antennas(TR323-LF, 4G version), which comes with SMA male connector, screw the SMA male antenna to TR323(SMA female port, ANT 1-4 or 1-2, image 5), make sure it is screwed tightly to ensure the strength of signal.

## 2.2.5 WIFI Antenna (Option)

TR323 WIFI antennas which comes with SMA female connector, screw the antenna to TR323 WIFI ports(male), make sure it's screwed tightly to ensure the strenght of signal.(image 5)

## 2.3 LED Indicators

TR323 Series Gateway provides 4 LED indicators, as following.

Indicator	Status	Content
Power	On	Powered On
	Off	Powered Off
Online	On	Router accesses to Internet
	Off	Router doesn't access to Internet
Alarm	On	<ul style="list-style-type: none"><li>● SIM Card is not insert corectly or broken</li><li>● Antenna signal is too weak</li></ul>
	1 Blink Per Second	Cellular module was not registered to router
	2 Blinks Per Second	router doesn't access to Internet
	Off	router doesn't have any alarm
WAN	On	WAN is connected
	Off	WAN is not connected
LAN	LAN1 Blink	LAN1 connected
	Off	LAN is not connected


Table 4: Definition of LED indicators

## 3. Configuration and Management

**To enter into the web config UI, there are 2 ways: Via Ethernet port and WIFI hotspot(If applicible, WIFI is an option feature, not a standard feature).**

Use an Ethernet cable to connect the LAN port of TR323 to your laptop, or use your laptop or mobile phone to connect to WIFI hotspot 'Bivocom' of TR323, login with password of WIFI: admin123, normally your laptop will get an IP address from TR323 DHCP as 192.168.1.xx, otherwise please manually configure your laptop IP to 192.168.1.100.

 Open the browser, enter 192.168.1.1 to enter into to login page, enter username: admin, and password: admin, to go to configuration page.



## Authorization Required

Please enter your username and password.

Username

Password

After enter into the web config page, you'll see a list of menu on left side, as below.

### 3.1 View

To check the following system information.

#### 3.1.1 System

Display system related information, such as firmware version, local time, SN, uptime, etc.

- View
  - System
  - Network
  - Routes
  - System Log
  - VPN Status
- Setup
- Secure
- VPN
- Advanced
- Data Collect
- Administrate
- Logout

### Status

#### System

Hostname	router
Model	TR323
SN	20220730843
Firmware Version	53.1.0.15
Release Time	2022-06-24 11:08:42
Local Time	2022-11-30 14:30:39 Wednesday
Uptime	0h 1m 45s
Load Average	0.24, 0.12, 0.05

#### Memory

Total Available	230524 kB / 253928 kB (90%)
Free	215908 kB / 253928 kB (85%)
Cached	10972 kB / 253928 kB (4%)
Buffered	3644 kB / 253928 kB (1%)

### 3.1.2 Network

Display WAN, LAN, WiFi, DHCP network information.

View

- System
- Network
- Routes
- System Log
- VPN Status
- > **Setup**
- > **Secure**
- > **VPN**
- > **Advanced**
- > **Data Collect**
- > **Administrate**


Logout

---

#### Status

##### Network

---

IPv4 WAN Status	 Type: dhcp eth2.2 Address: 172.17.1.228 Netmask: 255.255.0.0 Gateway: 172.17.144.1 Mac Address: 00:52:24:17:2d:3b DNS 1: 172.17.144.1 Connected: 2h 13m 14s
-----------------	---

---

Online Status	online
---------------	--------

---

Active Connections	<input type="text" value="80 / 16384 (0%)"/>
--------------------	--

---

##### LAN Status

---

IP Address	192.168.1.1
Netmask	255.255.255.0
DHCP Server	Enable
Mac Address	00:52:24:17:2d:3b

---

##### Wireless Status

---

Wireless	Enable
SSID	top-iot_2d3c
Channel	auto
Encryption	wpa2psk-aes
Mac Address	00:0c:43:26:60:40

---

##### DHCP Leases

---

Hostname	IPv4-Address	MAC-Address	Leasetime remaining
DESKTOP-RKDCFBI	192.168.1.204	50:9a:4c:14:19:2a	9h 45m 18s

### 3.1.3 Routes

Display routing tables.

## ARP

IPv4-Address	MAC-Address	Interface
172.17.144.1	00:52:24:89:2d:03	eth2.2
172.17.144.77	1c:a0:b8:80:95:ae	eth2.2
192.168.1.204	50:9a:4c:14:19:2a	br-lan
172.17.1.188	a4:55:90:81:4e:47	eth2.2
172.17.144.21	00:e0:4c:38:26:0c	eth2.2
192.168.1.10	00:00:00:00:00:00	br-lan
172.17.1.232	00:00:00:00:00:00	eth2.2
172.17.0.146	00:00:00:00:00:00	eth2.2

## Active IPv4-Routes

Network	Target	IPv4-Gateway	Metric
wan	0.0.0.0/0	172.17.144.1	0
wan	172.17.0.0/16	0.0.0.0	0
wan	172.17.144.1	0.0.0.0	0
lan	192.168.1.0/24	0.0.0.0	0

## Active IPv6-Routes

Network	Target	IPv6-Gateway	Metric
loopback	0:0:0:0:0:0:0:0	0:0:0:0:0:0:0:0	FFFFFFFF

## 3.1.4 System Log

Display system log.

**View**

- System
- Network
- Routes
- System Log**
- VPN Status

**Setup**

**Secure**

**VPN**

**Advanced**

**Data Collect**

**Administrate**

Logout

### System Log

```
Dec 21 13:52:00 dctd[1163]: Start to collect data
Dec 21 13:52:00 dctd[1163]: get adc data
Dec 21 13:52:00 dctd[1163]: get di data
Dec 21 13:52:00 dctd[1163]: get relay data
Dec 21 13:52:00 dctd[1163]: Start to send collected data, type[1]
Dec 21 13:52:05 dctd[1163]: debug timer callback
Dec 21 13:52:08 dctd[1163]: Server Address is: 192.168.1.10
Dec 21 13:52:09 dctd[1163]: Failed to connect server 192.168.1.10, port 9001, wait 20s and retry
```

## 3.1.5 VPN Status

Display VPN status.

Bivocom TR323 supports IPsec, PPTP, L2TP, OpenVPN, GRE protocols, after it's successfully connected to your VPN server, it'll display some info as below, such as, Type, Connect Status, Uptime, Subnet Mask, etc.

- View
- System
- Network
- Routes
- System Log
- VPN Status
- > Setup
- > Secure
- > VPN
- > Advanced
- > Administrate
- Logout

## VPN

VPN Status	Type:	openvpn
	IP Address:	10.10.10.1
	Netmask:	255.255.255.255
	Gateway:	10.10.10.2
	Connected Time:	21m,53s

## 3.2 Setup

Main menu of this page includes, [WAN](#), [LAN](#), [Wireless](#), [Online Detection](#), [Diagnostics](#).

### 3.2.1 WAN

#### 1) Connection Type

WAN supports DHCP/Static IP/PPPoE/3G/4G/5G connection type.

Choose the mode you need to configure the related parameters, then you can connect to the internet.

Let's take cellular type(5G) as an example.

- > View
- > Setup
- WAN
- LAN
- Wireless
- Online Detection
- Diagnostics
- > Secure
- > VPN
- > Advanced
- > Data Collect
- > Administrate
- Logout

### WAN Setting

On this page, you can configure WAN port connection type

#### WAN Interface

General Settings
Advanced Settings

Connection Type ▼

- Static IP
- DHCP
- PPPoE
- 3G
- 5G
- Unmanaged

Network Type

APN

PIN

User Name

Password 🔄


Authentication Type  None  PAP  CHAP  PAP/CHAP

Save & Apply
Save
Reset



## 2) Network Type

Type of network, the default value is AUTO, you can keep it as default or choose your own preference, such as 5G only, LTE only or 3G only, etc.

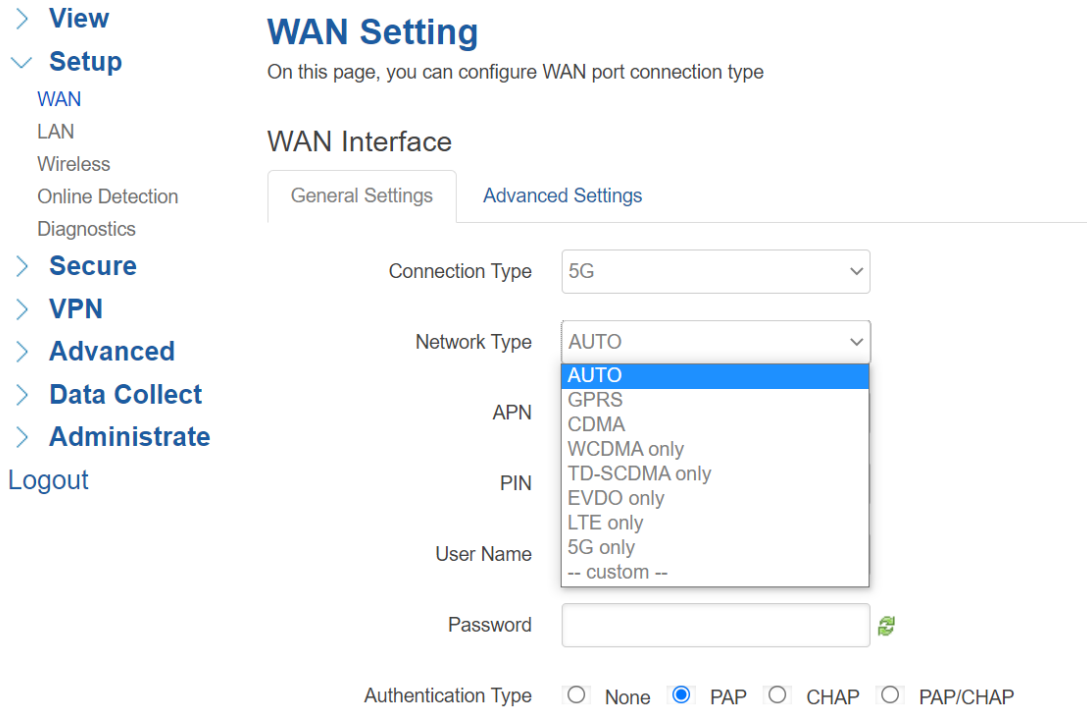

The screenshot shows the 'WAN Setting' configuration page. On the left is a navigation menu with options: View, Setup (selected), WAN, LAN, Wireless, Online Detection, Diagnostics, Secure, VPN, Advanced, Data Collect, and Administrate. Below the menu is a 'Logout' link. The main content area is titled 'WAN Setting' and includes a sub-header 'WAN Interface' with two tabs: 'General Settings' and 'Advanced Settings'. The 'Advanced Settings' tab is active. The configuration fields are: 'Connection Type' (set to 5G), 'Network Type' (dropdown menu open showing options: AUTO, GPRS, CDMA, WCDMA only, TD-SCDMA only, EVDO only, LTE only, 5G only, and -- custom --), 'APN', 'PIN', 'User Name', and 'Password'. At the bottom, the 'Authentication Type' is set to 'PAP' (selected) with other options being 'None', 'CHAP', and 'PAP/CHAP'.

## 3) APN

For standard SIM card, just keep it as blank, while if you're using SIM card with APN required, then you have to input the APN from your Telcos, and different Telcos might have different APN, please ask your Telco if you have no idea of what your APN is.

## 4) PIN

PIN code of SIM card, normally, just keep it as blank, so please use it carefully, or the SIM card may be locked.

## 5) PAP/CHAP Username

Only for private network SIM card, if you're using public network SIM card, just keep it as blank.

## 6) PAP/CHAP Password

Only for private network SIM card, if you're using public network SIM card, just keep it as

blank.

## 7) Authentication Type

If there have username and password, you need to choose authentication type.

Normally, just keep it as default.

- PAP, Plaintext Authentication
- CHAP, Handshake authentication

You need to choose the authentication type according to Telco's network, or you may fail to dial up.

## 8) WAN Used As LAN

When you use 5G/4G/3G/2G cellular network to access internet, you can go to "Advanced Settings" to change the WAN to act as a LAN port.

The screenshot shows the 'WAN Setting' page. On the left is a navigation menu with options: View, Setup (selected), WAN, LAN, Wireless, Online Detection, Diagnostics, Secure, VPN, Advanced, Data Collect, and Administrate. Below the menu is a 'Logout' link. The main content area is titled 'WAN Setting' and includes the subtitle 'On this page, you can configure WAN port connection type'. Underneath is the 'WAN Interface' section with two tabs: 'General Settings' and 'Advanced Settings' (which is active). In the 'Advanced Settings' tab, there are three input fields: 'Clone MAC Address' with the value '00:22:44:66:88:00', 'MTU' with the value '1500' and a help icon '(64-1500)', and 'WAN Multiplex' which is currently unchecked. A red box highlights the 'WAN Multiplex' checkbox and the text 'Set WAN port as LAN port' next to it. A pink arrow points to this checkbox.

### 3.2.2 LAN

Menu of LAN are mainly for configuring IP address of router, enabling DHCP server, and assign the IP address.

The meaning of the parameters are as follows.

#### 1) IPv4 Address

To configure IP address of LAN port, default value is 192.168.1.1, which is also the login IP address when you want to enter into the web config page, so you can change the IP address of LAN yourself.

[View](#)  
[Setup](#)  
 WAN  
 LAN  
 Wireless  
 Online Detection  
 Diagnostics  
[Secure](#)  
[VPN](#)  
[Advanced](#)  
[Data Collect](#)  
[Administrate](#)  
 Logout

## Interfaces - LAN

On this page you can configure the network interfaces. You can bridge several interfaces by ticking the "bridge interfaces" field and enter the names of several network interfaces separated by spaces. You can also use VLAN notation INTERFACE.VLANNR (e.g.: eth0.1).

Common Configuration

General Setup | **Advanced Settings**

Protocol: Static address

IPv4 address: 192.168.1.1

IPv4 netmask: 255.255.255.0

DNS Servers:

## 2) IPv4 Netmask

The netmask of LAN port IP address.

## 3) DHCP Server

### DHCP Server

General Setup

Ignore interface  [Disable DHCP for this interface.](#)

Start:  [? Lowest leased address as offset from the network address.](#)

Limit:  [? Maximum number of leased addresses.](#)

Leasetime:  [? Expiry time of leased addresses, minimum is 2 minutes \(2m\).](#)

- **Disable DHCP**

Click to disable DHCP server.

- **Start**

Assign the IP address of DHCP server. For example, 100 means IP address starts from 192.168.1.100.

- **Limit**

Assignable number of IP address, to ensure numbers of IP address of start and limit not exceed 250.

- **Lease time**

Time of assigning the IP address.

### 3.2.3 Wireless

Menu of wireless are mainly for configuring parameters of WIFI hotspot, such as, SSID, work mode, password, etc.

*Note: standard package of TR323 only supports 2.4G WIFI, and it's an option feature, please ask Bivocom representative for more info when place the order.*

#### WIFI 2.4G

Click 'Enable', to enable the WIFI function.

The screenshot shows the 'Wireless Setting' page with a sidebar menu on the left containing: View, Setup (selected), WAN, LAN, Wireless (selected), Wireless Client, Online Detection, Diagnostics, Secure, VPN, Advanced, Data Collect, Administrate, and Logout. The main content area is titled 'Wireless Setting' and includes the text 'On this page, we can configure Wireless general or advanced parameters'. Below this is the 'Interface Configuration' section with two tabs: 'General Settings' (active) and 'Advanced Settings'. Under 'General Settings', there are several fields: 'WiFi 2.4G' with radio buttons for 'Enable' (selected) and 'Disable'; 'Network Name(SSID)' with a text input field containing 'Bivocom\_TG453'; 'Channel' with a dropdown menu set to 'auto'; 'Mode' with a dropdown menu set to '802.11bgn'; 'Encryption' with a dropdown menu set to 'WPA2-PSK-AES'; 'Key' with a masked text input field containing '.....' and a green eye icon; and 'Hide SSID' with an unchecked checkbox.

#### 1) Network Name (SSID)

You can configure your own WIFI hotspot name.

#### 2) Channel


Support 1-13 channels, default value is auto, channel can be changed automatically.

#### 3) Mode

Support 802.11b, 802.11g, 802.11bgn, and default value is 802.11bgn.  
802.11b up to 11Mbps, 802.11g up to 54Mbps and 802.11n up to 300Mbps.

#### 4) Encryption

You can choose different encryption type as below.

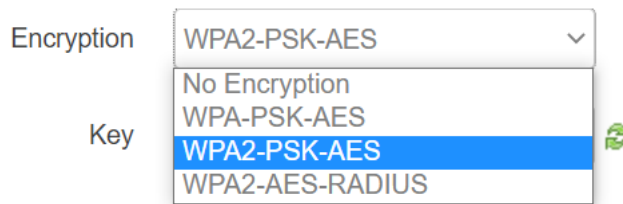

#### 5) Key

Password of WIFI hotspot, user needs to input it to access the internet shared by WIFI. The minimum length of password is 8 bytes.

#### 6) Hide SSID

When Hide SSID is enabled, SSID is invisible, and user need to enter the SSID to access the WIFI hotspot.

### 3.2.4 Online Detection

Online detection will auto check the internet connection status of the router, if there has issue of connection, router will auto reconnect. If it fails to reconnect after times of trial, router will reboot, to ensure getting online.

The meaning of the parameters are as follows.

- > View
- ✓ Setup
  - WAN
  - LAN
  - Wireless
  - Online Detection
  - Diagnostics
- > Secure
- > VPN
- > Advanced
- > Data Collect
- > Administrate
- Logout

## Online Detection

Online Detection  Enable  Disable

Detection Type

Primary Detection Server

Second Detection Server

Retry Times

Retry Interval  Seconds

Enable Reboot  Enable  Disable

Reboot After Interval  Minutes

### 1) Detection Type

There are 3 types: ping, traceroute and DNS.

- **Ping**

Router will ping an IP address or DNS, if works, that means router is online.

- **Traceroute**

Traceroute will trace routing path, if achieves the target address, that means router is online.

- **DNS**

DNS will analytic a domain, if it works, that means router is online.

Note: the default setting is Ping, which is highly recommended, as traceroute will cost dataflow of SIM card, while DNS is faster, but as it has cache, it may show the router is online even it is offline.

### 2) Primary Detection Server

It can be an IP address or a Domain Name configured by yourself.

### 3) Second Detection Server

If primary detection server fails, then router will auto switch to second detection server.

#### 4) Retry Times

You can set up retry time in case detection fails.

#### 5) Retry Interval

The interval time between 2 detections.

#### 6) Enable Reboot

Click enable, and router will reboot within the time set if it fails to reconnect.

#### 7) Reboot After Interval

You can specify the time for offline, to reboot the router.


### 3.2.5 Diagnostics

There are 3 types of diagnostics: ping, traceroute and nslookup

Parameter of ping and traceroute can be a Domain Name or an IP address, used for checking if router is online or not. While nslookup is to analytic domain.

#### 1) Ping

Click ping, then you can check if there is response from an IP address, as bellow.

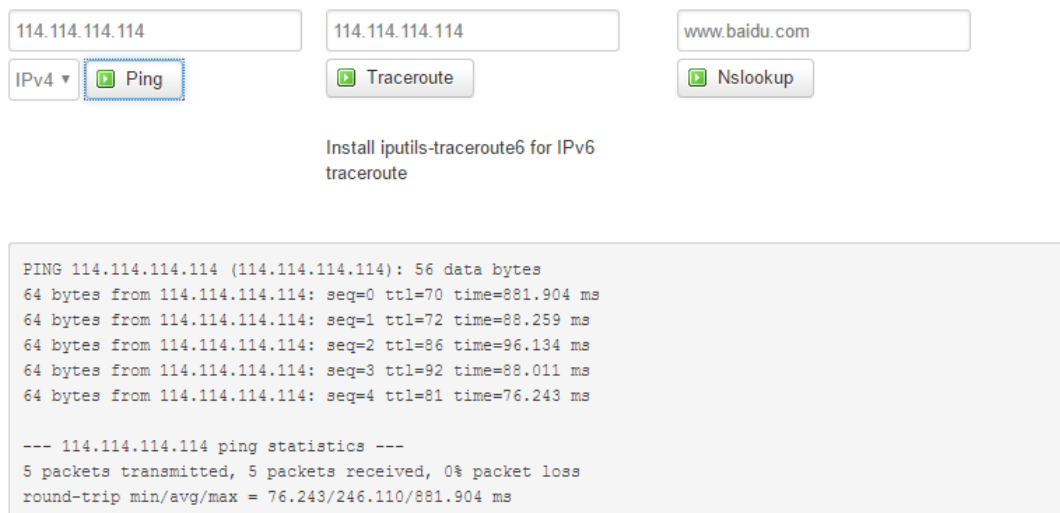

114.114.114.114      114.114.114.114      www.baidu.com

IPv4 ▾   **Ping**      Traceroute      Nslookup


Install iputils-traceroute6 for IPv6 traceroute

```
PING 114.114.114.114 (114.114.114.114): 56 data bytes
64 bytes from 114.114.114.114: seq=0 ttl=70 time=881.904 ms
64 bytes from 114.114.114.114: seq=1 ttl=72 time=88.259 ms
64 bytes from 114.114.114.114: seq=2 ttl=86 time=96.134 ms
64 bytes from 114.114.114.114: seq=3 ttl=92 time=88.011 ms
64 bytes from 114.114.114.114: seq=4 ttl=81 time=76.243 ms

--- 114.114.114.114 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 76.243/246.110/881.904 ms
```

## 2) Traceroute


Click traceroute, then you can see similar response as below.

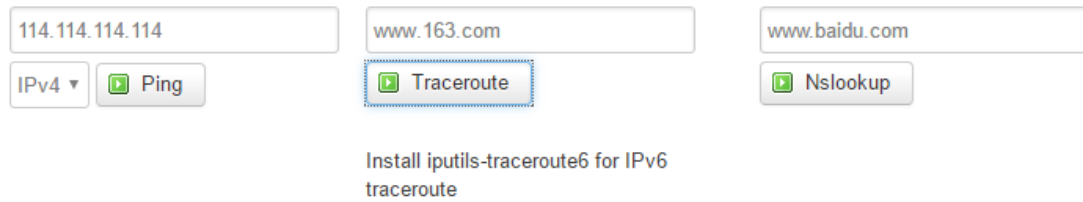

```
traceroute to www.163.com (27.148.151.214), 30 hops max, 38 byte packets
 1  *
 2  10.170.8.46  55.546 ms
 3  10.170.8.67  59.488 ms
 4  10.170.8.68  55.376 ms
 5  115.168.76.66  51.438 ms
 6  118.84.189.217  59.402 ms
 7  117.27.253.74  51.578 ms
 8  *
 9  *
10  *
11  27.148.151.214  139.821 ms
```

## 3) Nslookup

Click nslookup, then you can see similar response as below.

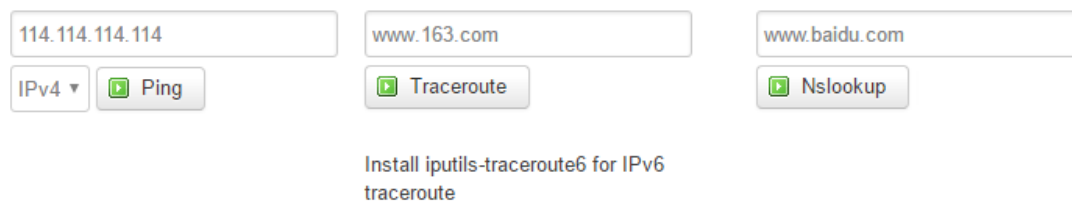

```
Server: 127.0.0.1
Address 1: 127.0.0.1 localhost

Name: www.baidu.com
Address 1: 14.215.177.38
Address 2: 14.215.177.37
```

## 3.3 Secure

Menu of Secure are for configuring the firewall, to ensure the security of accessing to internet, and implement the port forwarding, access control, data packet filtering, and



other functions.

### 3.3.1 DMZ Host

DMZ can forward the port of WAN to a host of LAN; all packet from WAN will be forwarded to specified host of LAN.

The screenshot shows the 'DMZ' configuration page. On the left is a navigation menu with 'View', 'Setup', 'Secure' (expanded), 'VPN', 'Advanced', 'Data Collect', 'Administrate', and 'Logout'. Under 'Secure', 'DMZ Host' is selected. The main content area is titled 'DMZ' with the subtitle 'Set DMZ Host'. It features a 'DMZ' toggle set to 'Enable', a 'Source zone' dropdown set to 'wan', and a 'DMZ Host' text input field containing '192.168.1.0'. At the bottom right are 'Save & Apply', 'Save', and 'Reset' buttons.

#### 1) DMZ

You can enable or disable the DMZ.

#### 2) DMZ Host

An IP address of a host of LAN you want to map.

### 3.2.2 Port Forwarding

Comparing with DMZ, Port Forwarding is for more precise control, user can forward the data packet of a port to a host of LAN, to forward different port to different host.

The screenshot shows the 'Firewall - Port Forwards' configuration page. The left navigation menu is similar to the previous page, with 'Port Forwards' selected under 'Secure'. The main content area is titled 'Firewall - Port Forwards' with the subtitle 'Port forwarding allows remote computers on the Internet to connect to a specific computer or service within the private LAN.' Below this is a table with columns 'Name', 'Match', 'Forward to', and 'Enable', which is currently empty. A 'New port forward:' form is visible, containing fields for 'Name', 'Protocol' (set to 'TCP+UDP'), 'External zone' (set to 'wan'), 'External port', 'Internal IP address', and 'Internal port'. An 'Add' button is next to the form. At the bottom right are 'Save & Apply', 'Save', and 'Reset' buttons.

#### 1) Name

You can name the rule you created.

## 2) Protocol

You can choose TCP, UDP, or TCP/UDP.

## 3) External Port

Destination port before port forwarding.

## 4) Internal IP Address

The Host IP address to forward.

## 5) Internal Port

The destination port after port forwarding. Normally, external port and internal port are the same, but also can be different.

After configured above-mentioned, click 'Add', then a new rule will be added, and click 'Save & Apply', to have the rule take effect.

### 3.3.3 Traffic Rules

Traffic rules is used for opening some router ports, such as remote access the configuration page of router, you can open port 80; for remote SSH connection, you can open port 22.

The screenshot shows the 'Firewall - Traffic Rules' configuration page. On the left is a navigation menu with options: View, Setup, Secure (selected), DMZ Host, Port Forwards, Traffic Rules (highlighted with a red box), Custom, VPN, Advanced, Data Collect, and Administrate. Below the menu is a 'Logout' link. The main content area has the title 'Firewall - Traffic Rules' and a description: 'Traffic rules define policies for packets traveling between different zones, for example to reject traffic between certain hosts or to open WAN ports on the router.' Below this is a table for 'Traffic Rules' with columns 'Name Match', 'Action', and 'Enable'. The table is currently empty, with a message 'This section contains no values yet'. Underneath the table are two sections for adding new rules. The first section is 'Open ports on router:' with a table for 'Name', 'Protocol', 'External zone', and 'External port'. Below this table is a form with a 'New input rule' text box, a 'TCP+UDP' dropdown menu, a 'wan' dropdown menu, an empty text box for the port, and an 'Add' button. The second section is 'New forward rule:' with a table for 'Name', 'Source zone', and 'Destination zone'. Below this table is a form with a 'New forward ru' text box, a 'lan' dropdown menu, a 'wan' dropdown menu, and an 'Add and ed' button.

## 1) Name

You can name the rule yourself.

## 2) Protocol

Choose the protocol of you want to forward can be TCP, UDP, or TCP/UDP.

## 3) External Port

Choose the port you want to open.

**In addition, traffic rule can be used for creating some access control rules, it can be from LAN to WAN, or WAN to LAN.**

**New forward rule:**

Name	Source zone	Destination zone	
<input type="text" value="New forward ru"/>	<input type="text" value="lan"/>	<input type="text" value="wan"/>	<input type="button" value="Add and ed"/>

### 1) Name

You can name the rule yourself.

### 2) Source Zone

You can choose where to start the data packet.

### 3) Destination Zone

You can choose where to forward the data packet.

**Click 'Add and Edit', then you can get more detailed matching condition.**

Rule is enabled

Name

Restrict to address family

Protocol

Match ICMP type

Source zone

Any zone

lan: lan

wan: wan

Source MAC address

Source address

Source port

Destination zone

Device (input)

Any zone (forward)

lan: lan

wan: wan

Destination address

Destination port

Action

Extra arguments  Passes additional arguments to iptables. Use with care!

### 1) Restrict to Address Family

You can choose IPv4, IPv6, or Pv4/IPv6.

### 2) Protocol

To choose the protocol you want for access control, it can TCP, UDP, ICMP or TCP/UDP.

### 3) Source MAC Address

To choose the source MAC address of data packet.

### 4) Source Address

To choose the source IP address of data packet.

### 5) Source Port

To choose the source port of data packet.

### 6) Destination Address

To choose the destination IP address of data packet.

### 7) Destination Port

To choose the destination port of data packet.

### 8) Action

If the above-mentioned conditions matched, then you can choose below actions.

- **Accept**

Allow data packet to go through.

- **Drop**

Drop data packet

- **Reject**

Drop data packet, and return an unachievable data packet.

- **Don't Track**

No action.

## 3.3.4 Custom

Custom rules allow you to execute arbitrary iptables commands which are not covered by the firewall framework. The commands are executed after each firewall restart, right after the default ruleset has been loaded.

Users can also customize some firewall rules themselves, as those rules is consisted of iptables, we suggest users that are familiar with iptables command to do this. When you add rules, please add them at the bottom of existing rules, and don't delete them.



The screenshot shows a web interface for configuring firewall rules. On the left is a navigation menu with options: View, Setup, Secure (expanded), DMZ Host, Port Forwards, Traffic Rules, Custom (highlighted with a red box), VPN, Advanced, Data Collect, and Administrate. Below the menu is a Logout link. The main content area is titled "Firewall - Custom Rules" and contains a text box with the following instructions: "Custom rules allow you to execute arbitrary iptables commands which are not otherwise covered by the firewall framework. The commands are executed after each firewall restart, right after the default ruleset has been loaded." Below this is a code editor with the following text: "# This file is interpreted as shell script.", "# Put your custom iptables rules here, they will", "# be executed with each firewall (re-)start.", "# Internal uci firewall chains are flushed and recreated on reload, so", "# put custom rules into the root chains e.g. INPUT or FORWARD or into the", "# special user chains, e.g. input\_wan\_rule or postrouting\_lan\_rule." There is a small red square icon at the bottom center of the code editor area.

## 3.4 VPN

VPN is used to establish a virtual private channel, and all the data in this channel will be encrypted to ensure that data security during transmission.

TR323 support VPN: PPTP, L2TP, OpenVPN and IPSec. PPTP/L2TP are layer 2 VPN, and OpenVPN is VPN based on SSL, while IPSec is layer 3 VPN. PPTP/L2TP are more convenient to use, while OpenVPN and IPSec is more complex, as they need complex certification management, meanwhile, they offer more secured encrypted data.

### 3.4.1 PPTP


You can configure either PPTP client or PPTP server, but not both of them at the same time, as that may cause uncertain issues.


#### 1) PPTP Client


PPTP Client  Enable  Disable

Server Address

User Name

Password  


Remote Subnet   eg: 192.168.10.0

Remote Subnet Mask   eg: 255.255.255.0

NAT

Enable MPPE Encryption

Enable Static Tunnel IP Address

Default Gateway   All Traffic Will Passthrough Via VPN

#### 1. PPTP Client

You can enable or disable PPTP client.

#### 2. Server Address

To enter the IP address or Domain Name of PPTP server.

#### 3. User Name and Password

To enter the username and password provided by server.

#### 4. Remote Subnet

To enter the remote subnet, for example, if LAN of PPTP server is 192.168.2.1, then you

can enter remote subnet 192.168.2.0.

### 5. Remote Subnet Mask

To enter the remote subnet mask, normally it is 255.255.255.0.

### 6. NAT

If click NAT, all packets come from ppp0, and the source IP of the packets will be replaced as IP of ppp0.

### 7. Enable MPPE Encryption.

You can enable MPPE encryption here.

### 8. Default Gateway

Click Default Gateway, then a default route will be established under ppp0, and all the data will go through this route.

## 2) PPTP Server

PPTP Server  Enable  Disable

Server Local IP

IP Address Range  eg: 10.10.10.1-10.10.10.254

Enable MPPE Encryption

NAT

DNS1

DNS2

WIN1

WIN2

CHAP Secrets  eg: test \* test \*

Client Subnet  eg: test 192.168.10.0

### 1. PPTP Server

You can enable or disable PPTP server.

### 2. Server Local IP

To enter the server local IP address.

### 3. IP Address Range

Type the range of assigned IP address.

#### **4. Enable MPPE Encryption.**

You can enable MPPE encryption here.

#### **5. DNS1/DNS2**

To enter the assigned DNS address.

#### **6. WIN1/WIN2**

To enter the WIN address.

#### **7. CHAP Secrets**

To create a username and password under CHAP Secrets, format as below,

Username<space>\*<space>password<space>\*

For example, if you want to create a username: test, password: test, it is as below,

Test \* testing \*

Please ask for Bivocom support if you need an example of how to set up the PPTP client and server work mode.

### **3.4.2 L2TP**


You can also configure either L2TP client or L2TP server, but not both of them at the same time, as that may also cause uncertain issues.

## 1) L2TP


L2TP Client  Enable  Disable

Server Address


User Name


Password  

Tunnel Name

Tunnel Password  


Enable IPsec

Remote Subnet   eg: 192.168.10.0


Remote Subnet Mask   eg: 255.255.255.0

NAT

Enable MPPE Encryption

MTU   600~1450

Enable Static Tunnel IP Address

Default Gateway   All Traffic Will Passthrough Via VPN

### Client

#### 1. L2TP Client

You can enable or disable L2TP client.

#### 2. Server Address

To enter the IP address or Domain Name of L2TP server.

#### 3. User Name and Password

To enter the username and password provided by server.

#### 4. Remote Subnet

To enter the remote subnet, for example, if LAN of L2TP server is 192.168.2.1, then you can enter remote subnet 192.168.2.0.

#### 5. Remote Subnet Mask

To enter the remote subnet mask, normally it is 255.255.255.0.

#### 6. NAT



If click NAT, all packets come from ppp0, and the source IP of the packets will be replaced as IP of ppp0.


### 7. Enable MPPE Encryption.

You can enable MPPE encryption here.

### 8. Default Gateway

Click Default Gateway, then a default route will be established under ppp0, and all the data will go through this route.

## 2) L2TP Server

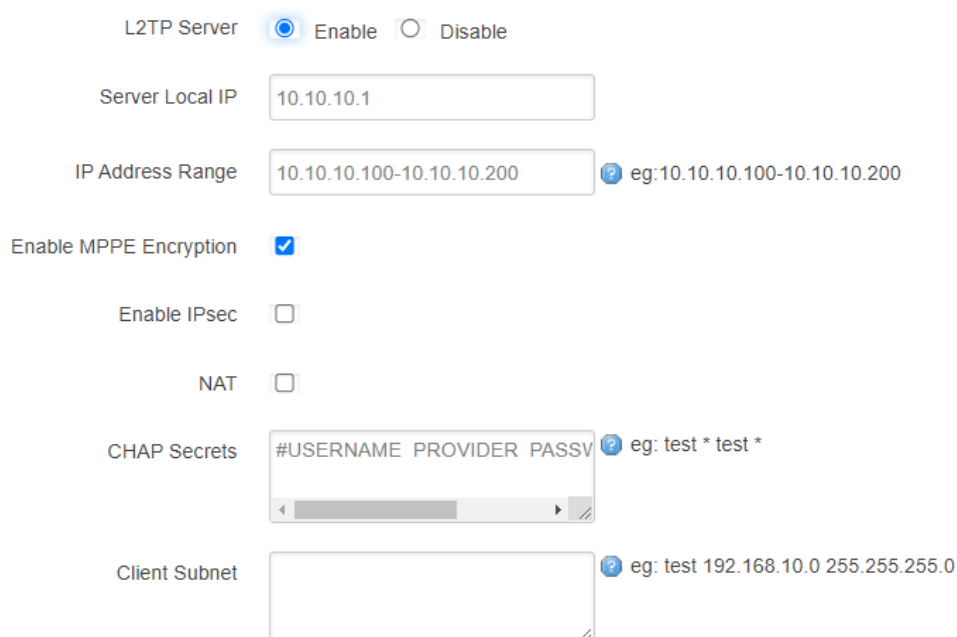

The screenshot shows the L2TP Server configuration interface. It includes the following fields and options:

- L2TP Server:** Radio buttons for  Enable and  Disable.
- Server Local IP:** Text input field containing `10.10.10.1`.
- IP Address Range:** Text input field containing `10.10.10.100-10.10.10.200`. A help icon and example `eg: 10.10.10.100-10.10.10.200` are present.
- Enable MPPE Encryption:** Checkmark .
- Enable IPsec:** Checkmark .
- NAT:** Checkmark .
- CHAP Secrets:** Text input field containing `#USERNAME PROVIDER PASSV`. A help icon and example `eg: test * test *` are present.
- Client Subnet:** Text input field. A help icon and example `eg: test 192.168.10.0 255.255.255.0` are present.

### 1. L2TP Server

You can enable or disable L2TP server.

### 2. Server Local IP

To enter the server local IP address.

### 3. IP Address Range

Type the range of assigned IP address.

### 4. Enable MPPE Encryption.

You can enable MPPE encryption here.

### 5. CHAP Secrets

To create an username and password under CHAP Secrets, format as below,

Username<space>\*<space>password<space>\*

For example, if you want to create a username: test, password: test, it is as below,

Test \* test \*

Please ask for Bivocom support if you need an example of how to set up the L2TP client and server work mode.

### 3.4.3 IPsec

On IPsec page, system will display the IPsec connection and status.

IPsec  Enable  Disable

Peer Address

Negotiation Method

Tunnel Type

Local Subnet

Peer Subnet

IKE Encryption Algorithm

IKE Integrity Algorithm

Diffie-Hellman Group

IKE Life Time

Authentication Type

Pre-shared Key

Local Identifier

Peer Identifier

ESP Encryption Algorithm

ESP Integrity Algorithm

DPD Timeout  seconds

DPD Detection Period  seconds

DPD Action

#### 1) Peer Address

To enter peer IP address or Domain Name, if TR323 chosen as an IPsec server, you don't need to input it.

#### 2) Negotiation Method

You can choose 'Main' or 'Aggressive'.

#### 3) Tunnel Type

You can choose 'Site to Site', 'Site to Host', 'Host to Host', 'Host to Site'.

**4) Local Subnet**

Local subnet and mask, like 192.168.10.0/24.

**5) Peer Subnet**

Peer subnet and mask, like 192.168.20.0/24.

**6) IKE Encryption Algorithm**

IKE phase encryption method

IKE Encryption Algorithm	AES-128
IKE Integrity Algorithm	3DES
	AES-128
	AES-192
	AES-256

**7) IKE Lifetime**

To set up IKE lifetime.

**8) Local Identifier**

Local identifier of channel, can be an IP address or domain name.

**9) Peer Identifier**

Peer identifier of channel, can be an IP address or domain name.

**10) ESP Encryption Algorithm**

The encryption method of ESP.

For more info about how to set up IPsec, please contact Bivocom support to get quick guide.

### 3.4.3 OpenVPN

OpenVPN  Enable  Disable

Topology

Protocol

Port

Device Type

Peer Address

Authentication Type

Local Tunnel Address

Peer Tunnel Address

Peer Subnet Address

Peer Subnet Mask

Enable NAT

Enable LZO Compress

Cipher Algorithm

MTU

#### 1) OpenVPN

You can enable or disable OpenVPN.

#### 2) Topology

Choose the topology, it can be point to point or subnet

Note: For point to point, a tunnel will be established between 2 devices.

While for subnet, multi devices will be connected to one server.

#### 3) Role

When topology is subnet, you need to choose you want it be a server or client.

#### 4) Protocol

Choose the protocol, it can be UDP or TCP, default is UDP.

#### 5) Port

Enter the port you want to assign to OpenVPN, default port is 1194.

#### 6) Device Type

Choose device type, there are 2 types to choose, TUN and TAP. TUN is layer 3 data encapsulation, while TAP is layer 2 data encapsulation.

## 7) OpenVPN Server

When you choose server in role, you need to enter an IP address or domain name of server.

## 8) Authentication Type

If topology is subnet, authentication type is certification. If it is point to point, you can choose none, certificate or static secret.

## 9) TLS Role

When topology is point to point, and authentication type is certification, you need to choose if it is server or client.

For more info, please contact Bivocom support to get quick guide.

## 3.5 Advanced

You can set up some advanced functions here.

The screenshot shows the 'Advanced' configuration page. On the left, a sidebar menu has 'Advanced' selected and highlighted with a red box. Below it are sub-items: 'Static Routes', 'Net Flow', 'GPS Location', and 'DHCP and DNS'. The main content area is titled 'Routes' and contains a table for 'Static IPv4 Routes'. The table has columns for 'Interface', 'Target', 'IPv4-Netmask', 'IPv4-Gateway', and 'Metric'. Below the table, there is a message 'This section contains no values yet' and an 'Add' button.

### 3.5.1 Static Routing

Static routing is used to add a routing table entry. (Currently, it only supports IPv4)

Interface	Target	IPv4-Netmask	IPv4-Gateway	Metric
	Host-IP or Network	if target is a network		
lan	<input type="text"/>	255.255.255.2	<input type="text"/>	0

**Interface:** To choose which interface you want to add routing, LAN or WAN.

**Target:** Can be a host IP, or subnet.

**IPv4 Netmask:** The netmask of subnet, if the target is host, the netmask shall be 255.255.255.255.

**IPv4 Gateway:** The address of next-hop gateway address.

Note: this address shall be achievable, or you'll fail to add static routing.

### 3.5.2 Net Flow

The traffic meter function of TR323 is for traffic statistics from WAN port, meanwhile, it has traffic overflow alarm function. Even if the router is powered off, the traffic statistics

will be saved, and when you power on the router, the traffic will be counted based on your last time traffic.

- > View
- > Setup
- > Secure
- > VPN
- > **Advanced**
  - Static Routes
  - Net Flow
  - GPS Location
  - DHCP and DNS
- > Data Collect
- > Administrate

Logout

## Net Flow

Traffic Meter

Current Day Flow	Current Month Flow
0.0G	0.0G

### Net Flow

Net Flow  Enable  Disable

Limit Enabled  Effective for LTE or 3G

Day Limit  M

Month Limit  M

Clear Day Flow

Clear Month Flow

### 3.5.3 GPS Location(Optional)

GPS location will report GPRMV information regularly, saying longitude and latitude information. And this function is used for accurate location of outdoor open area.

- > View
- > Setup
- > Secure
- > VPN
- > **Advanced**
  - Static Routes
  - Net Flow
  - GPS Location
  - DHCP and DNS
- > Data Collect
- > Administrate

Logout

## GPS Location

GPS Location  Enable  Disable

GPS Source  External  Dongle

Output Mode

Server Address

Server Port

Report Mode

User Defined Register Packet  Max 128 Bytes ASCII

User Defined Heartbeat Packet  Max 128 Bytes ASCII

Report Interval  Seconds

Heartbeat Interval  Seconds

GPS Info -

Connection Status -

**Server Address:** The IP address of server that you want the router to report the location, which is based on TCP connection.

**Server Port:** The port of server.

**Report Interval:** The interval time for auto report of router location, default value is 60 seconds.

Note: GPS is an optional feature.

### 3.5.4 DHCP and DNS

General DHCP and DNS settings base on Dnsmasq tool on TR323. Please refer to Dnsmasq for more information.

## 3.6 Data Collect

Data Collect settings is for TR323 to acquire data from slave devices in serial ports, Ethernet ports, I/O ports, with Modbus protocol and other customized protocols.

### 3.6.1 Basic Setting

Enable or Disable the data collect feature, setting the data acquire and report period and other related options.

The screenshot shows the 'Basic Setting' page for 'Data Collect'. On the left is a navigation menu with options: View, Setup, Secure, VPN, Advanced, Data Collect (selected), Interface Setting, Modbus Rules Setting, IO Setting, Server Setting, Data query, Administrate, and Logout. The main content area is titled 'Basic Setting' and contains the following settings:

- Data Collect:  Enable  Disable
- Collect Period:  Seconds
- Report Period:  Seconds
- Enable Cache:  Cache History Data
- Cache Days:  day
- Cache Path:  Path Where Data Is Stored
- Send Minute Data:
- Send Hour Data:
- Send Day Data:

At the bottom right of the form are three buttons: 'Save & Apply', 'Save', and 'Reset'.

- 1) Data Collect: Enable or Disable data collect feature.
- 2) Collect Period: Set the period of data acquire from slave devices.
- 3) Report Period: Set the Period of data report to server.
- 4) Enable Cache: Enable or Disable history data cache feature.
- 5) Related data cache setting if enable the cache feature.

### 3.6.2 Interface Setting

TR323 has 3 serial ports, COM1(RS485), COM2(RS485) and 1 RS232 for debug, and below are some parameters to configure, for protocols, it can be configured as Modbus or transparent mode depends on your application need.

- > View
- > Setup
- > Secure
- > VPN
- > Advanced
- ▼ Data Collect
  - Basic Setting
  - Interface Setting
  - Modbus Rules Setting
  - Server Setting
  - Data query
- > Administrate

Logout

## Interface Setting

COM1/RS485
COM2/RS485

Enabled  Enable  Disable

Baudrate

Databit

Stopbit

Parity

Frame Interval  ? ms

COM Protocol

Command Interval  ? ms

Besides, TR323 can connect up to 5 TCP servers, which means you can receive the data from remote sites in different servers, it's also a backup solution for data storage at server.

### TCP Server Setting

TCP Server1
TCP Server2
TCP Server3
TCP Server4
TCP Server5

Enabled  Enable  Disable

Server Address

Server Port

Frame Interval  ? ms

COM Protocol

Command Interval  ? ms

### 3.6.3 Modbus Rules Setting

Modbus Rules Setting is for TR323 as a Modbus master to acquire data from slave devices base on Modbus protocol. You can configure Modbus rules on it. TR323 provides the options of definable factor name, device ID, function code, register address and count register number, please follow the slave device datasheet to get the information.

Below is an example of getting data from temperature and humidity sensor.



- > View
- > Setup
- > Secure
- > VPN
- > Advanced
- > Data Collect
  - Basic Setting
  - Interface Setting
  - Modbus Rules Setting
  - IO Setting
  - Server Setting
  - Data View Setting
- > Administrate
- Logout

## Modbus Rules Setting

Modbus Rules

Order	Device Name	Interface	Factor Name	Device ID	Function Code	Start Address	Count	Data Type	Reporting Center	Enable	
1	T&Hsensor1	COM5	temperature; humidity	1	4	1	2	unsigned 16Bits AB	1	<input checked="" type="checkbox"/>	<a href="#">Edit</a> <a href="#">Delete</a>

**New Modbus Rule**

Order	Device Name	Interface	Factor Name	Device ID	Function Code	Start Address	Count	Data Type	Reporting Center	
<input type="text"/>	<input type="text"/>	COM5	<input type="text"/>	<input type="text" value="0-255"/>	<input type="text" value="0-255"/>	<input type="text" value="0-65535"/>	<input type="text" value="1-120"/>	Unsigned 16Bits	<input type="text" value="1-2-3-4-5"/>	<a href="#">Add</a>

[Save & Apply](#)
[Save](#)
[Reset](#)

- > View
- > Setup
- > Secure
- > VPN
- > Advanced
- > Data Collect
  - Basic Setting
  - Interface Setting
  - Modbus Rules Setting
  - IO Setting
  - Server Setting
  - Data View Setting
- > Administrate
- Logout

## Modbus Rules - T&HSensor1 - COM5

enabled [Disable](#)

Order

Device Name

Belonged Interface

Factor Name  Multiple Factors Are Separated By Semicolor

Alias Name  Multiple Aliases Are Separated By Semicolor

Device ID  0-255

Function Code  0-255

Start Address  0-65535

Count  1-120

Data Type  A highest byte

Reporting Center  Multiple Servers Are Separated By Minus

Unit  Multiple Units Are Separated By Semicolon

Operator  0 + - \* /

Operand

Accuracy  0-6

### 3.6.4 Server Setting

Server setting menu allows user set the data center address with multiple protocols, the

standard TR323 supports TCP, UDP, HTTP, MQTT, and Modbus TCP. For the data format, TR323 supports different Encapsulation type, include “Transparent”, “Json”, and “HJ212” (special for some Environment SCADA in China). Also TR323 accepts customized specific protocols for your data center.

- > [View](#)
- > [Setup](#)
- > [Secure](#)
- > [VPN](#)
- > [Advanced](#)
- ✓ [Data Collect](#)
  - Basic Setting
  - Interface Setting
  - Modbus Rules Setting
  - IO Setting
  - [Server Setting](#)
  - Data View Setting
- > [Administrate](#)
- [Logout](#)

## Server Setting

Server1 Settings
Server2 Settings
Server3 Settings
Server4 Settings
Server5 Settings

Enabled  Enable  Disable

Protocol

Encapsulation Type

Server Address

Server Port

User Defined Register Packet  ⓘ Max 128 Bytes

Use HEX Format  ⓘ Default is ASCII

User Defined Heartbeat Packet  ⓘ Max 128 Bytes

Use HEX Format  ⓘ Default is ASCII

Heartbeat Interval  ⓘ Seconds, 0 means No Heartbeat

Enable Self Defined Variable

Connection Status CONNECTED

## 3.7 Administrate

In this menu, you can set up time zone, language (English and Chinese only now), time setting, firmware upgrade, etc.

### 3.7.1 System

#### System Properties

Hostname

Timezone

Language

Web Access Method  ⓘ Need Reboot When Changed

### 1) Host Name

The host name of router, default name is router.

### 2) Time Zone

Set up the time zone of system, default time zone is GMT8.

### 3) Language

Change the language of configuration interface, default language is English.

### 4) Enable Telnet Access

To enable the telnet server, the default function is enabled.

### 5) Enable SSH Access

To enable the SSH server, the default function is disabled.

## 3.7.2 Password

To revise the login password of router.

Origin Password	<input type="text"/>	
Password	<input type="text"/>	
Confirmation	<input type="text"/>	

### 1) Origin Password

You'll be required to enter your origin password before you revise your new password.

### 2) Password

Type the new password you want to change.

### 3) Confirmation

Type the new password again to confirm it.

If the new password and confirmation password you type is different, then it fails to revise the password. After password revised, router will return to login page, then you can enter your username and password.

### 3.7.3 Time Setting

System time type includes RTC (Real Time Clock) and NTP (Network Time Protocol). RTC will save time even router is powered off, while for NTP, router will connect to NTP server which requires internet connection, time won't be saved once powered off. But NTP will be more accurate than RTC, and you may need to adjust the time manual if it is not accurate.

> View  
> Setup  
> Secure  
> VPN  
> Advanced  
> Data Collect  
▼ Administrate  
System  
Password  
Time Setting  
Log Setting  
Backup and Restore  
Router Upgrade  
Remote Configured  
Manual Reboot  
Schedule Reboot  
Screen Calibration  
Logout

#### Set System Time

Current system time 2020-07-17 15:19:39

System Time Type  ntp  rtc

Current RTC Time

RTC Date  ? eg: 2016-01-01

RTC Time  ? eg: 12:00:00

Save & Apply Save Reset

#### 1) Current System Time

Display the time of router.

#### 2) System Time Type

It includes NTP and RTC mentioned above, and different type has different configuration parameters

##### ● RTC

You can update data and time yourself.

RTC Date  ? eg: 2016-01-01

RTC Time  ? eg: 12:00:00

##### RTC Data

Format must be: 20xx-xx-xx (Year-Month-Day), or you will fail to update it.

##### RTC Time

Format must be xx: xx: xx (Hour-Min-Second), or you will fail to update it.

- **NTP**

NTP Time Server	<input type="text" value="0.openwrt.pool.ntp.org"/>
Port	<input type="text" value="123"/>
Update Interval	<input type="text" value="600"/> seconds

### **NTP Time Server**

You can select the NTP time server through drop-down menu, or you can customize it yourself.

### **Port**

NTP time server port, default port is 123.

### **Update Interval**

How long to sync the time with NTP server, default time is 600 seconds.

## **3.7.4 Log Settings**

Log settings is for configuring the output parameters of system log.

Output To Device	<input type="text" value="/var/log/"/>
Log Size	<input type="text" value="64"/> KB
Log Server	<input type="text" value="0.0.0.0"/>
Log Server Port	<input type="text" value="514"/>
Output Level	<input type="text" value="Debug"/>

### **1) Output to Device**

You can output the log to serial port, or specified file path, or external storage device, and the default path is:/var/log/

### **2) Log Size**

Set up the size of log, default value is 64KB.

### 3) Log Server

Set up the IP address of log server.

### 4) Log Server Port

Set up the port of log server, default value is 514

### 5) Output Level

There are several levels supported, including 'Debug', 'Info', 'Notice', 'Warning', 'Error', and level increased in sequence, the higher level, the less output log.

## 3.7.5 Backup and Restore

User can either backup the configuration of router, or reset to factory defaults.

### Backup / Restore

Click "Generate archive" to download a tar archive of the current configuration files. To reset the firmware to its initial state, click "Perform reset" (only possible with squashfs images).

Download backup:

Reset to defaults:

To restore configuration files, you can upload a previously generated backup archive here.

Restore backup:

#### 1) Download Backup

Click to generate a configuration file in format of "backup-router-2016-\*\*-\*\*.tar.gz".

#### 2) Reset to Default

Click 'Perform Reset', and a pop-up confirmation box with 'Really Reset All Changes' will display, then click 'OK' to reset to factory defaults.

#### 3) Restore Backup

To restore configuration files, you can upload a previously generated backup archive here.

Restore backup:

After reset to default, you can also upload the saved configuration file to router, to

recover the previous configuration. Click 'upload archive', select and upload the backup configuration file, and a pop-up confirmation box with 'Really Restore' will display, then click 'OK', to recover the configuration.

### 3.7.6 Router Upgrade

Before you upgrade the firmware for router, make sure the firmware you're planning to upload is correct. If errors occur, use serial port and connect the Ethernet cable, upgrade the firmware through u-boot.

#### Flash new firmware image

Upload a sysupgrade-compatible image here to replace the running firmware. Check "Keep settings" to retain the current configuration (requires an OpenWrt compatible firmware image).

Keep settings:

Image:

浏览...

Flash image...

#### 1) Keep Settings

Click it, and system configuration will not be changed after firmware upgrade.

#### 2) Choose and Upload Firmware Image

Click 'browse' and select the firmware, then click 'Flash Image', and firmware will be upload to router. Then you'll go to below page.

#### Flash Firmware - Verify

The flash image was uploaded. Below is the checksum and file size listed, compare them with the original file to ensure data integrity.

Click "Proceed" below to start the flash procedure.

Checksum: `f68983dbe5ec7f0d4bf9258e421ad53d`

Size: 9.00 MB

Configuration files will be kept.

Cancel

Proceed

- **Checksum**

MD5 checksum value of firmware.

- **Size**

The size of firmware.

- **Proceed**

Click 'proceed' to start the firmware upgrade, or click 'cancel' to stop the firmware upgrade.

### 3.7.7 Remote Configured

Remote Configured feature allows TR323 **work with Bivocom Device Management Platform(Option service)** for remote management, like firmware upgrade, configuration change, etc.

You can configure the IP address and port of remote DMP server, device number and phone number of router, etc., as below.

## Remote Configured

Remote Configured  Enable  Disable

Server Address

Server Port

Heart Interval

Device Number

Connection Status -

#### 1) Remote Configured

You can enable or disable this function to choose if you want to remote manage the router or not.

#### 2) Server Address

Type the specified login server address you want to remote manage the router, it can be either an IP address or Domain Name.

#### 3) Server Port

The specified login server port.

#### 4) Heart Interval

The heartbeat time interval (Unit: second)



### 5) Device Number

Device ID of router.

### 6) Device Phone Number

The phone number of SIM card insert in router.

### 7) Device Type

Type of the device, default is router.

You can also remote upgrade the firmware for router, as below.

Remote Upgrade  Enable  Disable

Server Address

Server Port

Firmware Version

### 8) Remote Upgrade

Click 'Enable' to enable remote firmware upgrade function.

### 9) Server Address

Type the server IP address or Domain Name for remote upgrade.

### 10) Server Port

Type the server port for remote upgrade.

### 11) Firmware Version

Type the firmware version that you want to upgrade remotely.

### 3.7.8 Manual Reboot

Reboots the operating system of your device



Click 'Perform Reboot', and a pop-up confirmation box with 'Really Reboot' will display, then click 'OK' to reboot the router.

### 3.7.9 Schedule Reboot

Schedule Reboot allows user configure the period or dedicate time for device reboot.

## Schedule Reboot

Enable Schedule Reboot  Enable  Disable

Schedule Type  By Period  By Time

Period Interval   Minutes, Min 5

Note: if you have any other questions about Bivocom products, please contact Bivocom [support@bivocom.com](mailto:support@bivocom.com).

### 3.8 Logout

Click the Logout menu to logout the web UI of TR323.