



401 South Grand Ave., Santa Ana, CA 92705
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



Two Brothers Racing

Juice Box™ - Fuel Controller

2006-08 Yamaha Raptor 700 Installation & Operation Manual
Part # 008-138



Parts Included

Qty.	Description	Part Number
1	Juice Box™ Fuel Control Kit	008-138
3	Zip Ties	
1	Adhesive Velcro Square	

Tools Needed For Install

- #2 Phillips Screwdriver
- 10mm Wrench
- 4mm Allen Wrench

IMPORTANT - PLEASE READ CAREFULLY

We recommend that this performance part be installed by a qualified ATV technician. If you have any doubts as to your ability to install this performance part, please consult with your local ATV dealer. Read all instructions first before starting installation. Make sure the vehicle and exhaust system are completely cool before starting the installation. Also, make sure the vehicle is secure during installation. Be sure to save all stock components for possible use later.

The Juice Box™ is legal ONLY for closed course race vehicles. The Juice Box™ is not applicable, nor intended for use on EMISSIONS CONTROLLED street, highway or off-road vehicles. The Juice Box™ is not applicable, nor intended for use on aircraft.

Warranty

Two Brothers Racing warrants that this product carries a warranty for 2 years from date of purchase against original defects in materials and workmanship. Should this product fail to perform for either of the above reasons, Two Brothers Racing will repair or replace it with an equivalent product at no charge, except for postage, to the original retail purchaser.

To obtain the benefits of this warranty, the retail purchaser must return the product and proof of purchase to the place of original purchase.

Installation Instructions

Thank you for purchasing a genuine Two Brothers Racing JUICE BOX™. This product represents a radical step forward in tuning fuel-injected motorcycles and ATVs for optimal performance using "load-based" technology. We at Two Brothers Racing hope that you will find this development as exciting and useful as we do. And remember: Proper Fuel = Maximum Power!

1. Make sure the vehicle is completely cool before starting the installation. Also, make sure the vehicle is secure and will not roll around.
2. Remove the seat.
3. Remove the radiator cover bolts. (Figure 1). Remove the gas cap and gas tank cover. *NOTE: replace the gas cap as soon as the gas tank cover is removed.*

Fig 1



4. Remove the 2 bolts holding the side panels and 2 plastic screws (Figure 2).

Fig 2



5. Remove the 2 fuel tank mounting bolts and 2 plastic screws that are holding the rubber flap (Figure 3).

Fig 3



6. Lift the tank up; you do not need to remove it (Figure 4) and support with foam block from TBR exhaust packaging.

Fig 4



7. Remove the stock fuel injector connector at the fuel injector (Figure 5).

Fig 5



8. Route the JUICE BOX™ wires under the gas tank frame mount and up towards the fuel injector. *(The aluminum mount just above the battery (-) negative terminal on the left side of the machine.)*

9. Snap the female connector into the fuel injector. Snap the original connector removed from the fuel injector into the JUICE BOX™ male connector (Figure 6).

Fig 6



10. Remove the (-) battery terminal bolt and place ground wire above the stock (-) terminal and re-install the (-) terminal bolt (figure 7).

Fig 7



11. For tuning purposes you may want to keep the JUICE BOX™ where you can reach it. Once you get things dialed in, route the JUICE BOX™ wire harness under the battery mount and the two air box mounting tabs then secure the harness to the frame with zip ties. The JUICE BOX™ will easily fit in the rear toolbox area with the supplied Velcro pad. (Figure 8)

Fig 8





401 South Grand Ave., Santa Ana, CA 92705
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com

Two Brothers Racing

Juice Box™ - Fuel Controller

2006-08 Yamaha Raptor 700 Installation & Operation Manual
Part # 008-138

Installation Instructions continued...

12. Start the ATV. The green LED should now be scrolling for about 3-5 seconds and then go to 1-2 steady green LED's or a single slow flashing green LED. If the number 1 green and number 8 red LED's continue flashing after startup, an injector wiring error is indicated. Re-check the wires from the JUICE BOX™ and make sure they are connected to the proper wire of your ATV's stock harness. MAKE SURE you have the correct connectors selected in the stock harness. DO NOT PROCEED UNLESS ABOVE CONDITIONS ARE MET.
13. Reassemble the ATV.
14. NOTE: Re check your wire routing and JUICE BOX™ location and make certain that in no way the wires can come into contact with any moving parts or high heat source and that the JUICE BOX™ is mounted in a way as to not cause a handling problem with the machine.



Cleaning

If the unit requires cleaning, use a cloth that is only lightly dampened with water or mild detergent.

Operation Manual

1. It is recommended that the pre-programmed settings of the Juice Box™ be used. However, the Juice Box™ can be adjusted to suit different engine modifications, states of tune and environmental conditions. To begin this process, press the mode button. To enter each successive mode, just press the mode button again. Note that every mode will be identifiable by the color(s) of the flashing LED(s) on the LED display. **There are six modes** that are distinguished by an LED color or color combination. **The 6 modes are as follows, respectively: Green, Yellow, Red, Green-Blue, Yellow-Blue and Red-Blue.**
2. You are now ready to manually program each mode. Consult the base settings supplied with the unit.

To program the Juice Box™, the bike must be running in order to supply power to the Juice Box™.

Simply press the mode button to activate the first mode. If at anytime you stay in an adjustment mode for longer **than 5 seconds** without pressing any buttons, the Juice Box™ will exit the adjustment mode and will return to the operational mode.

To save settings in a particular mode press the MODE button which goes to the next adjustable mode or wait for the Juice Box™ to exit back to the operational mode.

The settings in each mode are adjusted by pressing the (+) and (-) buttons located on the right and left side of the mode button, respectively. For easy reference, the LEDs are numbered 1 through 8. However, the LEDs can be adjusted to the following positions: 0.5, 1, 1.5, 2, 2.5, 3, 3.5, 4, 4.5, 5, 5.5, 6, 6.5, 7, 7.5, 8. For example, in a particular mode, if LED 4 is flashing then the LED display is set to 4 in that mode. If the (+) button is pressed once then LEDs 4 and 5 will flash simultaneously and the LED display is set to 4.5. If the (+) button is pressed once again, only LED 5 will flash and the LED display is set to 5. The LED display can also be set to 0.5 by pressing the (-) button and scrolling the colored LED to position 1 and then pressing the (-) button once more until the LED in position 1 is flashing twice as fast as normal.

I. **The first mode** (Green Mode) represents an additional amount of fuel added under cruise conditions. A flashing green LED should appear on the LED display. To add more fuel, scroll the flashing green LED to the right using the (+) button. To add less fuel, scroll the flashing green LED to the left using the (-) button. If you set the flashing green LED to the 0.5 position on the LED display, **no fuel will be added to the stock fuel curve.**

II. **The second mode** (Yellow Mode) represents an additional amount of fuel added during acceleration. A flashing yellow LED should appear on the LED display. To add more fuel, scroll the flashing yellow LED to the right using the (+) button. To add less fuel, scroll the flashing yellow LED to the left using the (-) button. If you set the flashing yellow LED to the 0.5 position on the LED display, **no fuel will be added to the stock fuel curve.**

III. **The third mode** (Red Mode) represents an additional amount of fuel added during full throttle conditions. A flashing red LED should appear on the LED display. To add more fuel, scroll the flashing red LED to the right using the (+) button. To add less fuel, scroll the flashing red LED to the left using the (-) button. If you set the flashing red LED to the 0.5 position on the LED display, **no fuel will be added to the stock fuel curve.**

Note: If the flashing green, yellow and red LEDs in modes 1 through 3 (Green, Yellow and Red) are set to the 0.5 position on the LED display then the Juice Box™ will not add any fuel to the bike's stock fuel curve. This setting will essentially turn off the Juice Box™ even though it is still attached to the bike's fuel injection system. The bike will run as though the Juice Box™ is not installed. The Juice Box™ LEDs will still operate normally even though no fuel is being added.

IV. **The fourth mode** (Green-Blue Mode) is not required for this particular model.

V. **The fifth mode** (Yellow-Blue Mode) is an adjustment to determine the time when the acceleration/Yellow Mode fuel amount turns on. A flashing yellow LED appears on the LED display while at the same time a flashing blue LED appears on the 8th LED. To increase the sensitivity and therefore cause the Yellow Mode fuel to turn on sooner, scroll the flashing yellow LED to the left using the (-) button. To decrease the sensitivity and therefore cause the Yellow Mode fuel to turn on later, scroll the flashing yellow LED to the right using the (+) button.

VI. **The sixth mode** (Red-Blue Mode) is an adjustment to determine the time when the full throttle/Red Mode fuel amount turns on. A flashing red LED appears on the LED display while at the same time a flashing blue LED appears on the 8th LED. To increase the sensitivity and therefore cause the Red Mode fuel to turn on sooner, scroll the flashing red LED to the left using the (-) button. To decrease the sensitivity and therefore cause the Red Mode fuel to turn on later, scroll the flashing red LED to the right using the (+) button.



Absolute Top Level™

401 South Grand Ave., Santa Ana, CA 92705
 Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com

Two Brothers Racing

Juice Box™ - Fuel Controller

2006-08 Yamaha Raptor 700 Installation & Operation Manual
 Part # 008-138

Operation Manual - JUICE BOX™ Settings

Pre-set Settings: Raptor 700 with stock airbox, TBR Slip-on exhaust with spark arrestor. (G=3 Y=3.5, R=2, GB=N/A, YB=3, RB=3)
 (Same settings for Raptor 700 with airbox lid off, TBR Slip-on exhaust with NO spark arrestor and P1 Power Tip installed.)

Mode 1 - Green



Mode 2 - Yellow



Mode 3 - Red



Mode 4 - Green/Blue



Mode 5 - Yellow/Blue



Mode 6 - Red/Blue



Additional Tested Setting: Raptor 700 with airbox lid off and TBR Slip-on exhaust with spark arrestor.
 (G=3, Y=4, R=2.5, GB=N/A, YB=3, RB=3)

Mode 1 - Green



Mode 2 - Yellow



Mode 3 - Red



Mode 4 - Green/Blue



Mode 5 - Yellow/Blue



Mode 6 - Red/Blue



For Race Use Only

The Juice Box™ is legal ONLY for closed course race vehicles. The Juice Box™ is not applicable, nor intended for use on EMISSIONS CONTROLLED street, highway or off-road vehicles. The Juice Box™ is not applicable, nor intended for use on aircraft.

For additional settings please visit our website at www.twobros.com.