



401 South Grand Ave., Santa Ana, CA 92705
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



Two Brothers Racing
Juice Box™ - Fuel Controller
2009 Suzuki GSX-R1000 Installation & Operation Manual
Part # 008-242



Parts Included

Qty.	Description	Part Number
1	Juice Box™ Fuel Control Kit	008-242 (#9140105)
3	Zip Ties	
1	Adhesive Velcro Square	
1	Oxygen Sensor Eliminator	008-OX-004

IMPORTANT - PLEASE READ CAREFULLY

We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the vehicle and exhaust system are completely cool before starting the installation. Also, make sure the vehicle is secure during installation. Be sure to save all stock components for possible use later.

The Juice Box™ is legal ONLY for closed course race vehicles. The Juice Box™ is not applicable, nor intended for use on EMISSIONS CONTROLLED street, highway or off-road vehicles. The Juice Box™ is not applicable, nor intended for use on aircraft.

Warranty

Two Brothers Racing warrants that this product carries a warranty for 2 years from date of purchase against original defects in materials and workmanship. Should this product fail to perform for either of the above reasons, Two Brothers Racing will repair or replace it with an equivalent product at no charge, except for postage, to the original retail purchaser.

To obtain the benefits of this warranty, the retail purchaser must return the product and proof of purchase to the place of original purchase.

Installation Instructions

Thank you for purchasing a genuine Two Brothers Racing JUICE BOX™. This product represents a radical step forward in tuning fuel-injected motorcycles and ATVs for optimal performance using "load-based" technology. We at Two Brothers Racing hope that you will find this development as exciting and useful as we do. And remember: Proper Fuel = Maximum Power!

1. Make sure the vehicle is completely cool before starting the installation. Also, make sure the vehicle is secure and will not roll around.

2. Remove bolts (2) that secure right and left side tank fairings. Remove both fairings. (Fig. 1)

Fig 1



3. Remove bolts (2) that secure the front riders seat. (Fig. 2) Remove the seat.

Fig 2



4. Remove bolts (2) that secure the front of the fuel tank to the frame near the steering stem. (Fig. 3) Rotate the tank back and prop up. Alternatively, the tank may be completely removed for better access to the fuel injectors.

Fig 3




5. Slip the Juice Box between the right fork tube and the steering stem and secure the Juice Box to the sub frame below the LCD display using the supplied adhesive backed hook and loop patch. (Fig. 4)

Fig 4




6. Lay the Juice Box harness along the right side of the air box between the right frame and the air box. Connect the ground lead to the negative post of the battery. (Fig. 5)

Fig 5

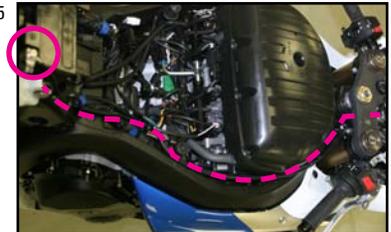


7. Locate the four upper and four lower fuel injectors. Disconnect the upper right injector (cylinder 4) and connect the Juice Box connectors with the SINGLE WHITE wire onto the injector and into the OEM injector connector. (Fig. 6)

Fig 6

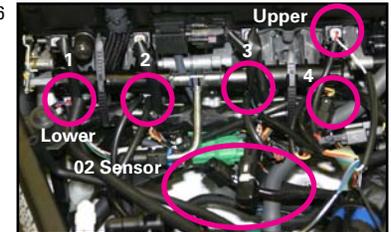

8. Disconnect the lower injectors (4) one at a time and connect the Juice Box connectors to the injectors and into the OEM injector connectors. (Fig. 7)

Fig 7

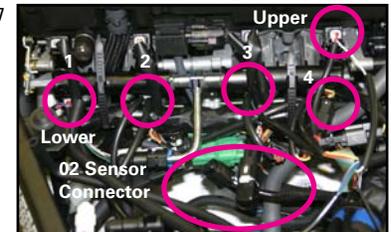

9. Note: Connect the Juice Box connectors with the RED, YELLOW AND WHITE wires to the far right injector (cylinder 4). Connect the GRAY AND GREEN to the right injector (cylinder 3). Connect the BLUE AND RED to the left injector (cylinder 2). Connect the GREEN AND WHITE to the far left injector (cylinder 1).

10. Locate and disconnect the BLACK oxygen (lambda) sensor connector. Connect the supplied Juice Box oxygen sensor eliminator (TBR p/n: 008-OX-004) into the harness. Leave the oxygen sensor connector disconnected. Alternatively, the oxygen sensor may be completely removed from the bike, however an oxygen sensor bung plug (TBR p/n: 005-04-22B) and washer (TBR p/n: 005-04-22W) are required to thread into the OEM or Two Brothers Racing exhaust system where the oxygen sensor was threaded in.



401 South Grand Ave., Santa Ana, CA 92705
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com

Two Brothers Racing

Juice Box™ - Fuel Controller

2009 Suzuki GSX-R1000 Installation & Operation Manual
Part # 008-242

Installation Instructions continued...

11. Start the bike. The green LED should scroll left to right and back for about 3-5 seconds and then go to 1-2 steady or slowly flashing green LED's. If the number 1 or 2 green LED and number 8 red LED's continue flashing after startup with the **ENGINE RUNNING**, an injector wiring error is indicated. Re-check the wires from the JUICE BOX™ and make sure they are connected to the proper wire of your bike's stock harness. **MAKE SURE** you have the correct wires selected in the stock harness. **DO NOT PROCEED UNLESS ABOVE CONDITIONS ARE MET.**
12. NOTE: Re check your wire routing and JUICE BOX™ location and make certain that in no way the wires can come into contact with any moving parts or high heat source and that the JUICE BOX™ is mounted in a way as to not cause a handling problem with the machine.
13. Bike reassembly is opposite of disassembly.



Cleaning

If the unit requires cleaning, use a cloth that is only lightly dampened with water or mild detergent.

Operation Manual

1. It is recommended that the pre-programmed settings of the Juice Box™ be used. However, the Juice Box™ can be adjusted to suit different engine modifications, states of tune and environmental conditions. To begin this process, press the mode button. To enter each successive mode, just press the mode button again. Note that every mode will be identifiable by the color(s) of the flashing LED(s) on the LED display. **There are six modes** that are distinguished by an LED color or color combination. **The 6 modes are as follows, respectively: Green, Yellow, Red, Green-Blue, Yellow-Blue and Red-Blue.**
2. You are now ready to manually program each mode. Consult the base settings supplied with the unit.

To program the Juice Box™, the bike must be running in order to supply power to the Juice Box™.

Simply press the mode button to activate the first mode. If at anytime you stay in an adjustment mode for longer **than 5 seconds** without pressing any buttons, the Juice Box™ will exit the adjustment mode and will return to the operational mode.

To save settings in a particular mode press the MODE button which goes to the next adjustable mode or wait for the Juice Box™ to exit back to the operational mode.

The settings in each mode are adjusted by pressing the (+) and (-) buttons located on the right and left side of the mode button, respectively. For easy reference, the LEDs are numbered 1 through 8. However, the LEDs can be adjusted to the following positions: 0.5, 1, 1.5, 2, 2.5, 3, 3.5, 4, 4.5, 5, 5.5, 6, 6.5, 7, 7.5, 8. For example, in a particular mode, if LED 4 is flashing then the LED display is set to 4 in that mode. If the (+) button is pressed once then LEDs 4 and 5 will flash simultaneously and the LED display is set to 4.5. If the (+) button is pressed once again, only LED 5 will flash and the LED display is set to 5. The LED display can also be set to 0.5 by pressing the (-) button and scrolling the colored LED to position 1 and then pressing the (-) button once more until the LED in position 1 is flashing twice as fast as normal.

I. **The first mode** (Green Mode) represents an additional amount of fuel added under cruise conditions. A flashing green LED should appear on the LED display. To add more fuel, scroll the flashing green LED to the right using the (+) button. To add less fuel, scroll the flashing green LED to the left using the (-) button. If you set the flashing green LED to the 0.5 position on the LED display, **no fuel will be added to the stock fuel curve.**

II. **The second mode** (Yellow Mode) represents an additional amount of fuel added during acceleration. A flashing yellow LED should appear on the LED display. To add more fuel, scroll the flashing yellow LED to the right using the (+) button. To add less fuel, scroll the flashing yellow LED to the left using the (-) button. If you set the flashing yellow LED to the 0.5 position on the LED display, **no fuel will be added to the stock fuel curve.**

III. **The third mode** (Red Mode) represents an additional amount of fuel added during full throttle conditions. A flashing red LED should appear on the LED display. To add more fuel, scroll the flashing red LED to the right using the (+) button. To add less fuel, scroll the flashing red LED to the left using the (-) button. If you set the flashing red LED to the 0.5 position on the LED display, **no fuel will be added to the stock fuel curve.**

Note: If the flashing green, yellow and red LEDs in modes 1 through 3 (Green, Yellow and Red) are set to the 0.5 position on the LED display then the Juice Box™ will not add any fuel to the bike's stock fuel curve. This setting will essentially turn off the Juice Box™ even though it is still attached to the bike's fuel injection system. The bike will run as though the Juice Box™ is not installed. The Juice Box™ LEDs will still operate normally even though no fuel is being added.

IV. **The fourth mode** (Green-Blue Mode) is *Not Required* for this particular model.

V. **The fifth mode** (Yellow-Blue Mode) is an adjustment to determine the time when the acceleration/Yellow Mode fuel amount turns on. A flashing yellow LED appears on the LED display while at the same time a flashing blue LED appears on the 8th LED. To increase the sensitivity and therefore cause the Yellow Mode fuel to turn on sooner, scroll the flashing yellow LED to the left using the (-) button. To decrease the sensitivity and therefore cause the Yellow Mode fuel to turn on later, scroll the flashing yellow LED to the right using the (+) button.

VI. **The sixth mode** (Red-Blue Mode) is an adjustment to determine the time when the full throttle/Red Mode fuel amount turns on. A flashing red LED appears on the LED display while at the same time a flashing blue LED appears on the 8th LED. To increase the sensitivity and therefore cause the Red Mode fuel to turn on sooner, scroll the flashing red LED to the left using the (-) button. To decrease the sensitivity and therefore cause the Red Mode fuel to turn on later, scroll the flashing red LED to the right using the (+) button.



401 South Grand Ave., Santa Ana, CA 92705
 Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com

Two Brothers Racing

Juice Box™ - Fuel Controller

2009 Suzuki GSX-R1000 Installation & Operation Manual
 Part # 008-242



For Race Use Only

The Juice Box™ is legal ONLY for closed course race vehicles. The Juice Box™ is not applicable, nor intended for use on EMISSIONS CONTROLLED street, highway or off-road vehicles. The Juice Box™ is not applicable, nor intended for use on aircraft.

Operation Manual - JUICE BOX™ Settings

('09) GSX-R1000 single Slip-on Settings:

GSX-R1000 baseline settings with stock air filter and TBR slip-on system. (G=5.5, Y=3.5, R=2.5, GB=N/A YB=3.5, RB=4)

Mode 1 - Green



Mode 2 - Yellow



Mode 3 - Red



Mode 4 - Green/Blue



Mode 5 - Yellow/Blue



Mode 6 - Red/Blue



('09) GSX-R1000 Dual Slip-on Settings:

GSX-R1000 baseline settings with stock air filter and TBR dual slip-on system. (G=5.5, Y=1.5, R=1, GB=N/A YB=3.5, RB=4)

Mode 1 - Green



Mode 2 - Yellow



Mode 3 - Red



Mode 4 - Green/Blue



Mode 5 - Yellow/Blue



Mode 6 - Red/Blue



For additional settings please visit our website at www.twobros.com.