

401 South Grand Ave., Santa Ana, CA 92705 Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



1.

will not roll around.

Fia 1

Fig 2

Fig 4

2. Remove seat assembly. (fig. 1)

3. Remove upper tank bolt. (fig. 2)

Juice Box[™] - Fuel Controller

2009 Yamaha R1 Installation & Operation Manual Part # 008-238

Two Brothers Racing



Qty.	Description	Part Num	ber
1	Juice Box [™] Fuel Control Kit	008-238	(#9140106)
3	ZipTies		
1	Adhesive Velcro Square		

IMPORTANT - PLEASE READ CAREFULLY

We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part. please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the vehicle and exhaust system are completely cool before starting the installation. Also, make sure the vehicle is secure during installation. Be sure to save all stock components for possible use later.

The Juice Box™ is legal ONLY for closed course race vehicles. The Juice Box™ is not applicable, nor inteded for use on EMISSIONS CONTROLLED street, highway or off-road vehicles. The Juice Box™ is not applicable, nor inteded for use on aircraft.

Warranty

Two Brothers Racing warrants that this product carries a warranty for 2 years from date of purchase against original defects in materials and workmanship. Should this product fail to perform for either of the above reasons, Two Brothers Racing will repair or replace it with an equivalent product at no charge, except for postage, to the original retail purchaser.

To obtain the benefits of this warranty, the retail purchaser must return the product and proof of purchase to the place of original purchase.

Installation Instructions

6. Prop fuel tank up. (fig. 5)

Fia 5



7. Locate green 4-wire connector and clear 6-wire connector on left side of bike. (fig. 6)



8. Unplug OEM connectors and plug-in the JUICE BOX[™] and back into OEM harness as shown. (fig. 7)



9. Ground to the center case as shown (fig. 8):



10. Locate the black 4-wire connector on right side of bike and unplug the O2 sensor. (fig. 9a,b)

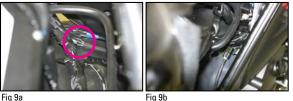 


Fig 9b

Fia 7





Thank you for purchasing a genuine Two Brothers Racing

forward in tuning fuel-injected motorcycles and ATVs for optimal performance using "load-based" technology.

JUICE BOX[™]. This product represents a radical step

We at Two Brothers Racing hope that you will find this

Make sure the vehicle is completely cool before starting

the installation. Also, make sure the vehicle is secure and

development as exciting and useful as we do. And

remember: Proper Fuel = Maximum Power!

5. Remove mid-section fuel tank mounting bolts. (fig. 4)





401 South Grand Ave., Santa Ana, CA 92705 Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com

Two Brothers Racing Juice Box[™] - Fuel Controller 2009 Yamaha R1 Installation & Operation Manual

Part # 008-238

Installation Instructions continued...

- 11. Route JUICE BOX[™] wires and secure with the supplied velcro tabs and zip ties if needed.
- 12. Start the bike. The green LED should scroll left to right and back for about 3-5 seconds and then go to 1-2 steady or slowly flashing green LED's. If the number 1 or 2 green LED and number 8 red LED's continue flashing after startup with the ENGINE RUNNING, an injector wiring error is indicated. Re-check the wires from the JUICE BOX™ and make sure they are connected to the proper wire of your bike's stock harness. MAKE SURE you have the correct wires selected in the stock harness. DO NOT PROCEED UNLESS ABOVE CONDITIONS ARE MET.
- 13. NOTE: Re check your wire routing and JUICE BOX[™] location and make certain that in no way the wires can come into contact with any moving parts or high heat source and that the JUICE BOX™ is mounted in a way as to not cause a handling problem with the machine.



14. Bike reassembly is opposite of disassembly.

It is recommended that the pre-programmed settings of the Juice Box[™] be used. However, the Juice Box[™] can be adjusted to suit different engine modifications, states of tune and environmental conditions. To begin this process, press the mode button. To enter each successive mode, just press the mode button again. Note that every mode will be identifiable by the color(s) of the flashing LED(s) on the LED display. There are six modes that are distinguished by an LED color or color combination. The 6 modes are as follows, respectively: Green, Yellow, Red, Green-Blue, Yellow-Blue and Red-Blue.

2. You are now ready to manually program each mode. Consult the base settings supplied with the unit.

To program the Juice Box[™], the bike must be running in order to supply power to the Juice Box™.

Simply press the mode button to activate the first mode. If at anytime you stay in an adjustment mode for longer than 5 seconds without pressing any buttons, the Juice Box[™] will exit the adjustment mode and will return to the operational mode.

To save settings in a particular mode press the MODE button which goes to the next adjustable mode or wait for the Juice Box[™] to exit back to the operational mode.

The settings in each mode are adjusted by pressing the (+) and (-) buttons located on the right and left side of the mode button, respectively. For easy reference, the LEDs are numbered 1 through 8. However, the LEDs can be adjusted to the following positions: 0.5, 1, 1.5, 2, 2.5, 3, 3.5, 4, 4.5, 5, 5.5, 6, 6.5, 7, 7.5, 8. For example, in a particular mode, if LED 4 is flashing then the LED display is set to 4 in that mode. If the (+) button is pressed once then LEDs 4 and 5 will flash simultaneously and the LED display is set to 4.5. If the (+) button is pressed once again, only LED 5 will flash and the LED display is set to 5. The LED display can also be set to 0.5 by pressing the (-) button and scrolling the colored LED to position 1 and then pressing the (-) button once more until the LED in position 1 is flashing twice as fast as normal.

I. The first mode (Green Mode) represents an additional amount of fuel added under cruise conditions. A flashing green LED should appear on the LED display. To add more fuel, scroll the flashing green LED to the right using the (+) button. To add less fuel, scroll the flashing green LED to the left using the (-) button. If you set the flashing green LED to the 0.5 position on the LED display, no fuel will be added to the stock fuel curve.

II. The second mode (Yellow Mode) represents an additional amount of fuel added during acceleration. A flashing yellow LED should appear on the LED display. To add more fuel, scroll the flashing yellow LED to the right using the (+) button. To add less fuel, scroll the flashing yellow LED to the left using the (-) button. If you set the flashing yellow LED to the 0.5 position on the LED display, no fuel will be added to the stock fuel curve.

Operation Manual

III. The third mode (Red Mode) represents an additional amount of fuel added during full throttle conditions. A flashing red LED should appear on the LED display. To add more fuel, scroll the flashing red LED to the right using the (+) button. To add less fuel, scroll the flashing red LED to the left using the (-) button. If you set the flashing red LED to the 0.5 position on the LED display, no fuel will be added to the stock fuel curve.

Note: If the flashing green, yellow and red LEDs in modes 1 through 3 (Green, Yellow and Red) are set to the 0.5 position on the LED display then the Juice Box[™] will not add anv fuel to the bike's stock fuel curve. This setting will essentially turn off the Juice Box[™] even though it is still attached to the bike's fuel injection system. The bike will run as though the Juice Box[™] is not installed. The Juice Box[™] LEDs will still operate normally even though no fuel is being added.

IV. The fourth mode (Green-Blue Mode) is Not *Required* for this particular model.

V. The fifth mode (Yellow-Blue Mode) is an adjustment to determine the time when the acceleration/Yellow Mode fuel amount turns on. A flashing vellow LED appears on the LED display while at the same time a flashing blue LED appears on the 8th LED. To increase the sensitivity and therefore cause the Yellow Mode fuel to turn on sooner, scroll the flashing yellow LED to the left using the (-) button. To decrease the sensitivity and therefore cause the Yellow Mode fuel to turn on later, scroll the flashing vellow LED to the right using the (+) button.

VI. The sixth mode (Red-Blue Mode) is an adjustment to determine the time when the full throttle/Red Mode fuel amount turns on. A flashing red LED appears on the LED display while at the same time a flashing blue LED appears on the 8th LED. To increase the sensitivity and therefore cause the Red Mode fuel to turn on sooner, scroll the flashing red LED to the left using the (-) button. To decrease the sensitivity and therefore cause the Red Mode fuel to turn on later, scroll the flashing red LED to the right using the (+) button.

If the unit requires cleaning, use a cloth that is only lightly dampened with water or mild detergent.



401 South Grand Ave., Santa Ana, CA 92705 Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com

Two Brothers Racing Juice BoxTM - Fuel Controller 2009 Yamaha R1 Installation & Operation Manual

Part # 008-238





For Race Use Only

The Juice Box™ is legal ONLY for closed course race vehicles. The Juice Box™ is not applicable, nor inteded for use on EMISSIONS CONTROLLED street, highway or off-road vehicles. The Juice Box™ is not applicable, nor inteded for use on aircraft.