

Mfg: Honda Make: XR50R Year: All Product: Takegawa 5 Speed Transmission Kit



Required Special Tools

· · ·
- Takegawa Flywheel Puller (# 010-9-01-03) or equivalent - Takegawa Rotor Holder (# 010-9-01-05) or equivalent - Takegawa Clutch Locknut Wrench (# 010-9-01-021) or equivalent
Disclaimer / Warranty

Disclaimer

Before starting the installation of your new 5 speed transmission and clutch kit please understand that procedure first. If you have any questions do not hesitate to call us at 1-800-211-2767.

The instructions provided are to be used as a guideline for installation based on the assumption that the installer has some mechanical inclination. If you are unsure of your self call us for help or seek a qualified technician. We have provided some photos and installation tips for you to use along with the Japanese instructions and diagrams. Please take your time and use care during installation and call us if you have any questions.

Warranty


Two Brothers Racing products are intended for closed course competition purposes only, and therefore are sold "as is" without warranty. Two Brothers Racing specifically disclaims any warranties of merchantability or fitness for a particular purpose and disclaims all responsibility for consequential and incidental damages or any other losses arising from the use of these products or parts.

Installation Instructions


1. Drain the oil from the engine. Remove the engine from the frame. Remove the cylinder and head.



2. Remove the right side engine cover. Remove the clutch by first removing the arm on the shaft, be careful not to lose the spring or the bearing.

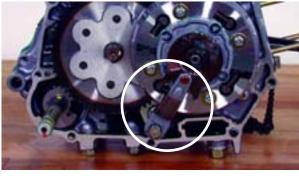


Remove the four phillips head screws and remove the cover.

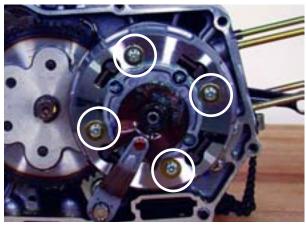

After the cover is removed, you will be able to see the clutch locknut. Peel back the safety tabs and remove the clutch locknut using the Clutch Locknut Tool (# 010-9-01-03) or equivalent. Once this nut is removed slide the stock clutch off.

3. Remove both gears, be sure to remove the bushing from the smaller gear as well.

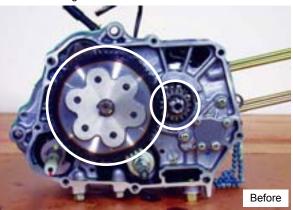




4. Remove the shift detent arm.



XR50R 5 Speed Transmission Instructions.qxd PAGE 1

Remove the star shaped piece by removing the 10mm headed bolt.

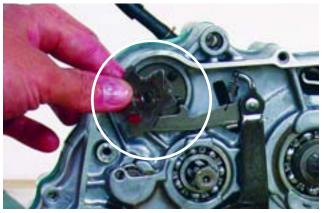

Slide the shaft assembly completely out.





5. Remove the snap ring from the kickstart shaft with snap ring pliers. Remove the kick start spring assembly. Note oriention of this piece, you may wish to practice installation of this piece before proceeding as this will make it easier to do so later on.





 Using an impact wrench remove the flywheel nut. If you do not have an impact wrench you can use the Rotor Holder (# 010-9-01-05). Remove the flywheel using the Takegawa Flywheel Puller (# 010-9-01-03) or equivalent.



7. Remove the left side engine cover. Remove the magnet assembly (left side of.





8. Remove the two phillips head screws from the cam chain inner cover. These screws are pretty tight so you may have to use an impact driver to break them loose. Remove the screws and the cover.




XR50R 5 Speed Transmission Instructions.qxd PAGE 2

- 9. Remove the cam tensioner bolt (17mm bolt), then remove the tensioner arm, guide wheel and cam chain.
- Image: Constraint of the sector of
- 11. Lay the cases down with the drain plug facing up. Separate the cases. Do this slowly and carefully. If you have done everything correctly the cases will come apart very easily.





10. Remove the seven 8mm bolts from around the edge of the engine case. Take note of the different lengths.

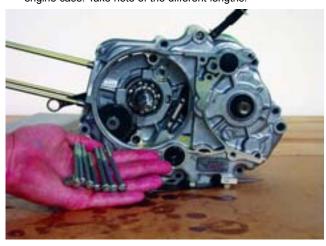



12. Remove the rubber cover.



Remove the 10mm shift drum bolt. Now turn the case around and the entire transmission can be removed.



13. For the Takegawa 5 Speed Transmission to work you will need to cut this tab off of the inside of the case.





XR50R 5 Speed Transmission Instructions.qxd PAGE 3

14. Using a dremel(or similar) tool you will need to clearance the inside of the case slightly for the new kickstarter gear. It is best to install the gear first and look at how much material needs to be removed. Please note that not a lot of material needs to be removed in order to gain adequate clearance.



15. Before reassembly, thoroughly clean the cases and bearings being sure to remove all debris. Relube the bearings with an engine assembly lube (be sure to coat the gears as well) and install the Takegawa 5 Speed Transmission



16. Reinstall the 10mm shfit drum bolt and rubber cover. This will keep the transmission in place.



Remove the shift detent piece.



Install the new kick starter gear and spindle (# 010-3-04-001). Check for smooth operation by spinning the transmission. Reinstall the crankshaft and bolt the engine cases back together.

17. Reinstall the kick start spring assembly and check for proper operation by installing the kick starter and pushing it down as if you were kicking it. Make sure it returns after it is pushed down and that it works properly.




Before installing the shiftshaft assembly you will need to trim it. Cut just beyond the welded area (be sure NOT to cut the weld). Do your cutting BEFORE installing the shiftshaft assembly.



Install the detent arm in the reverse order you disassembled them. Check for proper operation by spinning the shaft by hand, it should spin smoothly.



Now you are ready to install the clutch (# 010-3-01-2632).

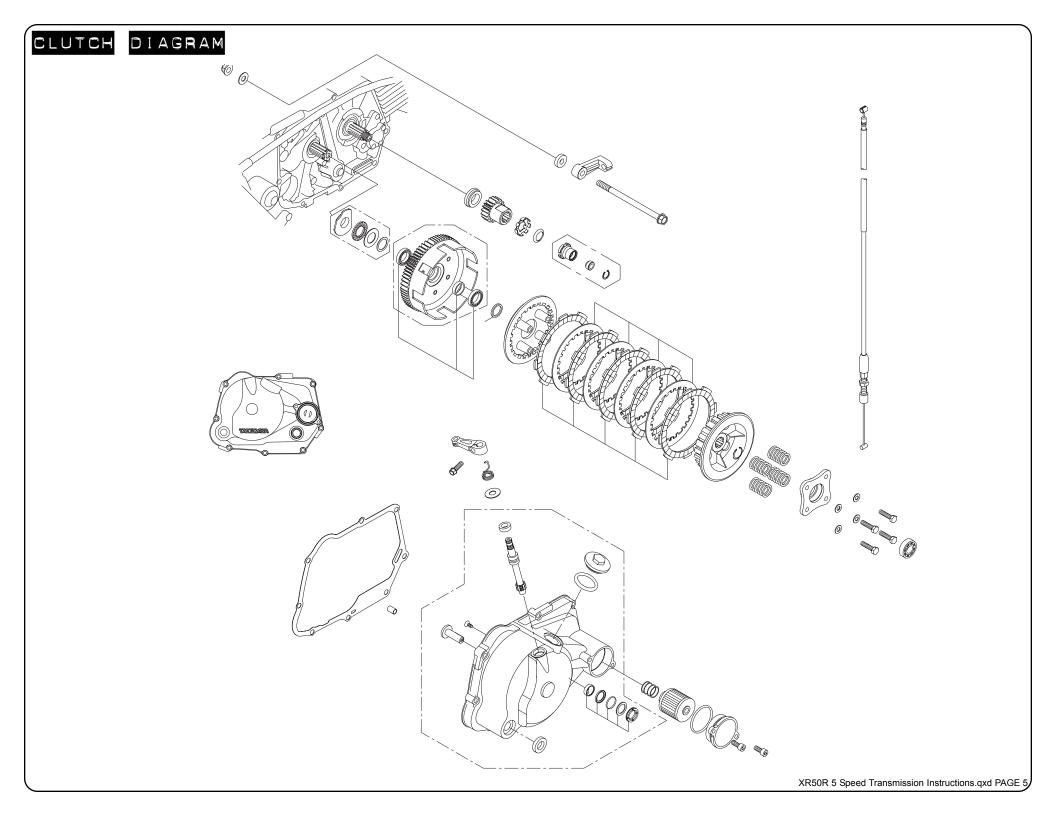

5 SPEED TRANSMISSION DIAGRAM

