## Recommended Settings for Quilter's Creative Touch 4





Copyright June 13, 2017
Jim Bagley, GraceWood, Inc
(Reproduction Prohibited)
Version 1.1

## **Recommended Settings For Quilter's Creative Touch**


For Quilter's Creative Touch to run properly it is important that the program never loses power. When the program loses power it loses track of your last stitch, safe areas, everything that you were working on. It is recommended that if possible to keep your tablet plugged in to a power source.

Here are a few other recommendations to keep your tablet running smoothly and prevent it from interrupting the Quilter's Creative Touch program.


Let's start from your Windows desktop. To get to your right click options simply hold your finger in place for a second or two and lift, this will open a dialogue. Try this on the Windows logo in the lower left hand corner of your screen.




This will open your right click options for the Windows button. Select **Power Options**.

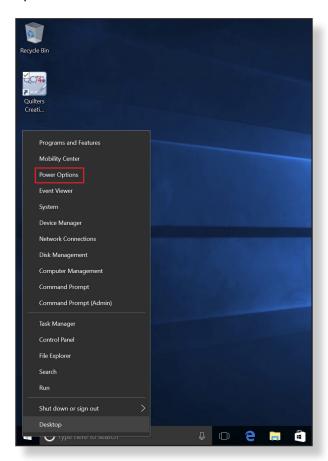


This will open **Power Options**. Click on **Change plan settings**.

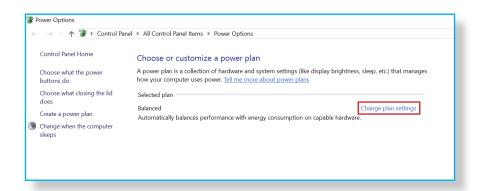

This will open **Edit Plan Settings**. Change **Turn off the display**, under **On battery**, change this to **Never**. Also under **On battery**, change **Put the computer to sleep** to **Never**. Do the same for the options under **Plugged in**.

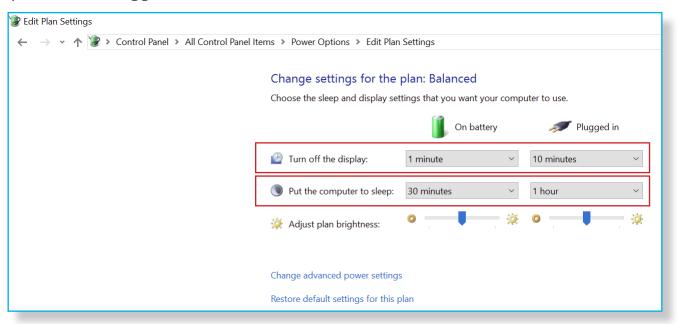


## Now click on **Save Changes**.

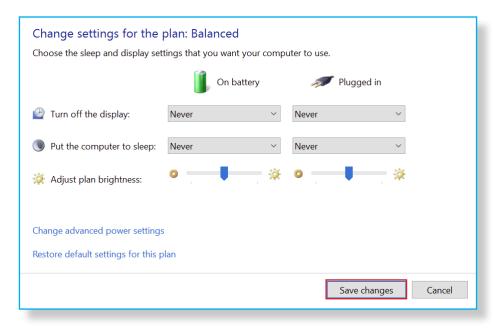


Once you have completed this, click on the  ${\bf X}$  in the upper right hand corner to exit the **Edit Plan Settings**.

Now press and hold in the center of your desktop to open the right click options. Click on **Display settings**.

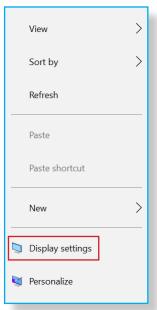

This will open your **Display Settings**. Make sure that the Lock rotation of this display is set to **On**. If you have to change the setting click on **Apply**.

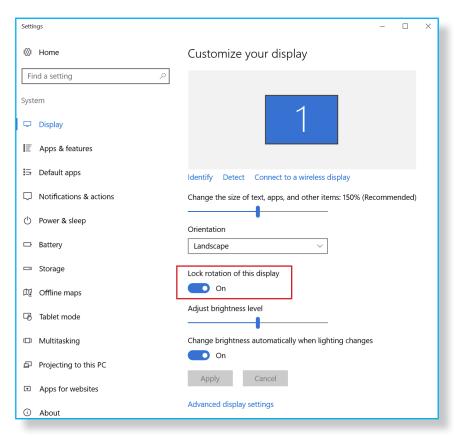

Once you have completed this, click on the  ${\bf X}$  in the upper right hand corner to exit the **Display Settings**.


Next open the **Action Center** by swiping in from the right hand side of your Surface tablet. Make sure that the **Tablet mode** is turned Off (Unhighlighted).




On non-Surface tablets, go to the Action Center icon next to the clock in the lower right hand corner of the taskbar.




Locate your clock at the lower right hand corner of your taskbar, press and hold, then release. Select **Adjust date/time**.

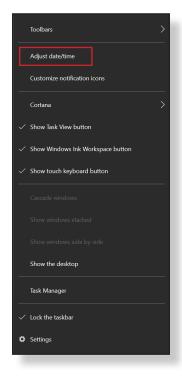


## Click on **Time zone**.

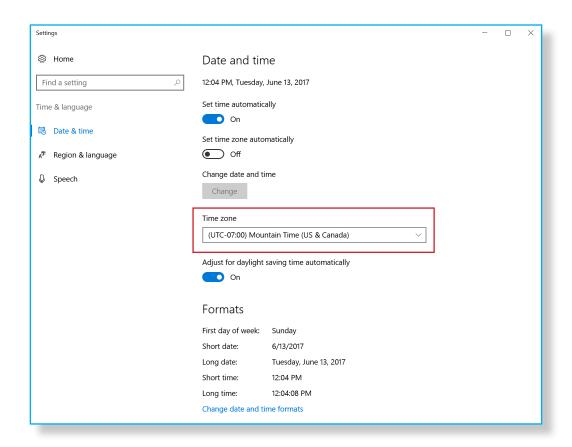

Select the correct Time zone for your locale.

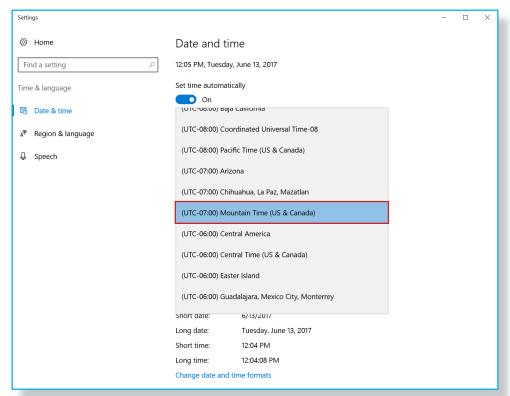

Now make sure that **Set time automatically**, **Set time zone automatically**, and **Adjust for daylight saving time automatically**.

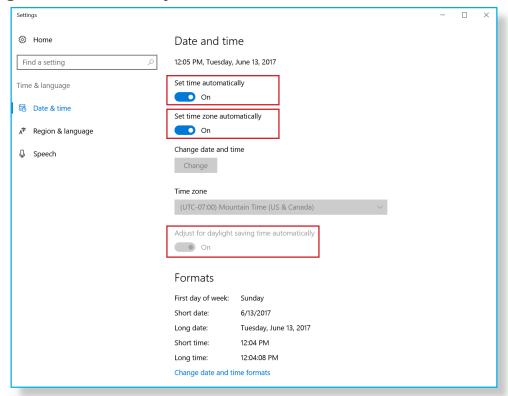

Once this has been completed, click on the **X** in the upper right hand corner to close this window. By doing these simple settings you can insure that the tablet or the operating system will not interrupt the Quilter's Touch program.

Notes:



Copyright June 13, 2017 Jim M. Bagley, GraceWood, Inc (Reproduction Prohibited) Edited - Rich Rounds Version 1.1