



# Quick Click

## CPU Holder


### CONTENT:

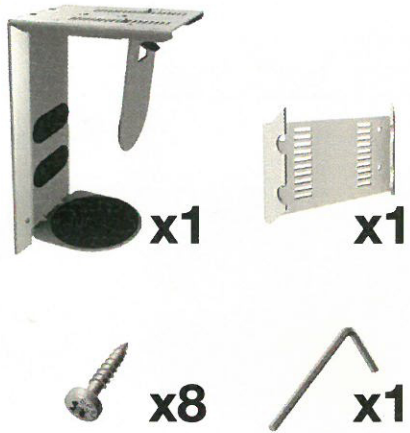


- 1 REMOVE**  
Hold down lever and remove the support piece

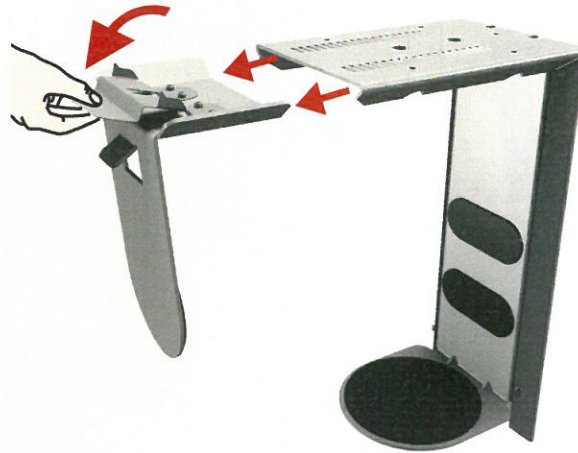


- 2 LOOSEN AND ADJUST**  
Loosen screws with allen key and adjust height

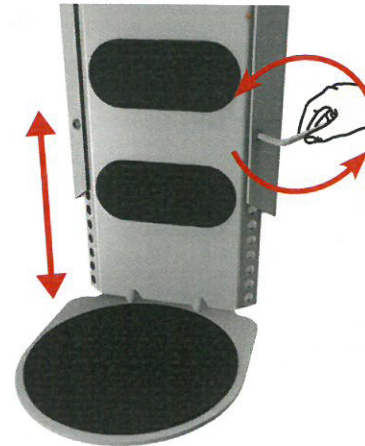


- 3 TIGHTEN**  
Tighten screws with allen key

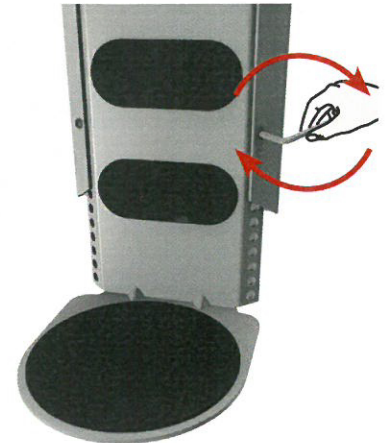


- 4a ATTACH**  
Using four screws, attach the holder to the table

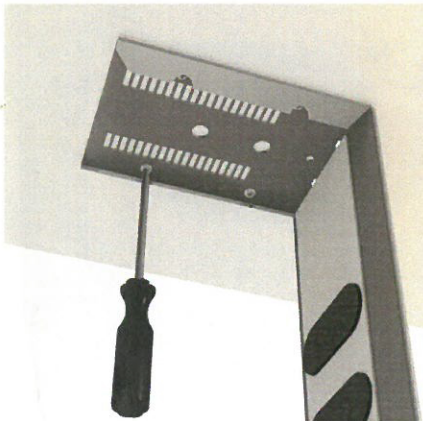

- 4b ATTACH**  
For computers wider than 125 mm, attach the extension piece

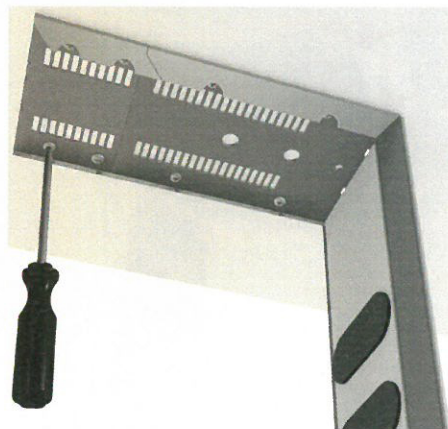

- 5 INSERT**  
Direct the support piece into the track of the CPU holder. Hold down lever and push it in

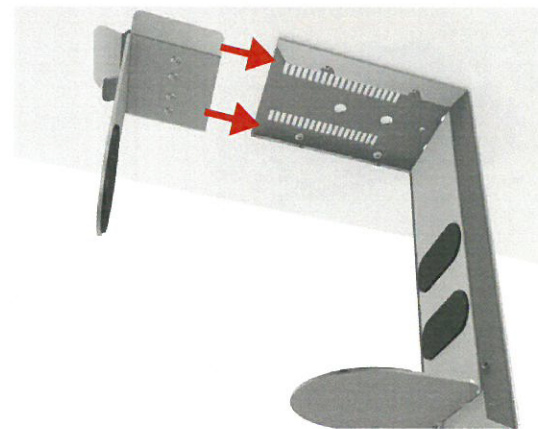

- 6 PLACE**  
Place the computer in its position and secure with supporting piece

