## subONE setup

Set phase to '0' unless using with tower speakers

It may take a few hours of music or movies to find the right setting for your particular room / neighbors :)

Set to **LFE** when using **HT Receivers**. You will set the sub crossover to 150Hz in the RECEIVER setup menu.

**ORB amps** -set to **80** then slowly increase to 150HZ You should not hear any dialogue coming from the sub

HT receivers, ORB amps and wireless kits use LFE input

This wireless jack is no longer used. Current wireless kit plugs into LFE RCA jack above.

Leaving sub set to ON does not harm amplifier

Click RIGHT is ON - Green light

Fuse drawer located below detachable cord

