



YAMAHA®

WX021 Reset Procedure



Put unit into standby, hold 'VOLUME UP' and 'VOLUME DOWN' for 5 seconds.

This puts the unit into 'Options Settings' mode.

Tap and hold 'CONNECT' for 3 seconds, the power indicator will flash twice.