



# YAMAHA®

## MCRN670 Reset Procedure



Hold down 'Power' on the front panel for more than 10 seconds to initialize and reboot the unit.

If the problem persists, unplug the power cable from the wall outlet and plug it back in again after 30 seconds or more.