



# YAMAHA®

## NXN500 Reset Procedure



### Factory reset:

Turn off the unit.

While holding the 'CONNECT' button , press the 'POWER' switch to turn on unit.

### Network reset:

Turn off the unit.

While holding down the 'WIRELESS DIRECT' button, press the 'POWER' switch.