



YAMAHA®

RN1000A Reset Procedure



Use the 'POWER' button to put RN-1000A into standby.

While holding down 'RETURN' on the front panel, press the 'POWER' button.

Rotate 'SELECT' dial to choose the 'INIT' menu.

Press 'SELECT' jog dial to confirm your choice.

Choose 'ALL' to fully initialize all settings.

Use front panel 'POWER' button to complete the reset.