



RX-A2A Reset Procedure



Soft Reset:

Hold down the power button on the front panel for 15 seconds. If the problem persists, unplug the AVR from the wall, plug it again and repeat.

Hard Reset:

Press the 'Menu (Connect)' button on the front panel.
The display will then allow you to navigate the menu with the jog wheel labelled 'Select / Enter' until 'Settings' is shown.
Clicking the jog wheel will bring up 'Function Lock'.
Next, turn the jog wheel until 'Initialization' is shown.
Press the jog wheel and 'All Initialization' will be displayed.
Press the jog wheel again and you will see 'All Initialization' and 'Cancel'. Simply turn the jog wheel so that the word 'Execute' is shown.
Click the jog wheel again to confirm the reset.
Finally turn the jog wheel so that 'Execute' is highlighted, then click the jog wheel for the unit to Initialize.