



# YAMAHA®

## RXV385 Reset Procedure



Put receiver into Standby.

While holding down 'STRAIGHT' on the front panel, press MAIN ZONE 'Power'

Press 'Program' until 'INIT....CANCEL' appears on the receivers display.

Press 'STRAIGHT' until 'INIT....ALL' appears on the display. Then press MAIN ZONE 'Power' to turn the unit off and on again.